SOUND4 x1.CLOUD Library [1.5.5]

Generated by Doxygen 1.9.8

1 SOUND4 x1.CLOUD Library 1
1.1 General usage . . . 1
1.2 Examples . . . 1

2 Deprecated List 3

3 Topic Index 5
3.1 Topics . . . 5

4 Namespace Index 7
4.1 Namespace List . . . 7

5 Hierarchical Index 9
5.1 Class Hierarchy . . . 9

6 Class Index 13
6.1 Class List . . . 13

7 File Index 15
7.1 File List . . . 15

8 Topic Documentation 17
8.1 Sample using C interface . . . 17
8.1.1 Sample to create the processing instance . . . 17
8.1.2 Sample processing loop . . . 18
8.1.3 Sample to stop the processing instance . . . 18
8.2 Environment variables and parameters . . . 19
8.2.1 Parameters defaulting from environment . . . 19
8.2.1.1 Webserver authentification setup : . . . 19
8.2.1.2 Webserver secure : . . . 19
8.2.1.3 Network access : . . . 19
8.2.2 Parameters . . . 19
8.2.3 Preset sharing . . . 20
8.3 Global setup . . . 20
8.3.1 Detailed Description . . . 21
8.3.2 Macro Definition Documentation . . . 21
8.3.2.1 CLOUDX1_AUDIO_INPUT_COUNT . . . 21
8.3.2.2 CLOUDX1_AUDIO_OUTPUT_COUNT . . . 21
8.3.2.3 CLOUDX1_AUDIOFRAME_COUNT . . . 22
8.3.2.4 CLOUDX1_CHANNEL_COUNT . . . 22
8.3.2.5 CLOUDX1_SAMPLE_RATE . . . 22
8.3.3 Typedef Documentation . . . 22
8.3.3.1 cloudx1_loggerfn . . . 22
8.3.4 Enumeration Type Documentation . . . 22
8.3.4.1 cloudx1_LogSeverity . . . 22

8.3.5 Function Documentation . . . 23
8.3.5.1 cloudx1_GetAudioInputCount() . . . 23
8.3.5.2 cloudx1_GetAudioOutputCount() . . . 23
8.3.5.3 cloudx1_GetChannelCount() . . . 24
8.3.5.4 cloudx1_GetChunkSizeInFrames() . . . 24
8.3.5.5 cloudx1_GetPossibleChunkSizeInFrames() . . . 24
8.3.5.6 cloudx1_GetSampleRate() . . . 25
8.3.5.7 cloudx1_GetVersion() . . . 25
8.3.5.8 cloudx1_SetLoggerCallback() . . . 25
8.3.5.9 cloudx1_SetLogSeverity() . . . 25
8.3.5.10 SOUND4_GetProcessInfo() . . . 27
8.4 Process creation/destruction . . . 27
8.4.1 Detailed Description . . . 27
8.4.2 Function Documentation . . . 27
8.4.2.1 cloudx1_ExitProcess() . . . 27
8.4.2.2 cloudx1_FreeParameters() . . . 28
8.4.2.3 cloudx1_FreeParameterValue() . . . 28
8.4.2.4 cloudx1_GetParameter() . . . 28
8.4.2.5 cloudx1_GetProcessChunkFrames() . . . 28
8.4.2.6 cloudx1_InitProcess() . . . 29
8.4.2.7 cloudx1_InitProcess2() . . . 29
8.4.2.8 cloudx1_InitProcess3() . . . 30
8.4.2.9 cloudx1_NewParameters() . . . 31
8.4.2.10 cloudx1_SetParameter() . . . 31
8.4.2.11 cloudx1_TerminateProcess() . . . 31
8.5 Custom preset managagement . . . 32
8.5.1 Detailed Description . . . 33
8.5.2 Typedef Documentation . . . 33
8.5.2.1 cloudx1_storage_exists . . . 33
8.5.2.2 cloudx1_storage_getall . . . 33
8.5.2.3 cloudx1_storage_getall_free . . . 34
8.5.2.4 cloudx1_storage_reader . . . 34
8.5.2.5 cloudx1_storage_reader_free . . . 34
8.5.2.6 cloudx1_storage_remove . . . 35
8.5.2.7 cloudx1_storage_rename . . . 35
8.5.2.8 cloudx1_storage_writer . . . 35
8.5.2.9 fs_char . . . 36
8.5.3 Enumeration Type Documentation . . . 36
8.5.3.1 cloudx1_PresetChange_Kind . . . 36
8.5.4 Function Documentation . . . 36
8.5.4.1 cloudx1_PresetManager_InformChange() . . . 36
8.5.4.2 cloudx1_SetPresetManager() . . . 37

8.6 Metadata Management . . . 37
8.6.1 Detailed Description . . . 38
8.6.2 Function Documentation . . . 38
8.6.2.1 cloudx1_FreeMetadataInfos() . . . 38
8.6.2.2 cloudx1_GetMetadataInfos() . . . 38
8.6.2.3 cloudx1_SetMetadata() . . . 38
8.6.2.4 cloudx1_SetMetadataMulti() . . . 39
8.7 Update Management . . . 39
8.7.1 Detailed Description . . . 39
8.7.2 Function Documentation . . . 40
8.7.2.1 cloudx1_StartUpdateThread() . . . 40
8.7.2.2 cloudx1_StopUpdateThread() . . . 40
8.7.2.3 cloudx1_WaitUpdateThreadReady() . . . 40
8.8 Direct processing . . . 41
8.8.1 Detailed Description . . . 41
8.8.2 Function Documentation . . . 41
8.8.2.1 cloudx1_GetBufferIn() . . . 41
8.8.2.2 cloudx1_GetBufferOut() . . . 41
8.8.2.3 cloudx1_GetEstimatedDelay() . . . 42
8.8.2.4 cloudx1_ProcessAudio() . . . 42
8.8.2.5 cloudx1_ProcessAudio_Planar() . . . 43
8.9 Audio managing (any audio) . . . 43
8.9.1 Detailed Description . . . 44
8.9.2 Enumeration Type Documentation . . . 44
8.9.2.1 cloudx1_SampleFormat . . . 44
8.9.3 Function Documentation . . . 44
8.9.3.1 cloudx1_AddAudio() . . . 44
8.9.3.2 cloudx1_AddPadAudio() . . . 45
8.9.3.3 cloudx1_GetAudio() . . . 45
8.9.3.4 cloudx1_GetBytesFromFormat() . . . 46
8.9.3.5 cloudx1_GetFormatFromName() . . . 46
8.9.3.6 cloudx1_GetFormatName() . . . 46
8.9.3.7 cloudx1_GetMaxPacketFrame() . . . 47
8.9.3.8 cloudx1_GetOutputCount() . . . 47
8.10 Audio convert helpers . . . 47
8.10.1 Detailed Description . . . 48
8.10.2 Function Documentation . . . 48
8.10.2.1 cloudx1_AudioConvertFrom() . . . 48
8.10.2.2 cloudx1_AudioConvertTo() . . . 48
8.10.2.3 cloudx1_AudioMonoFromLiveStereo() . . . 49
8.10.2.4 cloudx1_AudioMonoToLiveStereo() . . . 49
8.10.2.5 cloudx1_MonoToStereo() . . . 49

8.10.2.6 cloudx1_MonoToStereo_Planar() . . . 50
8.10.2.7 cloudx1_StereoToMono() . . . 50
8.10.2.8 cloudx1_StereoToMono_Planar() . . . 50
8.11 Client's JSon config interfacing . . . 51
8.11.1 Detailed Description . . . 51
8.11.2 Function Documentation . . . 51
8.11.2.1 cloudx1_DeleteClient() . . . 51
8.11.2.2 cloudx1_FreeJsonAnswer() . . . 52
8.11.2.3 cloudx1_NewClient() . . . 52
8.11.2.4 cloudx1_ProcessJson() . . . 52
8.11.2.5 cloudx1_SaveState() . . . 53
8.12 JSON syntax . . . 53
8.12.1 Commands . . . 53
8.12.2 Answers . . . 54
8.12.3 Examples . . . 55
8.12.3.1 Get status . . . 55
8.12.3.2 Get all changes since last request . . . 55
8.12.3.3 Check license . . . 55
8.12.3.4 Set Processor name . . . 55
8.12.3.5 Get presetlist . . . 55
8.12.3.6 Load a preset . . . 55
8.12.3.7 Get information on preset on air . . . 55
8.12.3.8 Set input gain . . . 56
8.12.3.9 Set bypass . . . 56
8.12.3.10 Export a preset . . . 56
8.12.3.11 Import a preset . . . 56
8.13 JSON syntax for internal setup . . . 56
8.13.1 Get process and modules information . . . 57
8.13.2 Authentication management . . . 57
8.13.2.1 Difference between setup and admin account . . . 57
8.13.2.2 Access encoding . . . 57
8.13.2.3 Change setup account . . . 57
8.13.2.4 Get user info . . . 58
8.13.2.5 Add or modify a user . . . 58
8.13.2.6 Removes a user . . . 58
8.13.2.7 List users . . . 58
8.13.2.8 Get/set unlogged access . . . 58
8.13.2.9 Get realm . . . 59
8.13.2.10 Get API version . . . 59
8.13.2.11 Get setup is admin . . . 59
8.13.2.12 Get/set setup account . . . 59
8.13.2.13 Get/set custom storage . . . 59

8.13.3 Get process' interface description . . . 59
8.13.3.1 Get XML decription . . . 59
8.13.3.2 Get Process Image . . . 59
8.13.3.3 Get Process Ico . . . 60
8.14 Web server . . . 60
8.14.1 Detailed Description . . . 60
8.14.2 Macro Definition Documentation . . . 60
8.14.2.1 SOUND4_INVALID_WEBSERVER_ID . . . 60
8.14.2.2 SOUND4_WEBSERVER_HTTP_OK . . . 61
8.14.2.3 SOUND4_WEBSERVER_HTTPS_OK . . . 61
8.14.3 Function Documentation . . . 61
8.14.3.1 cloudx1_Webserver() . . . 61
8.14.3.2 cloudx1_Webserver_FreeString() . . . 62
8.14.3.3 cloudx1_Webserver_GetAppHealth() . . . 62
8.14.3.4 cloudx1_Webserver_SetAppHealth() . . . 62
8.14.3.5 cloudx1_Webserver_Status() . . . 63
8.14.3.6 cloudx1_Webserver_Stop() . . . 63
8.14.3.7 cloudx1_Webserver_tcp() . . . 63
8.14.3.8 cloudx1_Webserver_tcp2() . . . 64
8.15 Sample using C++ interface wrapper . . . 65
8.15.1 Setup and sanity checks . . . 65
8.15.2 Sample to create the processing instance . . . 65
8.15.3 Communicating with the instance . . . 65
8.15.4 Starting a web-server . . . 65
8.15.5 Sample processing loop . . . 66
8.16 Sample using C++ interface wrapper with dynamic library loading . . . 66
8.16.1 Dynamic loading . . . 66
8.16.2 Setup and sanity checks . . . 66
8.16.3 Sample to create the processing instance . . . 66
8.16.4 Communicating with the instance . . . 66
8.16.5 Starting a web-server . . . 66
8.16.6 Sample processing loop . . . 67
8.16.7 Custom preset manager . . . 67
8.16.8 Custom preset manager loading . . . 68
8.17 Sample using Generic C++ interface (multi-process compatible) . . . 68
8.17.1 Loading the library . . . 68
8.17.2 Setup and configure . . . 68
8.17.3 Create the processing instance . . . 68
8.17.4 Processing loop . . . 69
8.17.5 Starting a web-server . . . 69
8.17.6 Communicating with the instance . . . 69
8.17.7 Custom preset manager example . . . 69

8.17.8 Custom preset manager loading . . . 70

9 Namespace Documentation **71**

9.1 dyn Namespace Reference . . . 71

9.1.1 Detailed Description . . . 71

9.2 sound4 Namespace Reference . . . 71

9.2.1 Detailed Description . . . 72

9.2.2 Typedef Documentation . . . 72

9.2.2.1 log_cb_t . . . 72

9.2.2.2 LogSeverity . . . 72

9.2.2.3 PresetChange_Kind . . . 72

9.2.3 Variable Documentation . . . 72

9.2.3.1 error . . . 72

9.2.3.2 fatal . . . 73

9.2.3.3 info . . . 73

9.2.3.4 none . . . 73

9.2.3.5 verbose . . . 73

9.2.3.6 verbose2 . . . 73

9.2.3.7 verbose3 . . . 73

9.2.3.8 verbose4 . . . 73

9.2.3.9 verbose5 . . . 73

9.2.3.10 warning . . . 74

9.3 sound4::cloudx1 Namespace Reference . . . 74

9.3.1 Detailed Description . . . 74

9.3.2 Typedef Documentation . . . 74

9.3.2.1 log_cb_t . . . 74

9.3.2.2 LogSeverity . . . 75

9.3.2.3 PresetChange_Kind . . . 75

9.3.2.4 SampleFormat . . . 75

9.3.3 Variable Documentation . . . 75

9.3.3.1 ChunkFrames . . . 75

9.3.3.2 InputChannels . . . 75

9.3.3.3 InputSampleSize . . . 75

9.3.3.4 OutputChannels . . . 76

9.3.3.5 OutputSampleSize . . . 76

9.3.3.6 SampleRate . . . 76

9.4 sound4::cloudx1::dyn Namespace Reference . . . 76

9.4.1 Typedef Documentation . . . 77

9.4.1.1 log_cb_t . . . 77

9.4.1.2 LogSeverity . . . 77

9.4.1.3 PresetChange_Kind . . . 77

9.4.1.4 SampleFormat . . . 77

9.4.2 Variable Documentation . . . 77
9.4.2.1 ChunkFrames . . . 77
9.4.2.2 InputChannels . . . 78
9.4.2.3 InputSampleSize . . . 78
9.4.2.4 OutputChannels . . . 78
9.4.2.5 OutputSampleSize . . . 78
9.4.2.6 SampleRate . . . 78
9.5 sound4::cloudx1::dyn::helper Namespace Reference . . . 78
9.5.1 Detailed Description . . . 79
9.5.2 Typedef Documentation . . . 79
9.5.2.1 DynFunc_t . . . 79
9.5.2.2 DynLib_t . . . 79
9.6 sound4::cloudx1::helper Namespace Reference . . . 79
9.6.1 Detailed Description . . . 79
9.7 sound4::helper Namespace Reference . . . 79
9.7.1 Detailed Description . . . 80
9.7.2 Typedef Documentation . . . 80
9.7.2.1 DynFunc_t . . . 80
9.7.2.2 DynLib_t . . . 80
9.8 std Namespace Reference . . . 80

10 Class Documentation **81**
10.1 sound4::CBus Class Reference . . . 81
10.1.1 Detailed Description . . . 81
10.1.2 Constructor & Destructor Documentation . . . 81
10.1.2.1 CBus() . . . 81
10.1.2.2 ~CBus() . . . 81
10.1.3 Member Function Documentation . . . 82
10.1.3.1 Get() . . . 82
10.2 sound4::CInstance::CClient Class Reference . . . 82
10.2.1 Detailed Description . . . 82
10.2.2 Constructor & Destructor Documentation . . . 82
10.2.2.1 CClient() [1/2] . . . 82
10.2.2.2 CClient() [2/2] . . . 83
10.2.2.3 ~CClient() . . . 83
10.2.3 Member Function Documentation . . . 83
10.2.3.1 operator=() . . . 83
10.2.3.2 ProcessJson() . . . 83
10.3 sound4::cloudx1::CInstance::CClient Class Reference . . . 84
10.3.1 Detailed Description . . . 84
10.3.2 Constructor & Destructor Documentation . . . 84
10.3.2.1 CClient() [1/2] . . . 84

10.3.2.2 CClient() [2/2] . . . 84
10.3.2.3 ~CClient() . . . 84
10.3.3 Member Function Documentation . . . 84
10.3.3.1 operator=() . . . 84
10.3.3.2 ProcessJson() . . . 84
10.4 sound4::cloudx1::dyn::CInstance::CClient Class Reference . . . 85
10.4.1 Detailed Description . . . 85
10.4.2 Constructor & Destructor Documentation . . . 86
10.4.2.1 CClient() [1/2] . . . 86
10.4.2.2 CClient() [2/2] . . . 86
10.4.2.3 ~CClient() . . . 86
10.4.3 Member Function Documentation . . . 86
10.4.3.1 operator=() . . . 86
10.4.3.2 ProcessJson() . . . 86
10.5 sound4::cloudx1::dyn::CDynLib Class Reference . . . 87
10.5.1 Detailed Description . . . 88
10.5.2 Constructor & Destructor Documentation . . . 88
10.5.2.1 CDynLib() . . . 88
10.5.3 Member Function Documentation . . . 89
10.5.3.1 IsOk() . . . 89
10.5.3.2 Load() . . . 89
10.5.4 Member Data Documentation . . . 89
10.5.4.1 AddAudio . . . 89
10.5.4.2 AddPadAudio . . . 89
10.5.4.3 AudioConvertFrom . . . 90
10.5.4.4 AudioConvertTo . . . 90
10.5.4.5 AudioMonoFromLiveStereo . . . 90
10.5.4.6 AudioMonoToLiveStereo . . . 90
10.5.4.7 DeleteClient . . . 90
10.5.4.8 ExitProcess . . . 90
10.5.4.9 FreeJsonAnswer . . . 90
10.5.4.10 FreeMetadataInfos . . . 91
10.5.4.11 FreeParameters . . . 91
10.5.4.12 FreeParameterValue . . . 91
10.5.4.13 GetAudio . . . 91
10.5.4.14 GetAudioInputCount . . . 91
10.5.4.15 GetAudioOutputCount . . . 91
10.5.4.16 GetBufferIn . . . 91
10.5.4.17 GetBufferOut . . . 92
10.5.4.18 GetBytesFromFormat . . . 92
10.5.4.19 GetChannelCount . . . 92
10.5.4.20 GetChunkSizeInFrames . . . 92

10.5.4.21 GetEstimatedDelay . . . 92
10.5.4.22 GetFormatFromName . . . 92
10.5.4.23 GetFormatName . . . 92
10.5.4.24 GetMaxPacketFrame . . . 93
10.5.4.25 GetMetadataInfos . . . 93
10.5.4.26 GetOutputCount . . . 93
10.5.4.27 GetParameter . . . 93
10.5.4.28 GetPossibleChunkSizeInFrames . . . 93
10.5.4.29 GetProcessChunkFrames . . . 93
10.5.4.30 GetSampleRate . . . 93
10.5.4.31 GetVersion . . . 94
10.5.4.32 InitProcess . . . 94
10.5.4.33 InitProcess2 . . . 94
10.5.4.34 InitProcess3 . . . 94
10.5.4.35 MonoToStereo . . . 94
10.5.4.36 MonoToStereo_Planar . . . 94
10.5.4.37 NewClient . . . 94
10.5.4.38 NewParameters . . . 95
10.5.4.39 PresetManager_InformChange . . . 95
10.5.4.40 ProcessAudio . . . 95
10.5.4.41 ProcessAudio_Planar . . . 95
10.5.4.42 ProcessJson . . . 95
10.5.4.43 SaveState . . . 95
10.5.4.44 SetLoggerCallback . . . 95
10.5.4.45 SetLogSeverity . . . 96
10.5.4.46 SetMetadata . . . 96
10.5.4.47 SetMetadataMulti . . . 96
10.5.4.48 SetParameter . . . 96
10.5.4.49 SetPresetManager . . . 96
10.5.4.50 StartUpdateThread . . . 96
10.5.4.51 StereoToMono . . . 96
10.5.4.52 StereoToMono_Planar . . . 97
10.5.4.53 StopUpdateThread . . . 97
10.5.4.54 TerminateProcess . . . 97
10.5.4.55 WaitUpdateThreadReady . . . 97
10.5.4.56 Webserver . . . 97
10.5.4.57 Webserver_FreeString . . . 97
10.5.4.58 Webserver_GetAppHealth . . . 97
10.5.4.59 Webserver_SetAppHealth . . . 98
10.5.4.60 Webserver_Status . . . 98
10.5.4.61 Webserver_Stop . . . 98
10.5.4.62 Webserver_tcp . . . 98

10.5.4.63 Webserver_tcp2 . . . 98
10.6 sound4::cloudx1::dyn::helper::CDynLoader Class Reference . . . 98
10.6.1 Detailed Description . . . 99
10.6.2 Constructor & Destructor Documentation . . . 99
10.6.2.1 CDynLoader() [1/3] . . . 99
10.6.2.2 CDynLoader() [2/3] . . . 99
10.6.2.3 CDynLoader() [3/3] . . . 99
10.6.2.4 ~CDynLoader() . . . 99
10.6.3 Member Function Documentation . . . 100
10.6.3.1 Close() . . . 100
10.6.3.2 GetSymbol() . . . 100
10.6.3.3 GetSymbol_safe() . . . 100
10.6.3.4 GetThisLibraryPath() . . . 100
10.6.3.5 IsOk() . . . 100
10.6.3.6 Load() . . . 100
10.6.3.7 operator bool() . . . 101
10.6.3.8 operator=() . . . 101
10.7 sound4::helper::CDynLoader Class Reference . . . 101
10.7.1 Detailed Description . . . 101
10.7.2 Constructor & Destructor Documentation . . . 102
10.7.2.1 CDynLoader() [1/3] . . . 102
10.7.2.2 CDynLoader() [2/3] . . . 102
10.7.2.3 CDynLoader() [3/3] . . . 102
10.7.2.4 ~CDynLoader() . . . 102
10.7.3 Member Function Documentation . . . 102
10.7.3.1 Close() . . . 102
10.7.3.2 GetSymbol() . . . 102
10.7.3.3 GetSymbol_safe() . . . 102
10.7.3.4 GetThisLibraryPath() . . . 103
10.7.3.5 IsOk() . . . 103
10.7.3.6 Load() . . . 103
10.7.3.7 operator bool() . . . 103
10.7.3.8 operator=() . . . 103
10.8 sound4::CInstance Class Reference . . . 103
10.8.1 Detailed Description . . . 104
10.8.2 Constructor & Destructor Documentation . . . 105
10.8.2.1 CInstance() [1/2] . . . 105
10.8.2.2 CInstance() [2/2] . . . 105
10.8.2.3 ~CInstance() . . . 105
10.8.3 Member Function Documentation . . . 105
10.8.3.1 AddAudio() . . . 105
10.8.3.2 Create() . . . 105

10.8.3.3 GetAudio() . . . 106
10.8.3.4 GetBufferIn() . . . 106
10.8.3.5 GetBufferOut() . . . 106
10.8.3.6 GetChunkFrames() . . . 107
10.8.3.7 GetEstimatedDelay() . . . 107
10.8.3.8 GetMetadataInfos() . . . 107
10.8.3.9 GetParam() . . . 107
10.8.3.10 GetWebServerAppHealth() . . . 108
10.8.3.11 IsOk() . . . 108
10.8.3.12 NewClient() . . . 108
10.8.3.13 OnUpdateThreadStart() . . . 108
10.8.3.14 OnUpdateThreadStop() . . . 108
10.8.3.15 operator=() . . . 108
10.8.3.16 PresetManager_InformChange() . . . 108
10.8.3.17 ProcessAnyAudio() . . . 109
10.8.3.18 ProcessAudio() . . . 109
10.8.3.19 ProcessAudio_Planar() . . . 110
10.8.3.20 SetBus() . . . 110
10.8.3.21 SetMetadata() . . . 110
10.8.3.22 SetMetadataMulti() . . . 111
10.8.3.23 SetParam() . . . 111
10.8.3.24 SetPresetManager() . . . 111
10.8.3.25 SetWebServerAppHealth() . . . 112
10.8.3.26 StartWebServer() . . . 112
10.8.3.27 Stop() . . . 112
10.8.3.28 StopWebServer() . . . 113
10.8.3.29 Terminate() . . . 113
10.9 sound4::cloudx1::CInstance Class Reference . . . 113
10.9.1 Detailed Description . . . 114
10.9.2 Constructor & Destructor Documentation . . . 115
10.9.2.1 CInstance() [1/2] . . . 115
10.9.2.2 CInstance() [2/2] . . . 115
10.9.2.3 ~CInstance() . . . 115
10.9.3 Member Function Documentation . . . 115
10.9.3.1 AddAudio() . . . 115
10.9.3.2 Create() . . . 115
10.9.3.3 GetAudio() . . . 116
10.9.3.4 GetBufferIn() . . . 116
10.9.3.5 GetBufferOut() . . . 116
10.9.3.6 GetChunkFrames() . . . 117
10.9.3.7 GetEstimatedDelay() . . . 117
10.9.3.8 GetMetadataInfos() . . . 117

10.9.3.9 GetParam() . . . 117
10.9.3.10 GetWebServerAppHealth() . . . 118
10.9.3.11 IsOk() . . . 118
10.9.3.12 NewClient() . . . 118
10.9.3.13 OnUpdateThreadStart() . . . 118
10.9.3.14 OnUpdateThreadStop() . . . 118
10.9.3.15 operator=() . . . 118
10.9.3.16 PresetManager_InformChange() . . . 118
10.9.3.17 ProcessAnyAudio() . . . 119
10.9.3.18 ProcessAudio() . . . 119
10.9.3.19 ProcessAudio_Planar() . . . 120
10.9.3.20 SetMetadata() . . . 120
10.9.3.21 SetMetadataMulti() . . . 120
10.9.3.22 SetParam() . . . 121
10.9.3.23 SetPresetManager() . . . 121
10.9.3.24 SetWebServerAppHealth() . . . 121
10.9.3.25 StartWebServer() . . . 122
10.9.3.26 Stop() . . . 122
10.9.3.27 StopWebServer() . . . 122
10.9.3.28 Terminate() . . . 123
10.10 sound4::cloudx1::dyn::CInstance Class Reference . . . 123
10.10.1 Detailed Description . . . 124
10.10.2 Constructor & Destructor Documentation . . . 124
10.10.2.1 CInstance() [1/2] . . . 124
10.10.2.2 CInstance() [2/2] . . . 124
10.10.2.3 ~CInstance() . . . 124
10.10.3 Member Function Documentation . . . 124
10.10.3.1 AddAudio() . . . 124
10.10.3.2 Create() . . . 125
10.10.3.3 GetAudio() . . . 125
10.10.3.4 GetBufferIn() . . . 125
10.10.3.5 GetBufferOut() . . . 126
10.10.3.6 GetChunkFrames() . . . 126
10.10.3.7 GetEstimatedDelay() . . . 126
10.10.3.8 GetMetadataInfos() . . . 126
10.10.3.9 GetParam() . . . 127
10.10.3.10 GetWebServerAppHealth() . . . 127
10.10.3.11 IsOk() . . . 127
10.10.3.12 NewClient() . . . 127
10.10.3.13 OnUpdateThreadStart() . . . 128
10.10.3.14 OnUpdateThreadStop() . . . 128
10.10.3.15 operator=() . . . 128

10.10.3.16 PresetManager_InformChange() . . . 128
10.10.3.17 ProcessAnyAudio() . . . 128
10.10.3.18 ProcessAudio() . . . 129
10.10.3.19 ProcessAudio_Planar() . . . 129
10.10.3.20 SetMetadata() . . . 130
10.10.3.21 SetMetadataMulti() . . . 130
10.10.3.22 SetParam() . . . 130
10.10.3.23 SetPresetManager() . . . 131
10.10.3.24 SetWebServerAppHealth() . . . 131
10.10.3.25 StartWebServer() . . . 131
10.10.3.26 Stop() . . . 132
10.10.3.27 StopWebServer() . . . 132
10.10.3.28 Terminate() . . . 132
10.11 cloudx1_CClientInstance Struct Reference . . . 132
10.11.1 Detailed Description . . . 133
10.12 cloudx1_CInstance Struct Reference . . . 133
10.12.1 Detailed Description . . . 133
10.13 cloudx1_CParameters Struct Reference . . . 133
10.13.1 Detailed Description . . . 133
10.14 sound4::cloudx1::CPresetLoader Class Reference . . . 133
10.14.1 Detailed Description . . . 134
10.14.2 Constructor & Destructor Documentation . . . 134
10.14.2.1 CPresetLoader() . . . 134
10.14.2.2 ∼CPresetLoader() . . . 134
10.14.3 Member Function Documentation . . . 134
10.14.3.1 Exists() . . . 134
10.14.3.2 GetAll() . . . 134
10.14.3.3 IsReadOnly() . . . 134
10.14.3.4 Read() . . . 134
10.14.3.5 Remove() . . . 134
10.14.3.6 Rename() . . . 135
10.14.3.7 Write() . . . 135
10.15 sound4::cloudx1::dyn::CPresetLoader Class Reference . . . 135
10.15.1 Detailed Description . . . 135
10.15.2 Constructor & Destructor Documentation . . . 136
10.15.2.1 CPresetLoader() . . . 136
10.15.2.2 ∼CPresetLoader() . . . 136
10.15.3 Member Function Documentation . . . 136
10.15.3.1 Exists() . . . 136
10.15.3.2 GetAll() . . . 136
10.15.3.3 IsReadOnly() . . . 136
10.15.3.4 Read() . . . 136

10.15.3.5 Remove() . . . 136
10.15.3.6 Rename() . . . 137
10.15.3.7 Write() . . . 137
10.16 sound4::CPresetLoader Class Reference . . . 137
10.16.1 Detailed Description . . . 137
10.16.2 Constructor & Destructor Documentation . . . 138
10.16.2.1 CPresetLoader() . . . 138
10.16.2.2 ∼CPresetLoader() . . . 138
10.16.3 Member Function Documentation . . . 138
10.16.3.1 Exists() . . . 138
10.16.3.2 GetAll() . . . 138
10.16.3.3 IsReadOnly() . . . 138
10.16.3.4 Read() . . . 138
10.16.3.5 Remove() . . . 138
10.16.3.6 Rename() . . . 139
10.16.3.7 Write() . . . 139
10.17 sound4::CProcessor Class Reference . . . 139
10.17.1 Detailed Description . . . 141
10.17.2 Constructor & Destructor Documentation . . . 141
10.17.2.1 CProcessor() . . . 141
10.17.3 Member Function Documentation . . . 141
10.17.3.1 AudioConvertFrom() . . . 141
10.17.3.2 AudioConvertTo() . . . 142
10.17.3.3 AudioMonoFromLiveStereo() . . . 142
10.17.3.4 AudioMonoToLiveStereo() . . . 142
10.17.3.5 GetAudioInputCount() . . . 142
10.17.3.6 GetAudioOutputCount() . . . 142
10.17.3.7 GetBytesFromFormat() . . . 143
10.17.3.8 GetChannelCount() . . . 143
10.17.3.9 GetChunkSizeInFrames() . . . 143
10.17.3.10 GetFormatFromName() . . . 143
10.17.3.11 GetFormatName() . . . 144
10.17.3.12 GetPossibleChunkSizeInFrames() . . . 144
10.17.3.13 GetPrefixSymbol() . . . 145
10.17.3.14 GetSampleRate() . . . 145
10.17.3.15 GetVersion() . . . 145
10.17.3.16 IsOk() . . . 145
10.17.3.17 Load() . . . 145
10.17.3.18 MonoToStereo() . . . 146
10.17.3.19 MonoToStereo_Planar() . . . 146
10.17.3.20 SetLoggerCallback() . . . 146
10.17.3.21 SetLogSeverity() . . . 146

10.17.3.22 StereoToMono() . . . 147
10.17.3.23 StereoToMono_Planar() . . . 147
10.17.4 Friends And Related Symbol Documentation . . . 147
10.17.4.1 CBus . . . 147
10.17.4.2 CInstance . . . 147
10.17.5 Member Data Documentation . . . 147
10.17.5.1 fnAddAudio . . . 147
10.17.5.2 fnAddPadAudio . . . 147
10.17.5.3 fnAudioConvertFrom . . . 148
10.17.5.4 fnAudioConvertTo . . . 148
10.17.5.5 fnAudioMonoFromLiveStereo . . . 148
10.17.5.6 fnAudioMonoToLiveStereo . . . 148
10.17.5.7 fnDeleteClient . . . 148
10.17.5.8 fnExitProcess . . . 148
10.17.5.9 fnFreeBus . . . 148
10.17.5.10 fnFreeJsonAnswer . . . 149
10.17.5.11 fnFreeMetadataInfos . . . 149
10.17.5.12 fnFreeParameters . . . 149
10.17.5.13 fnFreeParameterValue . . . 149
10.17.5.14 fnGetAudio . . . 149
10.17.5.15 fnGetAudioInputCount . . . 149
10.17.5.16 fnGetAudioOutputCount . . . 149
10.17.5.17 fnGetBufferIn . . . 150
10.17.5.18 fnGetBufferOut . . . 150
10.17.5.19 fnGetBytesFromFormat . . . 150
10.17.5.20 fnGetChannelCount . . . 150
10.17.5.21 fnGetChunkSizeInFrames . . . 150
10.17.5.22 fnGetEstimatedDelay . . . 150
10.17.5.23 fnGetFormatFromName . . . 150
10.17.5.24 fnGetFormatName . . . 151
10.17.5.25 fnGetMaxPacketFrame . . . 151
10.17.5.26 fnGetMetadataInfos . . . 151
10.17.5.27 fnGetOutputCount . . . 151
10.17.5.28 fnGetParameter . . . 151
10.17.5.29 fnGetPossibleChunkSizeInFrames . . . 151
10.17.5.30 fnGetProcessChunkFrames . . . 151
10.17.5.31 fnGetSampleRate . . . 152
10.17.5.32 fnGetVersion . . . 152
10.17.5.33 fnInitProcess . . . 152
10.17.5.34 fnInitProcess2 . . . 152
10.17.5.35 fnInitProcess3 . . . 152
10.17.5.36 fnMonoToStereo . . . 152

10.17.5.37 fnMonoToStereo_Planar . . . 152
10.17.5.38 fnNewBus . . . 153
10.17.5.39 fnNewClient . . . 153
10.17.5.40 fnNewParameters . . . 153
10.17.5.41 fnPresetManager_InformChange . . . 153
10.17.5.42 fnProcessAudio . . . 153
10.17.5.43 fnProcessAudio_Planar . . . 153
10.17.5.44 fnProcessJson . . . 153
10.17.5.45 fnSaveState . . . 154
10.17.5.46 fnSetInstanceBus . . . 154
10.17.5.47 fnSetLoggerCallback . . . 154
10.17.5.48 fnSetLogSeverity . . . 154
10.17.5.49 fnSetMetadata . . . 154
10.17.5.50 fnSetMetadataMulti . . . 154
10.17.5.51 fnSetParameter . . . 154
10.17.5.52 fnSetPresetManager . . . 155
10.17.5.53 fnStartUpdateThread . . . 155
10.17.5.54 fnStereoToMono . . . 155
10.17.5.55 fnStereoToMono_Planar . . . 155
10.17.5.56 fnStopUpdateThread . . . 155
10.17.5.57 fnTerminateProcess . . . 155
10.17.5.58 fnWaitUpdateThreadReady . . . 155
10.17.5.59 fnWebserver . . . 156
10.17.5.60 fnWebserver_FreeString . . . 156
10.17.5.61 fnWebserver_GetAppHealth . . . 156
10.17.5.62 fnWebserver_SetAppHealth . . . 156
10.17.5.63 fnWebserver_Status . . . 156
10.17.5.64 fnWebserver_Stop . . . 156
10.17.5.65 fnWebserver_tcp . . . 156
10.17.5.66 fnWebserver_tcp2 . . . 157
10.18 sound4::cloudx1::dyn::helper::DynFuncHolder< T > Class Template Reference . . . 157
10.18.1 Detailed Description . . . 157
10.18.2 Constructor & Destructor Documentation . . . 157
10.18.2.1 DynFuncHolder() [1/2] . . . 157
10.18.2.2 DynFuncHolder() [2/2] . . . 158
10.18.3 Member Function Documentation . . . 158
10.18.3.1 IsOk() . . . 158
10.18.3.2 operator bool() . . . 158
10.18.3.3 operator T*() . . . 158
10.19 sound4::helper::DynFuncHolder< T > Class Template Reference . . . 158
10.19.1 Detailed Description . . . 158
10.19.2 Constructor & Destructor Documentation . . . 159

10.19.2.1 DynFuncHolder() [1/2] . . . 159
10.19.2.2 DynFuncHolder() [2/2] . . . 159
10.19.3 Member Function Documentation . . . 159
10.19.3.1 IsOk() . . . 159
10.19.3.2 operator bool() . . . 159
10.19.3.3 operator T∗() . . . 159
10.20 MyPresetManager Class Reference . . . 160
10.20.1 Detailed Description . . . 160
10.20.2 Constructor & Destructor Documentation . . . 161
10.20.2.1 MyPresetManager() [1/2] . . . 161
10.20.2.2 ∼MyPresetManager() [1/2] . . . 161
10.20.2.3 MyPresetManager() [2/2] . . . 161
10.20.2.4 ∼MyPresetManager() [2/2] . . . 161
10.20.3 Member Function Documentation . . . 161
10.20.3.1 Exists() [1/2] . . . 161
10.20.3.2 Exists() [2/2] . . . 161
10.20.3.3 GetAll() [1/2] . . . 161
10.20.3.4 GetAll() [2/2] . . . 162
10.20.3.5 IsReadOnly() [1/2] . . . 162
10.20.3.6 IsReadOnly() [2/2] . . . 162
10.20.3.7 Read() [1/2] . . . 162
10.20.3.8 Read() [2/2] . . . 162
10.20.3.9 Remove() [1/2] . . . 162
10.20.3.10 Remove() [2/2] . . . 163
10.20.3.11 Rename() [1/2] . . . 163
10.20.3.12 Rename() [2/2] . . . 163
10.20.3.13 SetupPath() [1/2] . . . 163
10.20.3.14 SetupPath() [2/2] . . . 163
10.20.3.15 Write() [1/2] . . . 163
10.20.3.16 Write() [2/2] . . . 164
10.21 sound4::cloudx1::dyn::helper::SampleFormat< T > Struct Template Reference . . . 164
10.21.1 Detailed Description . . . 164
10.22 sound4::cloudx1::helper::SampleFormat< T > Struct Template Reference . . . 164
10.22.1 Detailed Description . . . 165
10.23 sound4::helper::SampleFormat< T > Struct Template Reference . . . 166
10.23.1 Detailed Description . . . 166
10.24 sound4::cloudx1::dyn::helper::SampleFormat< float > Struct Reference . . . 166
10.24.1 Detailed Description . . . 166
10.24.2 Member Data Documentation . . . 167
10.24.2.1 format . . . 167
10.25 sound4::cloudx1::helper::SampleFormat< float > Struct Reference . . . 167
10.25.1 Detailed Description . . . 167

10.25.2 Member Data Documentation . . . 167
10.25.2.1 format . . . 167
10.26 sound4::helper::SampleFormat< float > Struct Reference . . . 167
10.26.1 Detailed Description . . . 168
10.26.2 Member Data Documentation . . . 168
10.26.2.1 format . . . 168
10.27 sound4::cloudx1::dyn::helper::SampleFormat< int16_t > Struct Reference . . . 168
10.27.1 Detailed Description . . . 168
10.27.2 Member Data Documentation . . . 168
10.27.2.1 format . . . 168
10.28 sound4::cloudx1::helper::SampleFormat< int16_t > Struct Reference . . . 169
10.28.1 Detailed Description . . . 169
10.28.2 Member Data Documentation . . . 169
10.28.2.1 format . . . 169
10.29 sound4::helper::SampleFormat< int16_t > Struct Reference . . . 169
10.29.1 Detailed Description . . . 169
10.29.2 Member Data Documentation . . . 169
10.29.2.1 format . . . 169
10.30 sound4::cloudx1::dyn::helper::SampleFormat< int32_t > Struct Reference . . . 170
10.30.1 Detailed Description . . . 170
10.30.2 Member Data Documentation . . . 170
10.30.2.1 format . . . 170
10.31 sound4::cloudx1::helper::SampleFormat< int32_t > Struct Reference . . . 170
10.31.1 Detailed Description . . . 170
10.31.2 Member Data Documentation . . . 171
10.31.2.1 format . . . 171
10.32 sound4::helper::SampleFormat< int32_t > Struct Reference . . . 171
10.32.1 Detailed Description . . . 171
10.32.2 Member Data Documentation . . . 171
10.32.2.1 format . . . 171
10.33 SOUND4_ProcessInfo Struct Reference . . . 171
10.33.1 Detailed Description . . . 172
10.33.2 Member Data Documentation . . . 172
10.33.2.1 name . . . 172
10.33.2.2 prefix . . . 172
10.33.2.3 shortname . . . 172
10.33.2.4 struct_size . . . 172
10.33.2.5 version . . . 173
10.34 sound4cl_SOUND4_ProcessInfo Struct Reference . . . 173
10.34.1 Detailed Description . . . 173
10.34.2 Member Data Documentation . . . 173
10.34.2.1 name . . . 173

10.34.2.2 prefix . . . 173
10.34.2.3 shortname . . . 174
10.34.2.4 struct_size . . . 174
10.34.2.5 version . . . 174

11 File Documentation **175**
11.1 sound4.x1.cloud-pipe-cxx.cpp File Reference . . . 175
11.1.1 Function Documentation . . . 175
11.1.1.1 GetEnv() . . . 175
11.1.1.2 main() . . . 176
11.1.1.3 MyLogger() . . . 176
11.1.1.4 ProcessLoop() . . . 176
11.1.1.5 Usage() . . . 176
11.2 sound4.x1.cloud-pipe-cxx.cpp . . . 177
11.3 sound4.x1.cloud-pipe-dyn.cpp File Reference . . . 179
11.3.1 Function Documentation . . . 179
11.3.1.1 GetEnv() . . . 179
11.3.1.2 main() . . . 180
11.3.1.3 MyLogger() . . . 180
11.3.1.4 ProcessLoop() . . . 180
11.3.1.5 Usage() . . . 180
11.4 sound4.x1.cloud-pipe-dyn.cpp . . . 181
11.5 sound4.x1.cloud-pipe.cpp File Reference . . . 184
11.5.1 Macro Definition Documentation . . . 184
11.5.1.1 CHANNEL_COUNT . . . 184
11.5.1.2 CHUNK_SIZE . . . 185
11.5.1.3 SAMPLE_RATE . . . 185
11.5.2 Function Documentation . . . 185
11.5.2.1 main() . . . 185
11.5.2.2 MyLogger() . . . 185
11.5.2.3 ProcessLoop() . . . 185
11.5.2.4 Usage() . . . 186
11.6 sound4.x1.cloud-pipe.cpp . . . 186
11.7 sound4cl-pipe.cpp File Reference . . . 189
11.7.1 Function Documentation . . . 189
11.7.1.1 GetEnv() . . . 189
11.7.1.2 main() . . . 190
11.7.1.3 ProcessLoop() . . . 190
11.8 sound4cl-pipe.cpp . . . 191
11.9 sound4.x1.cloud.h File Reference . . . 194
11.9.1 Macro Definition Documentation . . . 196
11.9.1.1 CLOUDX1_DECL . . . 196

11.9.1.2 CLOUDX1_HAS_CLOUDBUS . . . 197
11.9.1.3 CLOUDX1_HAS_WEBSERVER . . . 197
11.10 sound4.x1.cloud.h . . . 197
11.11 sound4.x1.cloud.hpp File Reference . . . 201
11.11.1 Macro Definition Documentation . . . 202
11.11.1.1 fs_strdup . . . 202
11.12 sound4.x1.cloud.hpp . . . 203
11.13 sound4.x1.cloud_dyn.hpp File Reference . . . 210
11.13.1 Detailed Description . . . 211
11.13.2 Macro Definition Documentation . . . 212
11.13.2.1 fs_strdup . . . 212
11.13.2.2 UNIXLIKE . . . 212
11.14 sound4.x1.cloud_dyn.hpp . . . 212
11.15 sound4cl.hpp File Reference . . . 225
11.15.1 Detailed Description . . . 227
11.15.2 Macro Definition Documentation . . . 227
11.15.2.1 UNIXLIKE . . . 227
11.16 sound4cl.hpp . . . 227
11.17 sound4cl_cdef.h File Reference . . . 240
11.17.1 Macro Definition Documentation . . . 242
11.17.1.1 fs_strdup . . . 242
11.17.1.2 SOUND4_INVALID_WEBSERVER_ID . . . 243
11.17.1.3 SOUND4_WEBSERVER_HTTP_OK . . . 243
11.17.1.4 SOUND4_WEBSERVER_HTTPS_OK . . . 243
11.17.2 Typedef Documentation . . . 243
11.17.2.1 fs_char . . . 243
11.17.2.2 sound4cl_loggerfn . . . 243
11.17.2.3 sound4cl_storage_exists . . . 243
11.17.2.4 sound4cl_storage_getall . . . 243
11.17.2.5 sound4cl_storage_getall_free . . . 244
11.17.2.6 sound4cl_storage_reader . . . 244
11.17.2.7 sound4cl_storage_reader_free . . . 244
11.17.2.8 sound4cl_storage_remove . . . 244
11.17.2.9 sound4cl_storage_rename . . . 244
11.17.2.10 sound4cl_storage_writer . . . 244
11.17.3 Enumeration Type Documentation . . . 244
11.17.3.1 sound4cl_LogSeverity . . . 244
11.17.3.2 sound4cl_PresetChange_Kind . . . 245
11.17.3.3 sound4cl_SampleFormat . . . 245
11.17.4 Function Documentation . . . 246
11.17.4.1 sound4cl_AddAudio() . . . 246
11.17.4.2 sound4cl_AddPadAudio() . . . 246

11.17.4.3 sound4cl_AudioConvertFrom() . . . 246
11.17.4.4 sound4cl_AudioConvertTo() . . . 246
11.17.4.5 sound4cl_AudioMonoFromLiveStereo() . . . 246
11.17.4.6 sound4cl_AudioMonoToLiveStereo() . . . 246
11.17.4.7 sound4cl_DeleteClient() . . . 247
11.17.4.8 sound4cl_ExitProcess() . . . 247
11.17.4.9 sound4cl_FreeBus() . . . 247
11.17.4.10 sound4cl_FreeJsonAnswer() . . . 247
11.17.4.11 sound4cl_FreeMetadataInfos() . . . 247
11.17.4.12 sound4cl_FreeParameters() . . . 247
11.17.4.13 sound4cl_FreeParameterValue() . . . 247
11.17.4.14 sound4cl_GetAudio() . . . 247
11.17.4.15 sound4cl_GetAudioInputCount() . . . 248
11.17.4.16 sound4cl_GetAudioOutputCount() . . . 248
11.17.4.17 sound4cl_GetBufferIn() . . . 248
11.17.4.18 sound4cl_GetBufferOut() . . . 248
11.17.4.19 sound4cl_GetBytesFromFormat() . . . 248
11.17.4.20 sound4cl_GetChannelCount() . . . 248
11.17.4.21 sound4cl_GetChunkSizeInFrames() . . . 248
11.17.4.22 sound4cl_GetEstimatedDelay() . . . 248
11.17.4.23 sound4cl_GetFormatFromName() . . . 248
11.17.4.24 sound4cl_GetFormatName() . . . 249
11.17.4.25 sound4cl_GetMaxPacketFrame() . . . 249
11.17.4.26 sound4cl_GetMetadataInfos() . . . 249
11.17.4.27 sound4cl_GetOutputCount() . . . 249
11.17.4.28 sound4cl_GetParameter() . . . 249
11.17.4.29 sound4cl_GetPossibleChunkSizeInFrames() . . . 249
11.17.4.30 sound4cl_GetProcessChunkFrames() . . . 249
11.17.4.31 sound4cl_GetSampleRate() . . . 249
11.17.4.32 sound4cl_GetVersion() . . . 249
11.17.4.33 sound4cl_InitProcess() . . . 250
11.17.4.34 sound4cl_InitProcess2() . . . 250
11.17.4.35 sound4cl_InitProcess3() . . . 250
11.17.4.36 sound4cl_MonoToStereo() . . . 250
11.17.4.37 sound4cl_MonoToStereo_Planar() . . . 250
11.17.4.38 sound4cl_NewBus() . . . 250
11.17.4.39 sound4cl_NewClient() . . . 251
11.17.4.40 sound4cl_NewParameters() . . . 251
11.17.4.41 sound4cl_PresetManager_InformChange() . . . 251
11.17.4.42 sound4cl_ProcessAudio() . . . 251
11.17.4.43 sound4cl_ProcessAudio_Planar() . . . 251
11.17.4.44 sound4cl_ProcessJson() . . . 251

11.17.4.45 sound4cl_SaveState() 251
11.17.4.46 sound4cl_SetInstanceBus() 251
11.17.4.47 sound4cl_SetLoggerCallback() 252
11.17.4.48 sound4cl_SetLogSeverity() 252
11.17.4.49 sound4cl_SetMetadata() 252
11.17.4.50 sound4cl_SetMetadataMulti() 252
11.17.4.51 sound4cl_SetParameter() 252
11.17.4.52 sound4cl_SetPresetManager() 252
11.17.4.53 sound4cl_SOUND4_GetProcessInfo() 252
11.17.4.54 sound4cl_StartUpdateThread() 253
11.17.4.55 sound4cl_StereoToMono() 253
11.17.4.56 sound4cl_StereoToMono_Planar() 253
11.17.4.57 sound4cl_StopUpdateThread() 253
11.17.4.58 sound4cl_TerminateProcess() 253
11.17.4.59 sound4cl_WaitUpdateThreadReady() 253
11.17.4.60 sound4cl_Webserver() 253
11.17.4.61 sound4cl_Webserver_FreeString() 254
11.17.4.62 sound4cl_Webserver_GetAppHealth() 254
11.17.4.63 sound4cl_Webserver_SetAppHealth() 254
11.17.4.64 sound4cl_Webserver_Status() 254
11.17.4.65 sound4cl_Webserver_Stop() 254
11.17.4.66 sound4cl_Webserver_tcp() 254
11.17.4.67 sound4cl_Webserver_tcp2() 254
11.18 sound4cl_cdef.h 255

Index **259**

Chapter 1

SOUND4 x1.CLOUD Library

1.1 General usage

You may check library configuration and setup logging Global setup and Environment variables and parameters

You have to create/destroy an instance Process creation/destruction.

For audio, you can either use direct optimized form with Direct processing or you can use Audio managing (any audio) to have any format. You may use Audio convert helpers.

You need to start a thread calling cloudx1_StartUpdateThread see Update Management

You can start a web server for configuration, see Web server

If it is needed, you can use metadata : see Metadata Management

If you need, you may use your own custom preset manager for saving files and presets. See Custom preset managagement

To access the presets/settings, you can either use JSON socket from Update Management or do all manually with Client's JSon config interfacing using JSON syntax

See full example cpp/sound4.x1.cloud-pipe.cpp

You can also use the C++ wrapper from header sound4.x1.cloud.hpp or the one with dynamic library loading sound4.x1.cloud_dyn.hpp.

Note

In all library, all `char*` are **UTF-8** encoded

1.2 Examples

See Sample using C interface

See Sample using Generic C++ interface (multi-process compatible)

See Sample using C++ interface wrapper

See Sample using C++ interface wrapper with dynamic library loading

Chapter 2

Deprecated List

Member cloudx1_GetChunkSizeInFrames ()

Use cloudx1_GetPossibleChunkSizeInFrames

Member cloudx1_InitProcess (const char ∗LoginKey, const char ∗RadioName, const char ∗Access_Key_ID, const char ∗Access_Key_Secret, const char ∗save_path)

Use cloudx1_InitProcess3

Member cloudx1_InitProcess2 (const char ∗LoginKey, const char ∗RadioName, const char ∗Access_Key_ID, const char ∗Access_Key_Secret, const char ∗save_path, const struct cloudx1_CParameters ∗parameters)

Use cloudx1_InitProcess3

Chapter 3

Topic Index

3.1 Topics

Here is a list of all topics with brief descriptions:

Sample using C interface 17
Environment variables and parameters 19
Global setup 20
Process creation/destruction 27
Custom preset managagement 32
Metadata Management 37
Update Management 39
Direct processing 41
Audio managing (any audio) 43
Audio convert helpers 47
Client's JSon config interfacing 51
JSON syntax 53
JSON syntax for internal setup 56
Web server 60
Sample using C++ interface wrapper 65
Sample using C++ interface wrapper with dynamic library loading 66
Sample using Generic C++ interface (multi-process compatible) 68

Chapter 4

Namespace Index

4.1 Namespace List

Here is a list of all namespaces with brief descriptions:

dyn 71
sound4 71
sound4::cloudx1 74
sound4::cloudx1::dyn 76
sound4::cloudx1::dyn::helper 78
sound4::cloudx1::helper 79
sound4::helper 79
std 80

Chapter 5

Hierarchical Index

5.1 Class Hierarchy

This inheritance list is sorted roughly, but not completely, alphabetically:

sound4::CBus . . . 81
sound4::CInstance::CClient . . . 82
sound4::cloudx1::CInstance::CClient . . . 84
sound4::cloudx1::dyn::CInstance::CClient . . . 85
sound4::cloudx1::dyn::CDynLib . . . 87
sound4::cloudx1::dyn::helper::CDynLoader . . . 98
sound4::helper::CDynLoader . . . 101
sound4::CInstance . . . 103
sound4::cloudx1::CInstance . . . 113
sound4::cloudx1::dyn::CInstance . . . 123
cloudx1_CClientInstance . . . 132
cloudx1_CInstance . . . 133
cloudx1_CParameters . . . 133
sound4::cloudx1::CPresetLoader . . . 133
sound4::cloudx1::dyn::CPresetLoader . . . 135
MyPresetManager . . . 160
sound4::CPresetLoader . . . 137
MyPresetManager . . . 160
sound4::CProcessor . . . 139
sound4::cloudx1::dyn::helper::DynFuncHolder< T > . . . 157
sound4::helper::DynFuncHolder< T > . . . 158
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_AddAudio) > . . . 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_AddPadAudio) > . . . 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_AudioConvertFrom) > . . . 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_AudioConvertTo) > . . . 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_AudioMonoFromLiveStereo) > . . . 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_AudioMonoToLiveStereo) > . . . 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_DeleteClient) > . . . 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_ExitProcess) > . . . 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_FreeJsonAnswer) > . . . 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_FreeMetadataInfos) > . . . 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_FreeParameters) > . . . 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_FreeParameterValue) > . . . 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_GetAudio) > . . . 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_GetAudioInputCount) > . . . 157

sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_GetAudioOutputCount) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_GetBufferIn) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_GetBufferOut) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_GetBytesFromFormat) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_GetChannelCount) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_GetChunkSizeInFrames) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_GetEstimatedDelay) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_GetFormatFromName) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_GetFormatName) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_GetMaxPacketFrame) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_GetMetadataInfos) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_GetOutputCount) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_GetParameter) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_GetPossibleChunkSizeInFrames) > . 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_GetProcessChunkFrames) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_GetSampleRate) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_GetVersion) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_InitProcess) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_InitProcess2) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_InitProcess3) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_MonoToStereo) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_MonoToStereo_Planar) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_NewClient) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_NewParameters) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_PresetManager_InformChange) > . . 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_ProcessAudio) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_ProcessAudio_Planar) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_ProcessJson) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_SaveState) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_SetLoggerCallback) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_SetLogSeverity) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_SetMetadata) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_SetMetadataMulti) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_SetParameter) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_SetPresetManager) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_StartUpdateThread) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_StereoToMono) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_StereoToMono_Planar) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_StopUpdateThread) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_TerminateProcess) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_WaitUpdateThreadReady) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_Webserver) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_Webserver_FreeString) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_Webserver_GetAppHealth) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_Webserver_SetAppHealth) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_Webserver_Status) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_Webserver_Stop) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_Webserver_tcp) > 157
sound4::cloudx1::dyn::helper::DynFuncHolder< decltype(cloudx1_Webserver_tcp2) > 157
sound4::helper::DynFuncHolder< decltype(sound4cl_AddAudio) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_AddPadAudio) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_AudioConvertFrom) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_AudioConvertTo) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_AudioMonoFromLiveStereo) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_AudioMonoToLiveStereo) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_DeleteClient) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_ExitProcess) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_FreeBus) > 158

sound4::helper::DynFuncHolder< decltype(sound4cl_FreeJsonAnswer) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_FreeMetadataInfos) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_FreeParameters) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_FreeParameterValue) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_GetAudio) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_GetAudioInputCount) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_GetAudioOutputCount) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_GetBufferIn) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_GetBufferOut) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_GetBytesFromFormat) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_GetChannelCount) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_GetChunkSizeInFrames) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_GetEstimatedDelay) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_GetFormatFromName) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_GetFormatName) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_GetMaxPacketFrame) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_GetMetadataInfos) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_GetOutputCount) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_GetParameter) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_GetPossibleChunkSizeInFrames) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_GetProcessChunkFrames) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_GetSampleRate) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_GetVersion) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_InitProcess) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_InitProcess2) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_InitProcess3) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_MonoToStereo) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_MonoToStereo_Planar) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_NewBus) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_NewClient) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_NewParameters) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_PresetManager_InformChange) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_ProcessAudio) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_ProcessAudio_Planar) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_ProcessJson) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_SaveState) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_SetInstanceBus) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_SetLoggerCallback) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_SetLogSeverity) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_SetMetadata) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_SetMetadataMulti) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_SetParameter) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_SetPresetManager) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_StartUpdateThread) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_StereoToMono) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_StereoToMono_Planar) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_StopUpdateThread) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_TerminateProcess) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_WaitUpdateThreadReady) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_Webserver) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_Webserver_FreeString) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_Webserver_GetAppHealth) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_Webserver_SetAppHealth) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_Webserver_Status) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_Webserver_Stop) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_Webserver_tcp) > 158
sound4::helper::DynFuncHolder< decltype(sound4cl_Webserver_tcp2) > 158
sound4::cloudx1::dyn::helper::SampleFormat< T > 164

sound4::cloudx1::helper::SampleFormat< T > 164
sound4::helper::SampleFormat< T > 166
sound4::cloudx1::dyn::helper::SampleFormat< float > 166
sound4::cloudx1::helper::SampleFormat< float > 167
sound4::helper::SampleFormat< float > 167
sound4::cloudx1::dyn::helper::SampleFormat< int16_t > 168
sound4::cloudx1::helper::SampleFormat< int16_t > 169
sound4::helper::SampleFormat< int16_t > 169
sound4::cloudx1::dyn::helper::SampleFormat< int32_t > 170
sound4::cloudx1::helper::SampleFormat< int32_t > 170
sound4::helper::SampleFormat< int32_t > 171
SOUND4_ProcessInfo 171
sound4cl_SOUND4_ProcessInfo 173

Chapter 6

Class Index

6.1 Class List

Here are the classes, structs, unions and interfaces with brief descriptions:

sound4::CBus
Shared Bus . . . 81
sound4::CInstance::CClient . . . 82
sound4::cloudx1::CInstance::CClient . . . 84
sound4::cloudx1::dyn::CInstance::CClient . . . 85
sound4::cloudx1::dyn::CDynLib
Dynamic library interface . . . 87
sound4::cloudx1::dyn::helper::CDynLoader
Helper to load dynamic library . . . 98
sound4::helper::CDynLoader
Helper to load dynamic library . . . 101
sound4::CInstance
Instance handling class . . . 103
sound4::cloudx1::CInstance . . . 113
sound4::cloudx1::dyn::CInstance . . . 123
cloudx1_CClientInstance . . . 132
cloudx1_CInstance . . . 133
cloudx1_CParameters . . . 133
sound4::cloudx1::CPresetLoader . . . 133
sound4::cloudx1::dyn::CPresetLoader . . . 135
sound4::CPresetLoader
Custom preset handler helper . . . 137
sound4::CProcessor
Dynamic library interface . . . 139
sound4::cloudx1::dyn::helper::DynFuncHolder< T >
Helper to wrap a function pointer . . . 157
sound4::helper::DynFuncHolder< T >
Helper to wrap a function pointer . . . 158
MyPresetManager
[Custom preset manager] . . . 160
sound4::cloudx1::dyn::helper::SampleFormat< T >
Helper for Sample format types . . . 164
sound4::cloudx1::helper::SampleFormat< T >
Helper for Sample format types . . . 164
sound4::helper::SampleFormat< T >
Helper for Sample format types . . . 166

sound4::cloudx1::dyn::helper::SampleFormat< float > 166
sound4::cloudx1::helper::SampleFormat< float > 167
sound4::helper::SampleFormat< float > 167
sound4::cloudx1::dyn::helper::SampleFormat< int16_t > 168
sound4::cloudx1::helper::SampleFormat< int16_t > 169
sound4::helper::SampleFormat< int16_t > 169
sound4::cloudx1::dyn::helper::SampleFormat< int32_t > 170
sound4::cloudx1::helper::SampleFormat< int32_t > 170
sound4::helper::SampleFormat< int32_t > 171
SOUND4_ProcessInfo 171
sound4cl_SOUND4_ProcessInfo 173

Chapter 7

File Index

7.1 File List

Here is a list of all files with brief descriptions:

sound4.x1.cloud-pipe-cxx.cpp
C++ sample using C++ interface wrapper 175
sound4.x1.cloud-pipe-dyn.cpp
C++ sample using C++ interface wrapper with dynamic library loading 179
sound4.x1.cloud-pipe.cpp
C++ sample using only C interface 184
sound4cl-pipe.cpp
C++ sample using C++ interface wrapper with dynamic library loading Works with any SOUND4 processor provided 189
sound4.x1.cloud.h
C interface for library 194
sound4.x1.cloud.hpp
C++ wrapper for library 201
sound4.x1.cloud_dyn.hpp
C++ wrapper for dynamic loading library 210
sound4cl.hpp
C++ wrapper for dynamic loading library 225
sound4cl_cdef.h
C function signature definition for all sound4.cl libraries 240

Chapter 8

Topic Documentation

8.1 Sample using C interface

See full example cpp/sound4.x1.cloud-pipe.cpp

8.1.1 Sample to create the processing instance

see Process creation/destruction and Update Management

```
    // Setup parameters
    struct cloudx1_CParameters *params = cloudx1_NewParameters();
    // Optional: activate web authentication, set admin password
    // This creates the authentication only for a new storage path
    cloudx1_SetParameter(params,"ADMIN_USER", "admin");
    cloudx1_SetParameter(params,"ADMIN_SECRET", "admin");

    // Create the processing instance
    pInstance=cloudx1_InitProcess2(pLoginKey,pRadioName,pKeyId,pAccessKey,store_path.c_str(), params);
    cloudx1_FreeParameters(params);
    if (!pInstance) {
      std::cerr « "Failed to create the process instance"« std::endl;
      return 1;
    }

    // Start the update thread, without JSON server (low priority)
    std::thread updater([pInstance](){
       // will returned when stopped or destroyed
       std::cerr « "cloudx1_StartUpdateThread (no json port)" « std::endl;
       cloudx1_StartUpdateThread(pInstance, 0);
       std::cerr « "cloudx1_StartUpdateThread END" « std::endl;
     });

    // This is not mandatory, but better be sure we are ready right now
    std::cerr « "Waiting update thread" « std::endl;
    if (cloudx1_WaitUpdateThreadReady(pInstance, 5000)<0) {
        std::cerr « "Timeout to create the process instance"« std::endl;
    }
    std::cerr « "Waiting update thread DONE" « std::endl;

#if (CLOUDX1_HAS_WEBSERVER)
    // Starts a web server, listening on port http://localhost:8080, https://localhost:8443
    std::cerr « "Starting web server" « std::endl;
    int listenport= 8080;
    int listenport_secure= 8443;
    uint64_t webserver= SOUND4_INVALID_WEBSERVER_ID;
    if (listenport || listenport_secure) {
        webserver = cloudx1_Webserver(listenport,listenport_secure,pInstance);
        if (webserver==SOUND4_INVALID_WEBSERVER_ID) {
            std::cerr « "Starting web server FAILED" « std::endl;
        } else {
            int web_status=cloudx1_Webserver_Status(webserver);
            if (listenport) {
                if (web_status & SOUND4_WEBSERVER_HTTP_OK) {
                    std::cerr « "Web server listening on port " « listenport;
                } else {
```

```
                    std::cerr « "Web server failed to listen on port " « listenport;
                }
            }
            if (listenport_secure) {
                if (web_status & SOUND4_WEBSERVER_HTTPS_OK) {
                    std::cerr « "Web server listening on secure port " « listenport_secure;
                } else {
                    std::cerr « "Web server failed to listen on secure port " « listenport_secure;
                }
            }
            std::cerr « "Starting web server DONE" « std::endl;
        }
    }
#endif // (CLOUDX1_HAS_WEBSERVER)

     // Force load a factory preset now
     // Could be used instead of setting a store_path
     /*{
         cloudx1_CClientInstance *pClient=cloudx1_NewClient(pInstance);
         const char *answer=cloudx1_ProcessJson(pClient, "{ \"factoryload\": \"All Programs\" }", NULL);
         std::cerr « "Loaded factory preset answer: " « answer« std::endl;
         cloudx1_FreeJsonAnswer(answer);
         cloudx1_DeleteClient(pClient);
     }*/
```

8.1.2 Sample processing loop

see Direct processing

```
bool stopthread=false;
alignas(64) float audio_in[CHUNK_SIZE*CHANNEL_COUNT];
alignas(64) float audio_out[CHUNK_SIZE*CHANNEL_COUNT];

    #if defined(_WIN32) || defined(WIN32)
        // Windows: The stdin, stdout, and stderr streams always open in text mode by default
        _setmode(_fileno(stdin), _O_BINARY);
        _setmode(_fileno(stdout), _O_BINARY);
    #endif

    while (!stopthread)
    {
        // Read a chunk from stdin
        if (std::fread(&audio_in[0], sizeof(float), CHUNK_SIZE*CHANNEL_COUNT, stdin) !=
      CHUNK_SIZE*CHANNEL_COUNT) {
            std::cerr « "ProcessLoop: input stopped"« std::endl;
            stopthread=true;
            break;
        }
        if (stopthread) break;
        // Process it
        cloudx1_ProcessAudio(pInstance, audio_in, audio_out);
        // Write it to stdout
        if (fwrite(&audio_out[0], sizeof(float), CHUNK_SIZE*CHANNEL_COUNT, stdout) !=
      CHUNK_SIZE*CHANNEL_COUNT) {
            std::cerr « "Failed to write audio output" « std::endl;
            stopthread=true;
        }
    }
```

8.1.3 Sample to stop the processing instance

see Process creation/destruction

```
#if (CLOUDX1_HAS_WEBSERVER)
    // Stopping the webserver
    std::cerr « "Stopping web server" « std::endl;
    cloudx1_Webserver_Stop(webserver, 1000);
    std::cerr « "Stopping web server DONE" « std::endl;
#endif // (CLOUDX1_HAS_WEBSERVER)

    // Stopping the processing instance
    std::cerr « "Stopping Update thread" « std::endl;
    cloudx1_StopUpdateThread(pInstance); // this will exit the update thread
    std::cerr « "Stopping Update thread DONE" « std::endl;

    updater.join();

    cloudx1_ExitProcess(pInstance);
```

8.2 Environment variables and parameters

8.2.1 Parameters defaulting from environment

The following environment variables are used by software library:

Note

Those variables can be passed as parameters with cloudx1_InitProcess2

8.2.1.1 Webserver authentification setup :

- `SETUP_USER` see cloudx1_InitProcess
- `SETUP_SECRET` see cloudx1_InitProcess
- `ADMIN_USER` see cloudx1_InitProcess
- `ADMIN_SECRET` see cloudx1_InitProcess

8.2.1.2 Webserver secure :

- `SSL_CERTIFICATE_PATH` : path to the SSL public certificate
- `SSL_PRIVATE_PATH` : path to the SSL private certificate

8.2.1.3 Network access :

- `LICENSE_SERVER` : the SOUND4 license server's URL
- `LICENSE_SERVER_PROXY` : proxy server to use for licenses [user:pass@]host:port
- `LICENSE_CERT_DIR` : optional certificates dirs for HTTPS verification
- `LICENSE_CERT_BUNDLE` : optional certificates bundle for HTTPS verification
- `LICENSE_CERT_CHECK` : if "false", do not check HTTPS certificates

8.2.2 Parameters

The following parameters can be set before creating instance, but are never taken from environment.

Run mode:

- `FILE_MODE=seconds` : force file mode, settings the maximum estimated audio duration (non realtime, wait license ok to process)
- `STATE_FILENAME=filename` : force this instance to store its state in file named `filename.json` (instead of `state.json`)
- `STATE_ONAIR=filename` : force this instance to store its on air preset name in file named `filename.onair` (instead of none). Used for sharing between instances.

- `STORAGE_RO=boolvalue` : force the storage in read-only mode
- `STATE_RO=boolvalue` : force the state in read-only mode (but can save presets/auth)
- `WAIT_LICENSE=boolvalue` : force to wait the license load before starting (always in file mode)
- `FAST_START=boolvalue` : do not to try loading the license before starting (never in file mode)
- `LOG_HEADER=string` : use string as header for logs in instance as much as possible

Web server options:

- `COOKIE_DOMAIN=domain` : Force login cookie's domain
- `COOKIE_PATH=path` : Force login cookie's path
- `COOKIE_SECURE=mode` : Force login cookie's secure mode [true|false]
- `COOKIE_SAMESITE=mode` : Force login cookie's secure mode [default|strict|lax|none]

NOTE: boolvalue are (case insensitive):

- 0,false,no,n : disable
- 1,true,yes,y,(empty),(any) : enable

8.2.3 Preset sharing

You can use the same folder for multiple instances so they share their presets.

In this case, you should use a different `STATE_FILENAME` per instance so they keep their settings and on air presets separated. If not, each time settings or onair preset are changed, the changes will be reflected to the other intances using same `STATE_FILENAME`.

You may use the same `STATE_ONAIR` for multiple instances sharing the folder, so that changing the on air preset on one immediatly changes the on air preset on other instances using the same `STATE_ONAIR`. If the instance has pending unsaved changes in the on air preset, it will not be updated automatically to avoid loosing changes.

8.3 Global setup

Classes

- struct SOUND4_ProcessInfo

Macros

- #define CLOUDX1_AUDIOFRAME_COUNT 64
- #define CLOUDX1_CHANNEL_COUNT 2
- #define CLOUDX1_AUDIO_INPUT_COUNT 1
- #define CLOUDX1_AUDIO_OUTPUT_COUNT 1
- #define CLOUDX1_SAMPLE_RATE 48000

Typedefs

- typedef void(∗ cloudx1_loggerfn) (enum cloudx1_LogSeverity, const char ∗)

Enumerations

- enum cloudx1_LogSeverity {
  none = 0 , fatal = 1 , error = 2 , warning = 3 ,
  info = 4 , verbose = 5 , verbose2 = 6 , verbose3 = 7 ,
  verbose4 = 8 , verbose5 = 9 }

Functions

- const struct SOUND4_ProcessInfo ∗ SOUND4_GetProcessInfo ()
- const char ∗ cloudx1_GetVersion ()
- unsigned int cloudx1_GetChunkSizeInFrames ()
- unsigned int ∗ cloudx1_GetPossibleChunkSizeInFrames ()
- unsigned int cloudx1_GetChannelCount ()
- unsigned int cloudx1_GetAudioInputCount ()
- unsigned int cloudx1_GetAudioOutputCount ()
- unsigned int cloudx1_GetSampleRate ()
- void cloudx1_SetLoggerCallback (cloudx1_loggerfn logger)
- void cloudx1_SetLogSeverity (enum cloudx1_LogSeverity severity)

8.3.1 Detailed Description

Get information on the library. Set logging mode

8.3.2 Macro Definition Documentation

8.3.2.1 CLOUDX1_AUDIO_INPUT_COUNT

```
#define CLOUDX1_AUDIO_INPUT_COUNT 1
```

This version number of inputs for this process.

Remarks

For binary compatibility, this should be runtime checked to be the same as cloudx1_GetAudioInputCount()

Definition at line 184 of file sound4.x1.cloud.h.

8.3.2.2 CLOUDX1_AUDIO_OUTPUT_COUNT

```
#define CLOUDX1_AUDIO_OUTPUT_COUNT 1
```

This version number of outputs for this process.

Remarks

For binary compatibility, this should be runtime checked to be the same as cloudx1_GetAudioOutputCount()

Definition at line 190 of file sound4.x1.cloud.h.

8.3.2.3 CLOUDX1_AUDIOFRAME_COUNT

```
#define CLOUDX1_AUDIOFRAME_COUNT 64
```

This version number of frames in a process chunk.

Remarks

For binary compatibility, this should be runtime checked to be the same as cloudx1_GetChunkSizeInFrames()

Definition at line 172 of file sound4.x1.cloud.h.

8.3.2.4 CLOUDX1_CHANNEL_COUNT

```
#define CLOUDX1_CHANNEL_COUNT 2
```

This version number of channels.

Remarks

For binary compatibility, this should be runtime checked to be the same as cloudx1_GetChannelCount()

Definition at line 178 of file sound4.x1.cloud.h.

8.3.2.5 CLOUDX1_SAMPLE_RATE

```
#define CLOUDX1_SAMPLE_RATE 48000
```

This input/output sample-rate.

Remarks

For binary compatibility, this should be runtime checked to be the same as cloudx1_GetSampleRate()

Definition at line 196 of file sound4.x1.cloud.h.

8.3.3 Typedef Documentation

8.3.3.1 cloudx1_loggerfn

```
typedef void(* cloudx1_loggerfn) (enum cloudx1_LogSeverity, const char *)
```

The logging callback format

Warning

Do not block/wait in the callback, it can be called from any place in code

Note

In all library, all `char*` are **UTF-8** encoded

Definition at line 311 of file sound4.x1.cloud.h.

8.3.4 Enumeration Type Documentation

8.3.4.1 cloudx1_LogSeverity

```
enum cloudx1_LogSeverity
```

The logging levels

Enumerator

none	
fatal	
error	
warning	
info	
verbose	
verbose2	
verbose3	
verbose4	
verbose5	

Definition at line 292 of file sound4.x1.cloud.h.

8.3.5 Function Documentation

8.3.5.1 cloudx1_GetAudioInputCount()

```
unsigned int cloudx1_GetAudioInputCount ( )
```

Get the number of inputs for this process

Remarks

All inputs have cloudx1_GetChannelCount() channels

Fixed to 1, but should be checked for backward compatibility

Returns

The process input count

8.3.5.2 cloudx1_GetAudioOutputCount()

```
unsigned int cloudx1_GetAudioOutputCount ( )
```

Get the number of outputs for this process

Remarks

All outputs have cloudx1_GetChannelCount() channels

Fixed to 1, but should be checked for backward compatibility

Returns

The process outputs count

8.3.5.3 cloudx1_GetChannelCount()

```
unsigned int cloudx1_GetChannelCount ( )
```

Get the number of channels needed by this process

Remarks

Fixed to 2, but should be checked for backward compatibility

Returns

The process channels count

8.3.5.4 cloudx1_GetChunkSizeInFrames()

```
unsigned int cloudx1_GetChunkSizeInFrames ( )
```

Get the number of frames in a process chunk.

The output will be available only by chunks of this size.

Note

A Frame is a set of cloudx1_GetChannelCount samples

Remarks

Fixed to 64, but should be checked for backward compatibility

Returns

The process chunk size in frame

Deprecated Use cloudx1_GetPossibleChunkSizeInFrames

8.3.5.5 cloudx1_GetPossibleChunkSizeInFrames()

```
unsigned int * cloudx1_GetPossibleChunkSizeInFrames ( )
```

Get the possibles number of frames in a process chunk.

The output will be available only by chunks of this size.

Note

A Frame is a set of cloudx1_GetChannelCount samples

Returns

An array of possible process chunk size in frame, ending with 0

8.3.5.6 cloudx1_GetSampleRate()

```
unsigned int cloudx1_GetSampleRate ( )
```

Get the processing sample-rate

Remarks

For now, always return 48000, but should be checked for backward compatibility

Returns

The process sample-rate in Hz

8.3.5.7 cloudx1_GetVersion()

```
const char * cloudx1_GetVersion ( )
```

Get the process version string

Returns

version string

8.3.5.8 cloudx1_SetLoggerCallback()

```
void cloudx1_SetLoggerCallback (
            cloudx1_loggerfn logger )
```

Set a callback for logging

If not set, a default logger prints to stderr.

Warning

Do not block/wait in the callback, it can be called from any place in code

Parameters

logger	A C callback called for logging.

8.3.5.9 cloudx1_SetLogSeverity()

```
void cloudx1_SetLogSeverity (
            enum cloudx1_LogSeverity severity )
```

Change the global log severity

Logs above this level will not be printed.

Parameters

severity	Log severity

8.3.5.10 SOUND4_GetProcessInfo()

```
const struct SOUND4_ProcessInfo * SOUND4_GetProcessInfo ( )
```

Get this processor description

Common to all SOUND4 processors.

Returns

the process description

8.4 Process creation/destruction

Classes

- struct cloudx1_CInstance
- struct cloudx1_CParameters

Functions

- struct cloudx1_CParameters ∗ cloudx1_NewParameters ()
- void cloudx1_FreeParameters (struct cloudx1_CParameters ∗params)
- void cloudx1_SetParameter (struct cloudx1_CParameters ∗params, const char ∗name, const char ∗value)
- const char ∗ cloudx1_GetParameter (struct cloudx1_CParameters ∗params, const char ∗name)
- void cloudx1_FreeParameterValue (const char ∗value)
- struct cloudx1_CInstance ∗ cloudx1_InitProcess (const char ∗LoginKey, const char ∗RadioName, const char ∗Access_Key_ID, const char ∗Access_Key_Secret, const char ∗save_path)
- struct cloudx1_CInstance ∗ cloudx1_InitProcess2 (const char ∗LoginKey, const char ∗RadioName, const char ∗Access_Key_ID, const char ∗Access_Key_Secret, const char ∗save_path, const struct cloudx1_CParameters ∗parameters)
- struct cloudx1_CInstance ∗ cloudx1_InitProcess3 (const char ∗LoginKey, const char ∗RadioName, const char ∗Access_Key_ID, const char ∗Access_Key_Secret, const char ∗save_path, const struct cloudx1_CParameters ∗parameters, unsigned int frames_per_chunk)
- unsigned int cloudx1_GetProcessChunkFrames (struct cloudx1_CInstance ∗instance)
- int cloudx1_TerminateProcess (struct cloudx1_CInstance ∗instance)
- void cloudx1_ExitProcess (struct cloudx1_CInstance ∗instance)

8.4.1 Detailed Description

Create and destroy a process instance, and retrieve some general information about the process.

8.4.2 Function Documentation

8.4.2.1 cloudx1_ExitProcess()

```
void cloudx1_ExitProcess (
            struct cloudx1_CInstance * instance )
```

Quit and destroy the instance

Parameters

instance	the instance to destroy

8.4.2.2 cloudx1_FreeParameters()

```
void cloudx1_FreeParameters (
            struct cloudx1_CParameters * params )
```

Free the parameters created with cloudx1_NewParameters.

8.4.2.3 cloudx1_FreeParameterValue()

```
void cloudx1_FreeParameterValue (
            const char * value )
```

Free a parameter value returned by cloudx1_GetParameter

Parameters

value	the returned value

8.4.2.4 cloudx1_GetParameter()

```
const char * cloudx1_GetParameter (
            struct cloudx1_CParameters * params,
            const char * name )
```

Get current parameter value.

Returned value must be freed with cloudx1_FreeParameterValue

8.4.2.5 cloudx1_GetProcessChunkFrames()

```
unsigned int cloudx1_GetProcessChunkFrames (
            struct cloudx1_CInstance * instance )
```

Get the number of audio frames in each chunk of processing.

The value reflects the frames_per_chunk parameter passed to cloudx1_InitProcess3

Parameters

instance	the instance to destroy

Returns

the number of audio frames in each chunk of processing

Note

A Frame is a set of cloudx1_GetChannelCount samples

8.4.2.6 cloudx1_InitProcess()

```
struct cloudx1_CInstance * cloudx1_InitProcess (
            const char * LoginKey,
            const char * RadioName,
            const char * Access_Key_ID,
            const char * Access_Key_Secret,
            const char * save_path )
```

Create a process instance with default parameters (from env)

Same as cloudx1_InitProcess2, but with default parameters (from env)

Deprecated Use cloudx1_InitProcess3

8.4.2.7 cloudx1_InitProcess2()

```
struct cloudx1_CInstance * cloudx1_InitProcess2 (
            const char * LoginKey,
            const char * RadioName,
            const char * Access_Key_ID,
            const char * Access_Key_Secret,
            const char * save_path,
            const struct cloudx1_CParameters * parameters )
```

Create a process instance with default frames_per_chunk (64)

Same as cloudx1_InitProcess3, but with default frames_per_chunk

Deprecated Use cloudx1_InitProcess3

8.4.2.8 cloudx1_InitProcess3()

```
struct cloudx1_CInstance * cloudx1_InitProcess3 (
            const char * LoginKey,
            const char * RadioName,
            const char * Access_Key_ID,
            const char * Access_Key_Secret,
            const char * save_path,
            const struct cloudx1_CParameters * parameters,
            unsigned int frames_per_chunk )
```

Create a process instance

The output will have to be freed with cloudx1_ExitProcess

Attention

The **save_path** must be an existing folder with R/W access, or be NULL (then it uses volatile memory storage)

If the save_path is NULL or the folder is empty, a default configuration with a default preset will be loaded, unless using Custom preset managagement.

If used in a container, we recommend to put a volume for this path, so it will survive updates.

Web login initialization

If the storage is not yet initialized, you can choose how to protect the web access.
There are 2 modes:

1. Setup mode: you define a setup account, which can then create an administrator account.
   The setup account always keeps the access and can delete the administrator.
2. Admin mode: you define the administrator, which will be the single administrator.

To select the mode, you have to put in the parameters

1. `SETUP_USER` (and optionally `SETUP_SECRET`) to select Setup mode
2. `ADMIN_USER` (and optionally `ADMIN_SECRET`) to select Admin mode
3. none: the web access is opened, no login will be asked

If you do not set the `xxx_SECRET`, then the setuppassword will be randomly generated and print in logs (at info severity).

You can also use the JSON api to change this after the storage is created : see Change setup account

License access

The licenses are retrieved via Internet and access some servers. You may use an alternate server by changing `LICENSE_SERVER` in the parameters.

Parameters

LoginKey	SOUND4 Login key (was User ID)
RadioName	SOUND4 RadioName
Access_Key_ID	SOUND4 AWS access ID
Access_Key_Secret	SOUND4 AWS access Secret
save_path	Path where we can load/save the configuration. If NULL, memory storage will be used.
parameters	Parameters
frames_per_chunk	The number of audio frames in each chunk of processing. Must be in the list returned by cloudx1_GetPossibleChunkSizeInFrames

Returns

A new process instance

8.4.2.9 cloudx1_NewParameters()

```
struct cloudx1_CParameters * cloudx1_NewParameters ( )
```

Create parameters to use with cloudx1_InitProcess2.

The output will have to be freed with cloudx1_FreeParameters

The default values are taken from environment (for compatibility).

8.4.2.10 cloudx1_SetParameter()

```
void cloudx1_SetParameter (
            struct cloudx1_CParameters * params,
            const char * name,
            const char * value )
```

Set a new parameter.

Some values are in taken from env, so see Environment variables and parameters for usable variables

See also Custom preset managagement

8.4.2.11 cloudx1_TerminateProcess()

```
int cloudx1_TerminateProcess (
            struct cloudx1_CInstance * instance )
```

Terminate the processing

This is useful only with file processing, to get the final status. For some plugins, this is mandatory

Parameters

instance	the instance to terminate

Returns

0 is success, <0 if error, >0 if some status

8.5 Custom preset managagement

This allows to provide a customized preset management.

Typedefs

- typedef wchar_t fs_char
- typedef char *(* cloudx1_storage_reader) (const fs_char *filename, void *userdata)
- typedef void(* cloudx1_storage_reader_free) (char *content, void *userdata)
- typedef int(* cloudx1_storage_writer) (const fs_char *filename, const char *content, void *userdata)
- typedef int(* cloudx1_storage_exists) (const fs_char *filename, void *userdata)
- typedef fs_char **(* cloudx1_storage_getall) (void *userdata)
- typedef void(* cloudx1_storage_getall_free) (fs_char **all, void *userdata)
- typedef int(* cloudx1_storage_remove) (const fs_char *filename, void *userdata)
- typedef int(* cloudx1_storage_rename) (const fs_char *from, const fs_char *to, void *userdata)

Enumerations

- enum cloudx1_PresetChange_Kind { change_kind_created = 1 , change_kind_modified , change_kind_deleted }

Functions

- void cloudx1_SetPresetManager (struct cloudx1_CParameters *params, cloudx1_storage_reader reader, cloudx1_storage_reader_free, cloudx1_storage_writer writer, cloudx1_storage_exists exists, cloudx1_storage_getall getall, cloudx1_storage_getall_free getall_free, cloudx1_storage_remove remove, cloudx1_storage_rename rename, int IsReadOnly, void *userdata)
- void cloudx1_PresetManager_InformChange (struct cloudx1_CInstance *instance, const fs_char *relative↩_path, enum cloudx1_PresetChange_Kind change_kind)

8.5.1 Detailed Description

This allows to provide a customized storage for presets and settings.

By default, the library store data on disk or in memory (see `save_path` parameter in cloudx1_InitProcess2), but you may use these functions to store data.

It can be used for remote storage, database storage, ...

Known files:

- Files with name ending with .pst are presets
- `state.json` is the instance state file, holding settings and unsaved preset changes.
- `auth.json` is the storage for web authentication settings.
- *.onair are used for sharing preset on air name between instances (see `STATE_ONAIR` in Parameters).

Attention

state.json name can be overriden per instance with `STATE_FILENAME` in parameters, see Parameters.

File names are in OS native characters (`wchar_t` for Windows, `char` in **UTF-8** for others)

8.5.2 Typedef Documentation

8.5.2.1 cloudx1_storage_exists

```
typedef int(* cloudx1_storage_exists) (const fs_char *filename, void *userdata)
```

Function to call to test if a stored file exists.

Parameters

filename	the name of the file to test.
userdata	the userdata passed to cloudx1_SetPresetManager

Returns

-1 if not exists, 0 if it exists

Definition at line 618 of file sound4.x1.cloud.h.

8.5.2.2 cloudx1_storage_getall

```
typedef fs_char **(* cloudx1_storage_getall) (void *userdata)
```

Function to call to get all stored files' name. Result has to be freed with cloudx1_storage_getall_free callback

Parameters

userdata	the userdata passed to cloudx1_SetPresetManager

Returns

A NULL terminated array of file names

Definition at line 627 of file sound4.x1.cloud.h.

8.5.2.3 cloudx1_storage_getall_free

```
typedef void(* cloudx1_storage_getall_free) (fs_char **all, void *userdata)
```

Function to call to free the result of getall.

Parameters

all	the returned value from cloudx1_storage_getall
userdata	the userdata passed to cloudx1_SetPresetManager

Definition at line 635 of file sound4.x1.cloud.h.

8.5.2.4 cloudx1_storage_reader

```
typedef char *(* cloudx1_storage_reader) (const fs_char *filename, void *userdata)
```

Function to call to read a stored file, returning its content.

Parameters

filename	the name of the file to read.
userdata	the userdata passed to cloudx1_SetPresetManager

Returns

the **UTF-8** content of the file

Definition at line 591 of file sound4.x1.cloud.h.

8.5.2.5 cloudx1_storage_reader_free

```
typedef void(* cloudx1_storage_reader_free) (char *content, void *userdata)
```

Function to call to free the result of cloudx1_storage_reader.

Parameters

content	the returned value from cloudx1_storage_reader
userdata	the userdata passed to cloudx1_SetPresetManager

Definition at line 599 of file sound4.x1.cloud.h.

8.5.2.6 cloudx1_storage_remove

```
typedef int(* cloudx1_storage_remove) (const fs_char *filename, void *userdata)
```

Function to call to remove a stored file.

Parameters

filename	the name of the file to remove.
userdata	the userdata passed to cloudx1_SetPresetManager

Returns

-1 if failed, 0 if OK

Definition at line 644 of file sound4.x1.cloud.h.

8.5.2.7 cloudx1_storage_rename

```
typedef int(* cloudx1_storage_rename) (const fs_char *from, const fs_char *to, void *userdata)
```

Function to call to rename a stored file.

Parameters

from	The source file name (must exist)
to	The destination file name (must not exist)
userdata	the userdata passed to cloudx1_SetPresetManager

Returns

-1 if failed, 0 if OK

Definition at line 654 of file sound4.x1.cloud.h.

8.5.2.8 cloudx1_storage_writer

```
typedef int(* cloudx1_storage_writer) (const fs_char *filename, const char *content, void *userdata)
```

Function to call to write a stored file.

Parameters

filename	the name of the file to write.
content	the **UTF-8** content to write to the file
userdata	the userdata passed to cloudx1_SetPresetManager

Returns

-1 if failed, 0 if OK

Definition at line 609 of file sound4.x1.cloud.h.

8.5.2.9 fs_char

```
typedef wchar_t fs_char
```

Definition at line 579 of file sound4.x1.cloud.h.

8.5.3 Enumeration Type Documentation

8.5.3.1 cloudx1_PresetChange_Kind

```
enum cloudx1_PresetChange_Kind
```

Kind of change on a storage path

Enumerator

change_kind_created	Path has been created.
change_kind_modified	Path has been modified.
change_kind_deleted	Path has been deleted.

Definition at line 687 of file sound4.x1.cloud.h.

8.5.4 Function Documentation

8.5.4.1 cloudx1_PresetManager_InformChange()

```
void cloudx1_PresetManager_InformChange (
            struct cloudx1_CInstance * instance,
            const fs_char * relative_path,
            enum cloudx1_PresetChange_Kind change_kind )
```

Inform that a change happened in the storage. This must be used only in conjonction with cloudx1_SetPresetManager

Parameters

instance	the processing instance
relative_path	The path which changed, relative to the root storage
change_kind	What happened to this path

8.5.4.2 cloudx1_SetPresetManager()

```
void cloudx1_SetPresetManager (
            struct cloudx1_CParameters * params,
            cloudx1_storage_reader reader,
            cloudx1_storage_reader_free ,
            cloudx1_storage_writer writer,
            cloudx1_storage_exists exists,
            cloudx1_storage_getall getall,
            cloudx1_storage_getall_free getall_free,
            cloudx1_storage_remove remove,
            cloudx1_storage_rename rename,
            int IsReadOnly,
            void * userdata )
```

Setup a custom preset manager. This overrides the save_path in cloudx1_InitProcess2

To dynamically update when storage change, see cloudx1_PresetManager_InformChange

Parameters

params	The params to set up
reader	The function to read a file
writer	The function to write a file
exists	The function to test for a file presence
getall	The function to get all files in storage
getall_free	The function to free the result from getall
remove	The function to remove a file from storage
rename	The function to rename a file
IsReadOnly	Set to 1 if storage is read-only
userdata	The userdata parameter for callbacks

8.6 Metadata Management

Functions

- void cloudx1_SetMetadata (struct cloudx1_CInstance ∗instance, const char ∗key, const char ∗value)
- void cloudx1_SetMetadataMulti (struct cloudx1_CInstance ∗instance, const char ∗∗keyvalue)
- const char ∗∗ cloudx1_GetMetadataInfos (struct cloudx1_CInstance ∗instance)
- void cloudx1_FreeMetadataInfos (struct cloudx1_CInstance ∗instance, const char ∗∗infos)

8.6.1 Detailed Description

Metadata handling.

Metadata is used on-need, and might be used by extensions modules (Watermarking, Streaming, ...)

8.6.2 Function Documentation

8.6.2.1 cloudx1_FreeMetadataInfos()

```
void cloudx1_FreeMetadataInfos (
            struct cloudx1_CInstance * instance,
            const char ** infos )
```

Frees the information returned by cloudx1_GetMetadataInfos.

Parameters

instance	the instance
infos	the infos

8.6.2.2 cloudx1_GetMetadataInfos()

```
const char ** cloudx1_GetMetadataInfos (
            struct cloudx1_CInstance * instance )
```

Get information on known metadata keys.

Parameters

instance	the instance

Returns

a list of key,descriptions, null terminated, of known metadata keys used in process and extensions. May be null. Should be freed with cloudx1_FreeMetadataInfos

8.6.2.3 cloudx1_SetMetadata()

```
void cloudx1_SetMetadata (
            struct cloudx1_CInstance * instance,
            const char * key,
            const char * value )
```

Adds the specific metadata to the process.

It can come from any thread, and will be used as soon as possible.

Setting a null value erase the metadata, which is different from setting an empty string. Initial metadata might be set as soon as instance is created (and before update thread).

See also

cloudx1_SetMetadataMulti

Parameters

instance	the instance
key	the metadata key. If key contains a dot (like wm.KEY), it will be sent only to the matching plugin (ie wm here) without the prefix (ie KEY here). Use empty prefix for routing to main only.
value	the metadata value or nullptr to erase it.

8.6.2.4 cloudx1_SetMetadataMulti()

```
void cloudx1_SetMetadataMulti (
            struct cloudx1_CInstance * instance,
            const char ** keyvalue )
```

Adds multiple metadata to the process.

This works like cloudx1_SetMetadata but with multiple metadata at once.

See also

cloudx1_SetMetadata

Parameters

instance	the instance
keyvalue	a list of key/value pair, ending with null key.

8.7 Update Management

Functions

- void cloudx1_StartUpdateThread (struct cloudx1_CInstance ∗instance, unsigned int port)
- void cloudx1_StopUpdateThread (struct cloudx1_CInstance ∗instance)
- int cloudx1_WaitUpdateThreadReady (struct cloudx1_CInstance ∗instance, int milliseconds)

8.7.1 Detailed Description

Manage the process update.

8.7.2 Function Documentation

8.7.2.1 cloudx1_StartUpdateThread()

```
void cloudx1_StartUpdateThread (
            struct cloudx1_CInstance * instance,
            unsigned int port )
```

Update function

This needs to run in a thread, which can have low priority. It will also allow the JSON access via TCP.

Remarks

This function does not return until it is stopped with cloudx1_StopUpdateThread

Parameters

instance	the instance
port	the port to listen for incoming JSON connections. If 0, the JSON server is not accessible

8.7.2.2 cloudx1_StopUpdateThread()

```
void cloudx1_StopUpdateThread (
            struct cloudx1_CInstance * instance )
```

Stop the update thread

Parameters

instance	the processing instance

8.7.2.3 cloudx1_WaitUpdateThreadReady()

```
int cloudx1_WaitUpdateThreadReady (
            struct cloudx1_CInstance * instance,
            int milliseconds )
```

Wait for the update thread to be ready

Parameters

instance	the processing instance
milliseconds	maximum time to wait in milliseconds

Returns

-1 if timeout waiting for the thread, 0 if OK

8.8 Direct processing

Functions

- void cloudx1_ProcessAudio (struct cloudx1_CInstance ∗instance, const float ∗input, float ∗output)
- void cloudx1_ProcessAudio_Planar (struct cloudx1_CInstance ∗instance, float const ∗const ∗input, float ∗const ∗output)
- float ∗ cloudx1_GetBufferIn (struct cloudx1_CInstance ∗instance)
- float ∗ cloudx1_GetBufferOut (struct cloudx1_CInstance ∗instance)
- unsigned int cloudx1_GetEstimatedDelay (struct cloudx1_CInstance ∗instance)

8.8.1 Detailed Description

Optimized processing with direct in->out.

8.8.2 Function Documentation

8.8.2.1 cloudx1_GetBufferIn()

```
float * cloudx1_GetBufferIn (
            struct cloudx1_CInstance * instance )
```

Get preallocated aligned buffer for audio input for cloudx1_ProcessAudio()

The buffer is a float[256 ∗ cloudx1_GetAudioInputCount() ∗ cloudx1_GetChannelCount()]

So for this process/version : float[256∗1∗2]

Note

The calling process can allocate the buffer itself, but it must be aligned.

Parameters

instance	the processing instance

Returns

An audio input dedicated buffer.

8.8.2.2 cloudx1_GetBufferOut()

```
float * cloudx1_GetBufferOut (
            struct cloudx1_CInstance * instance )
```

Get preallocated aligned buffer for audio output for cloudx1_ProcessAudio()

The buffer is a float[256 ∗ cloudx1_GetAudioOutputCount() ∗ cloudx1_GetChannelCount()]

So for this process/version : float[256∗1∗2]

Note

The calling process can allocate the buffer itself, but it must be aligned.

Parameters

instance	the processing instance

Returns

An audio output dedicated buffer.

8.8.2.3 cloudx1_GetEstimatedDelay()

```
unsigned int cloudx1_GetEstimatedDelay (
            struct cloudx1_CInstance * instance )
```

Get the delay (estimated) of current processing algorithm

Remarks

This is not very accurate, it does not take into account group delays.

Returns

Estimated delay in frames

8.8.2.4 cloudx1_ProcessAudio()

```
void cloudx1_ProcessAudio (
            struct cloudx1_CInstance * instance,
            const float * input,
            float * output )
```

Process an audio chunk

A chunk contains cloudx1_GetProcessChunkFrames frames, set at init by frames_per_chunk in cloudx1_InitProcess3

Input has cloudx1_GetAudioInputCount() ∗ cloudx1_GetChannelCount() channels

Ouput has cloudx1_GetAudioOutputCount() ∗ cloudx1_GetChannelCount() channels

Each sample is a native 32-bit floating-point number where 1.0 is full scale. Channels are interlaced, so the buffers are [L0,R0,L1,R1,...,Ln,Rn] (L=Left, R=Right)

In case of multiple audio input/output, buffer is [aL0,aR0,bL0,bR0,...,aLn,aRn,bLn,bRn]

Warning

Buffers must be 64-byte aligned

Note

With 64 frames per chunk and 2 channels and 1 audio input, input buffer size is 64∗1∗2∗4=512 bytes

Parameters

instance	the processing instance
input	audio input buffer (64 byte aligned) or NULL to use internal buffer cloudx1_GetBufferIn
output	audio output buffer (64 byte aligned) or NULL to use internal buffer cloudx1_GetBufferOut

8.8.2.5 cloudx1_ProcessAudio_Planar()

```
void cloudx1_ProcessAudio_Planar (
            struct cloudx1_CInstance * instance,
            float const *const * input,
            float *const * output )
```

Process an audio chunk of planar audio

A chunk contains cloudx1_GetProcessChunkFrames frames, set at init by frames_per_chunk in cloudx1_InitProcess3

Input has cloudx1_GetAudioInputCount() ∗ cloudx1_GetChannelCount() channels

Ouput has cloudx1_GetAudioOutputCount() ∗ cloudx1_GetChannelCount() channels

Each sample is a native 32-bit floating-point number where 1.0 is full scale. Channels are NOT interlaced, so the buffers are arrays of planar audio : [[L0,L1,...,Ln] , [R0,R1,...,Rn]] (L=Left, R=Right)

In case of multiple audio input/output, buffer are [[aL...], [aR...], [bL...], [bR...], ...]

Parameters

instance	the processing instance
input	array of audio input buffers for each input channel (no alignment required)
output	array of audio output buffers for each input channel (no alignment required)

8.9 Audio managing (any audio)

Enumerations

- enum cloudx1_SampleFormat {
  INVALID_FORMAT =0 , S16_LE , S16_BE , S24_LE ,
  S24_BE , S32_LE , S32_BE , F32_LE ,
  F32_BE , S16_NATIVE =S16_LE , S24_NATIVE =S24_LE , S32_NATIVE =S32_LE ,
  F32_NATIVE =F32_LE }

Functions

- const char ∗ cloudx1_GetFormatName (const enum cloudx1_SampleFormat fmt)
- enum cloudx1_SampleFormat cloudx1_GetFormatFromName (const char ∗name)
- unsigned int cloudx1_GetBytesFromFormat (const enum cloudx1_SampleFormat fmt)
- unsigned int cloudx1_GetMaxPacketFrame (struct cloudx1_CInstance ∗instance)

- unsigned int cloudx1_AddAudio (struct cloudx1_CInstance *instance, const uint8_t *payload, unsigned int nFrame, enum cloudx1_SampleFormat fmt)
- unsigned int cloudx1_AddPadAudio (struct cloudx1_CInstance *instance)
- unsigned int cloudx1_GetOutputCount (struct cloudx1_CInstance *instance)
- unsigned int cloudx1_GetAudio (struct cloudx1_CInstance *instance, uint8_t *payload, unsigned int max_↩ nFrame, enum cloudx1_SampleFormat fmt)

8.9.1 Detailed Description

This allows various payload size and formats, at the expense of internal conversions. This can be useful when receiving audio from network.

Remarks

It is more optimized to use Direct processing.

8.9.2 Enumeration Type Documentation

8.9.2.1 cloudx1_SampleFormat

```
enum cloudx1_SampleFormat
```

Supported formats for audio I/O

Enumerator

INVALID_FORMAT	Invalid.
S16_LE	16-bit signed integer, little-endian
S16_BE	16-bit signed integer, big-endian
S24_LE	24-bit signed integer, little-endian
S24_BE	24-bit signed integer, big-endian
S32_LE	32-bit signed integer, little-endian
S32_BE	32-bit signed integer, big-endian
F32_LE	32-bit floating-point, little-endian
F32_BE	32-bit floating-point, big-endian
S16_NATIVE	16-bit signed integer, native
S24_NATIVE	24-bit signed integer, native
S32_NATIVE	32-bit signed integer, native
F32_NATIVE	32-bit floating-point, native

Definition at line 910 of file sound4.x1.cloud.h.

8.9.3 Function Documentation

8.9.3.1 cloudx1_AddAudio()

```
unsigned int cloudx1_AddAudio (
            struct cloudx1_CInstance * instance,
```

```
            const uint8_t * payload,
            unsigned int nFrame,
            enum cloudx1_SampleFormat fmt )
```

Convert and process the payload.

Parameters

instance	the processing instance
payload	the binary raw audio buffer
nFrame	the number of frames in the payload
fmt	the format of the payload

Returns

number of unprocessed frames (if can not store output) if non zero, consume output and restart where it stopped

8.9.3.2 cloudx1_AddPadAudio()

```
unsigned int cloudx1_AddPadAudio (
            struct cloudx1_CInstance * instance )
```

Add silence to finish the current audio chunk and process it

Parameters

instance	the processing instance

Returns

number of added silence frame

8.9.3.3 cloudx1_GetAudio()

```
unsigned int cloudx1_GetAudio (
            struct cloudx1_CInstance * instance,
            uint8_t * payload,
            unsigned int max_nFrame,
            enum cloudx1_SampleFormat fmt )
```

Consume the output

Parameters

instance	the processing instance
payload	the binary raw audio buffer to store output
max_nFrame	the maximum number of frames that can be stored in the payload
fmt	the wanted format of the payload

Returns

number of frames put in the buffer

8.9.3.4 cloudx1_GetBytesFromFormat()

```
unsigned int cloudx1_GetBytesFromFormat (
            const enum cloudx1_SampleFormat fmt )
```

Get the format byte size

Parameters

fmt	the format

Returns

the number of bytes used by this format for a single channel audio sample

8.9.3.5 cloudx1_GetFormatFromName()

```
enum cloudx1_SampleFormat cloudx1_GetFormatFromName (
            const char * name )
```

Convert string to format

Parameters

name	the format string

Returns

the matching format, or INVALID_FORMAT if invalid.

8.9.3.6 cloudx1_GetFormatName()

```
const char * cloudx1_GetFormatName (
            const enum cloudx1_SampleFormat fmt )
```

Convert format to string

Parameters

fmt	the format

Returns

the string name of the format

8.9.3.7 cloudx1_GetMaxPacketFrame()

```
unsigned int cloudx1_GetMaxPacketFrame (
            struct cloudx1_CInstance * instance )
```

Maximum packet size (in frames) that can be queued at output.

Parameters

instance	The process instance

Returns

Maximum packet size (in frames) that can be queued at output.

8.9.3.8 cloudx1_GetOutputCount()

```
unsigned int cloudx1_GetOutputCount (
            struct cloudx1_CInstance * instance )
```

Get the available output size

Parameters

instance	the processing instance

Returns

number of available frames at output

8.10 Audio convert helpers

Functions

- void cloudx1_AudioConvertFrom (const uint8_t ∗payload, float ∗output, size_t nSpl, enum cloudx1_SampleFormat fmt)
- void cloudx1_AudioConvertTo (const float ∗input, uint8_t ∗payload, size_t nSpl, enum cloudx1_SampleFormat fmt)
- void cloudx1_StereoToMono (const float ∗input, float ∗output, size_t nFrame)
- void cloudx1_MonoToStereo (const float ∗input, float ∗output, size_t nFrame)
- void cloudx1_StereoToMono_Planar (const float ∗inputL, const float ∗inputR, float ∗output, size_t nFrame)
- void cloudx1_MonoToStereo_Planar (const float ∗input, float ∗outputL, float ∗outputR, size_t nFrame)
- void cloudx1_AudioMonoFromLiveStereo (const uint8_t ∗payload, float ∗output)
- void cloudx1_AudioMonoToLiveStereo (const float ∗input, uint8_t ∗payload)

8.10.1 Detailed Description

8.10.2 Function Documentation

8.10.2.1 cloudx1_AudioConvertFrom()

```
void cloudx1_AudioConvertFrom (
            const uint8_t * payload,
            float * output,
            size_t nSpl,
            enum cloudx1_SampleFormat fmt )
```

Convert the payload to floating-point array

Warning

Output buffer must be 64-byte aligned

Parameters

payload	the binary raw audio buffer
output	audio output buffer (64 byte aligned)
nSpl	the number of samples (not frames)
fmt	the format of the payload

8.10.2.2 cloudx1_AudioConvertTo()

```
void cloudx1_AudioConvertTo (
            const float * input,
            uint8_t * payload,
            size_t nSpl,
            enum cloudx1_SampleFormat fmt )
```

Convert floating-point array to payload

Warning

Input buffer must be 64-byte aligned

Parameters

input	audio input buffer (64 byte aligned)
payload	the binary raw audio buffer
nSpl	the number of samples (not frames)
fmt	the format of the payload

8.10.2.3 cloudx1_AudioMonoFromLiveStereo()

```
void cloudx1_AudioMonoFromLiveStereo (
            const uint8_t * payload,
            float * output )
```

Convert Livewire Livestereo payload to floating-point Mono (12 samples)

Parameters

payload	Livewire Live Stereo raw buffer
output	audio output mono buffer (64 byte aligned)

8.10.2.4 cloudx1_AudioMonoToLiveStereo()

```
void cloudx1_AudioMonoToLiveStereo (
            const float * input,
            uint8_t * payload )
```

Convert floating-point Mono (12 samples) to Livewire Livestereo payload

Parameters

input	audio input mono buffer (64 byte aligned)
payload	Livewire Live Stereo raw buffer

8.10.2.5 cloudx1_MonoToStereo()

```
void cloudx1_MonoToStereo (
            const float * input,
            float * output,
            size_t nFrame )
```

Convert floating-point Mono to Stereo (L,L)

Warning

Buffers must be 64-byte aligned

Parameters

input	audio input mono buffer (64 byte aligned)
output	audio output stereo buffer (64 byte aligned)
nFrame	the number of frames

8.10.2.6 cloudx1_MonoToStereo_Planar()

```
void cloudx1_MonoToStereo_Planar (
            const float * input,
            float * outputL,
            float * outputR,
            size_t nFrame )
```

Convert floating-point Mono to Stereo (planar) (L,L)

Warning

Buffers must be 64-byte aligned

Parameters

input	audio input mono buffer (64 byte aligned)
outputL	audio output left buffer (64 byte aligned)
outputR	audio output right buffer (64 byte aligned)
nFrame	the number of frames

8.10.2.7 cloudx1_StereoToMono()

```
void cloudx1_StereoToMono (
            const float * input,
            float * output,
            size_t nFrame )
```

Convert floating-point Stereo to Mono (L+R)/2

Warning

Buffers must be 64-byte aligned

Parameters

input	audio input stereo buffer (64 byte aligned)
output	audio output mono buffer (64 byte aligned)
nFrame	the number of frames

8.10.2.8 cloudx1_StereoToMono_Planar()

```
void cloudx1_StereoToMono_Planar (
            const float * inputL,
            const float * inputR,
            float * output,
            size_t nFrame )
```

Convert floating-point Stereo (planar) to Mono (L+R)/2

Warning

Buffers must be 64-byte aligned

Parameters

inputL	audio input left buffer (64 byte aligned)
inputR	audio input right buffer (64 byte aligned)
output	audio output mono buffer (64 byte aligned)
nFrame	the number of frames

8.11 Client's JSon config interfacing

Classes

- struct cloudx1_CClientInstance

Functions

- struct cloudx1_CClientInstance ∗ cloudx1_NewClient (struct cloudx1_CInstance ∗instance)
- void cloudx1_DeleteClient (struct cloudx1_CClientInstance ∗client)
- const char ∗ cloudx1_ProcessJson (struct cloudx1_CClientInstance ∗client, const char ∗json_str, int ∗need↩ _save)
- void cloudx1_FreeJsonAnswer (const char ∗json_str)
- int cloudx1_SaveState (struct cloudx1_CInstance ∗instance)

8.11.1 Detailed Description

Allow low-level JSON configuration. see also JSON syntax

8.11.2 Function Documentation

8.11.2.1 cloudx1_DeleteClient()

```
void cloudx1_DeleteClient (
            struct cloudx1_CClientInstance * client )
```

Deletes a client

Parameters

client	the client instance

8.11.2.2 cloudx1_FreeJsonAnswer()

```
void cloudx1_FreeJsonAnswer (
            const char * json_str )
```

Free a JSON answer returned by cloudx1_ProcessJson

Parameters

json_str	the JSON request

8.11.2.3 cloudx1_NewClient()

```
struct cloudx1_CClientInstance * cloudx1_NewClient (
            struct cloudx1_CInstance * instance )
```

Creates a new client

Remarks

not needed if using a port for JSON socket in Update Management

Parameters

instance	the processing instance

Returns

A new client instance

8.11.2.4 cloudx1_ProcessJson()

```
const char * cloudx1_ProcessJson (
            struct cloudx1_CClientInstance * client,
            const char * json_str,
            int * need_save )
```

Process a JSON request

For syntax, see JSON syntax

Note

In all library, all `char*` are **UTF-8** encoded

Attention

the return value needs to be freed with cloudx1_FreeJsonAnswer

Parameters

client	the client instance
json_str	the JSON request
need_save	on return will be 1 is saving is required (maybe delayed)

Returns

a JSON answer (to be freed with cloudx1_FreeJsonAnswer)

8.11.2.5 cloudx1_SaveState()

```
int cloudx1_SaveState (
            struct cloudx1_CInstance * instance )
```

Save the current state

Needed when cloudx1_ProcessJson returned with need_save to 1. However it can be postponed as much as wanted.

Remarks

Works only when update thread is running

Parameters

instance	the processing instance

Returns

0 if success, <0 on error

8.12 JSON syntax

JSON protocol to configure the process

8.12.1 Commands

`{ "get" : `object` }`

get values.
If `object` is null, get all parameters, and so show the possibilities
`{ "set" : `object` }`

set values.
`object` can be any subpart, only those will be changed
`{ "change" : `object` }`

like get, but shows only changes since last request.
If `object` is null, get all changes.
Each call resets the state for this connection to current.

Note

In x1.Cloud version <= 1.3.7, the state resetted also for filtered out objects. So avoid alterning `object` filter between calls, or you will miss some changes.

```
{ "load" : "`presetname`" }
```

load the preset

```
{ "save" : "`presetname`" }
```

save the preset.
If null is given, save onair preset

```
{ "delete" : "`presetname`" }
```

delete the preset.
can also be an array of presetnames

```
{ "factoryload" : "`presetname`" }
```

Create a preset from factory and load it

```
{ "rename" : { "preset" : "`presetname`", "name": "`newname`" } }
```

Rename a preset

```
{ "import" : { "preset" : "`presetname`", "content": `presetcontent` } }
```

Import a preset

```
{ "export" : "`presetname`"  }
```

Export a preset: get preset's content so it can be imported later

```
{ "new" : { "name": "`presetname`", "factory": "`presetname`" } }
```

Create a new preset from a factory.
Can use array for multiple.

```
{ "undo" : `count`  }
```

Undo last(s) `count` preset change

```
{ "redo" : `count`  }
```

Redo last(s) `count` preset change

See also JSON syntax for internal setup

8.12.2 Answers

Answer is also a JSON object, starting with the command for `get` and `change`.

```
{ "get" : ... }
{ "change" : ... }
```

For other commands, if there is no error the answer is

```
{ "OK" : {"command" : "original command" } }
```

If there is an error, answer has the syntax

```
{ "ERROR" : {"command" : "faulty command", "message" : "explaining"} }
```

and may have more properties. The message may be empty.

Note

In x1.Cloud version <= 1.2.2, the `OK` and `ERROR` answers had the syntax

```
{ "OK" : "original command" }
{ "ERROR" : "faulty command" }
```

8.12.3 Examples

8.12.3.1 Get status

```
{"get":{"status":null}}
```

answer:

```
{"get":{"status":{"preset_changed":false,"license_valid":true,"version":"1.1.19"}}}
```

8.12.3.2 Get all changes since last request

```
{"change":null}
```

answer:

```
{"change":{
       "processorname":"Best Radio of the world",
       "settings":{"general":{"operate":true},...},
       "preset":{"setup": {"gate_on": true, ...},...},
       "vu":{"setup": null,"in":{...}},
       ...
       }
```

8.12.3.3 Check license

```
{"get":{"status":{"license_valid":null}}}
```

answer:

```
{"get":{"status":{"license_valid":true}}}
```

8.12.3.4 Set Processor name

```
{"set":{"processorname":"Best Radio of the world"}}
```

answer:

```
{"OK":"set"}
```

8.12.3.5 Get presetlist

```
{"get":{"presetlist":null}}
```

answer:

```
{"get":{"presetlist":[
            {"name":"Urban","factory_name":"Urban","create":"2020-10-15 16:19:17","modify":"2020-10-15
      16:19:17"},
            {"name":"Rock Classic","factory_name":"Rock Classic","create":"2020-10-15
      16:19:17","modify":"2020-10-15 16:19:17"},
            {"name":"Rock","factory_name":"Rock","create":"2020-10-15 16:19:17","modify":"2020-10-15
      16:19:17"},
            ...
       ]}}
```

8.12.3.6 Load a preset

```
{"load":"Rock Classic"}
```

answer:

```
{"OK":"load"}
```

8.12.3.7 Get information on preset on air

```
{"get":{"presetinfo":null}}
```

answer:

```
{"get":{"presetinfo":{"name":"Rock Classic","factory_name":"Rock Classic","create":"2020-10-15
      16:19:17","modify":"2020-10-15 16:19:17"}}}
```

8.12.3.8 Set input gain

```
{"set":{"settings":{"gain":{"in":-3.0}}}}
```

answer:
```
{"OK":"set"}
```

8.12.3.9 Set bypass

```
{"set":{"settings":{"general":{"operate":false}}}}
```

answer:
```
{"OK":"set"}
```

8.12.3.10 Export a preset

```
{"export":"MyPresetName"}
```

answer:
```
{"export":{"processor":"Best Radio of the world","presets":{
           "MyPresetName":{
               "presetinfo":{"name":"MyPresetName","factory_name":"Open Sound","create":"2020-10-16
      06:53:20","modify":"2020-10-16 06:53:26"},
               "preset":{"setup":{"gate":-39.0}},
               "undoredo":{"undo":[{"time":"2020-10-16
      06:53:23","action":{"preset":{"setup":{"gate":-30.0}}}}],"redo":[],"has_undo":true,"has_redo":false}
               }
           }}}
```

Note

the object *export.presets["MyPresetName"]* in the answer is the one to use as *content* in Import a preset

8.12.3.11 Import a preset

```
{"import":{"preset":"MyNewPreset","content":{
           "presetinfo":{"name":"MyPresetName","factory_name":"Open Sound","create":"2020-10-16
      06:53:20","modify":"2020-10-16 06:53:26"},
           "preset":{"setup":{"gate":-39.0}},
           "undoredo":{"undo":[{"time":"2020-10-16
      06:53:23","action":{"preset":{"setup":{"gate":-30.0}}}}],"redo":[],"has_undo":true,"has_redo":false}
           }
       }}
```

answer:
```
{"OK":"import"}
```

8.13 JSON syntax for internal setup

JSON commands for internal setup and information.

This is used internally for the web server.

This API might change in the future.

Those commands can be used when directly interfacing to the process (see Client's JSon config interfacing). They are blocked web going through web server (`http://.../json`)

The Authentication is effective only through the web server. The direct JSON commands are not filtered.

8.13.1 Get process and modules information

```
{"_info": null}
```

answer:

```
{"_info":{"product":"SOUND4 x1.CLOUD","version": "1.3.7","title": "x1
      .CLOUD","preset_extension":"clx1","use_presets":true,"use_undoredo":true,
       "_modules_":["","wm"],
       "_modules_infos_":{
            "wm":{"product":"SOUND4 WM","version": "0.1.0","title":"SOUND4
      WM","use_presets":false,"use_undoredo":false}
       }}}
```

8.13.2 Authentication management

Some API are available only if there is a setup/admin account.

Secret stored is

```
MD5(username+":"+realm+":"+password)
```

8.13.2.1 Difference between setup and admin account

There are 2 modes:

1. Setup mode: you define a setup account, which can then create an administrator account. The setup account always keeps the access and can delete the administrator.
2. Admin mode: you define the administrator, which will be the single administrator.

From JSON, changing setup_is_admin can change the mode.

8.13.2.2 Access encoding

Access is a combinaison of letters.

- **'S'** Setup account : Allow Admin and delete admin
- **'A'** Admin access : Access to all overrides any other except setup
- **'x'** eXecute : change preset, list presets and preset infos and access settings.general fields
- **'v'** View : read preset and settings values
- **'w'** Write : change preset/settings (and undo/redo)
- **'s'** Save : create/save/delete/rename/import preset
- **'p'** Password : change own password
- **'-'** inactive : account is inactive

8.13.2.3 Change setup account

Allows to setup a setup account (even when is was not configured) or to remove it

8.13.2.3.1 Set the setup/admin account

```
{"_auth":{"init":{"setup_account":{"user":"admin","secret":"be666f22c03f199e05d3805430d69599"},"setup_is_admin":true,"unlogge
```

answer:
```
{"OK":{"command":"_auth"}}
```

8.13.2.3.2 Set the setup/admin account with clear password

```
{"_auth":{"init":{"setup_account":{"user":"admin","secret_clear":"admin"},"setup_is_admin":true,"unlogged_access":"rx"}}}
```

answer:
```
{"OK":{"command":"_auth"}}
```

8.13.2.3.3 Remove the setup/admin account

```
{"_auth":{"init":{"setup_account":null}}}
```

answer:
```
{"OK":{"command":"_auth"}}
```

8.13.2.4 Get user info

```
{"_auth":{"get":{"user":"username"}}}
```

answer:
```
{"_auth":{"get":{"user":"username","secret":"secrethash","access":"rwx"}}}
```

8.13.2.5 Add or modify a user

```
{"_auth":{"add":{"user":"username","secret":"secrethash","access":"rwx"}}}
```

answer:
```
{"_auth":{"add":{"user":"username","secret":"secrethash","access":"rwx"}}}
```

8.13.2.6 Removes a user

```
{"_auth":{"remove":{"user":"username"}}}
```

answer:
```
{"_auth":{"remove":{"user":"username"}}}
```

8.13.2.7 List users

```
{"_auth":{"list":null}}
```

answer:
```
{"_auth":{"list":["user1","user2",...]}}
```

8.13.2.8 Get/set unlogged access

```
{"_auth":{"get":{"unlogged_access":null}}}
```

answer:
```
{"_auth":{"get":{"unlogged_access":"rwx"}}}
```

8.13.2.9 Get realm

```
{"_auth":{"get":{"realm":null}}}
```

answer:
```
{"_auth":{"get":{"realm":"Authentification is required"}}}
```

8.13.2.10 Get API version

```
{"_auth":{"get":{"api_version":null}}}
```

answer:
```
{"_auth":{"get":{"api_version":2}}}
```

8.13.2.11 Get setup is admin

```
{"_auth":{"get":{"setup_is_admin":null}}}
```

answer:
```
{"_auth":{"get":{"setup_is_admin":true}}}
```

8.13.2.12 Get/set setup account

```
{"_auth":{"get":{"setup_account":null}}}
```

answer:
```
{"_auth":{"get":{"setup_account":{"user":"setup","secret":"secrethash","access":"sarwx"}}}}
```

8.13.2.13 Get/set custom storage

Implementation defined extra storage, stored in auth.json
```
{"_auth":{"get":{"storage":null}}}
```

answer:
```
{"_auth":{"get":{"storage":whateverjson...}}}
```

8.13.3 Get process' interface description

8.13.3.1 Get XML decription

```
{"_vars_xml": null}
```

answer:
```
<?xml version="1.0"?>
<Process title="x1 .CLOUD" default_name="" preset_extension="clx1">
...
</Process>
```

Attention

The answer is XML, not JSON !

8.13.3.2 Get Process Image

```
{"_image": null}
```

answer:
```
{"_image":"iVBORw0KGgoAA..." }
```

The string is the base64 encoding of the image (png format)

8.13.3.3 Get Process Ico

```
{"_ico": null}
```

answer:
```
{"_ico":"AAABAAUAEBAAAAEAIABo..." }
```

The string is the base64 encoding of the icon (ico format)

8.14 Web server

Macros

- #define SOUND4_INVALID_WEBSERVER_ID ((uint64_t)-1)
- #define SOUND4_WEBSERVER_HTTP_OK (1<<0)
- #define SOUND4_WEBSERVER_HTTPS_OK (1<<1)

Functions

- uint64_t cloudx1_Webserver_tcp (unsigned int listenport, unsigned int listenport_secure, const char *socket_ip, unsigned int socket_port)
- uint64_t cloudx1_Webserver_tcp2 (unsigned int listenport, unsigned int listenport_secure, const char *socket_ip, unsigned int socket_port, const struct cloudx1_CParameters *parameters)
- uint64_t cloudx1_Webserver (unsigned int listenport, unsigned int listenport_secure, struct cloudx1_CInstance *instance)
- int cloudx1_Webserver_Stop (uint64_t id, int timeout_ms)
- int cloudx1_Webserver_Status (uint64_t id)
- void cloudx1_Webserver_SetAppHealth (struct cloudx1_CInstance *instance, int httpcode, const char *contenttype, const char *content)
- void cloudx1_Webserver_GetAppHealth (struct cloudx1_CInstance *instance, int *httpcode, char **contenttype, char **content)
- void cloudx1_Webserver_FreeString (char *str)

8.14.1 Detailed Description

Run a web server to configure the processor

The web server also expose `/health` which should always answer 200.

The web server also expose `/licvalid` which should answer 200 when license is valid, 402 when it is not valid, other standard code for other errors.

See also how to setup authentication with Environment variables and parameters. Their use is documented in cloudx1_InitProcess.

8.14.2 Macro Definition Documentation

8.14.2.1 SOUND4_INVALID_WEBSERVER_ID

```
#define SOUND4_INVALID_WEBSERVER_ID ((uint64_t)-1)
```

This represents an invalid webserver id cloudx1_Webserver and cloudx1_Webserver_tcp will never return this value

Definition at line 1591 of file sound4.x1.cloud.h.

8.14.2.2 SOUND4_WEBSERVER_HTTP_OK

```
#define SOUND4_WEBSERVER_HTTP_OK (1<<0)
```

If this bit is set in the return value from cloudx1_Webserver_Status, then HTTP server is OK

Definition at line 1596 of file sound4.x1.cloud.h.

8.14.2.3 SOUND4_WEBSERVER_HTTPS_OK

```
#define SOUND4_WEBSERVER_HTTPS_OK (1<<1)
```

If this bit is set in the return value from cloudx1_Webserver_Status, then HTTPS server is OK

Definition at line 1600 of file sound4.x1.cloud.h.

8.14.3 Function Documentation

8.14.3.1 cloudx1_Webserver()

```
uint64_t cloudx1_Webserver (
            unsigned int listenport,
            unsigned int listenport_secure,
            struct cloudx1_CInstance * instance )
```

Run a web server, connecting to local instance internally (no expose port needed)

This function returns after connecting to the process, and continue to run in background See cloudx1_Webserver_Stop too stop it gracefully

For secure connection, it will use privatekey.pem and certificate.pem from current directory. Environment variables `SSL_PRIVATE_PATH` and `SSL_CERTIFICATE_PATH` can override those (see Environment variables and parameters). If none is valid, it will try also /etc/ssl/certs/server.key and /etc/ssl/certs/server.crt.

Warning

On Windows, calling this from Go<1.20 code will crash.

Parameters

listenport	The port to listen for HTTP connections (0 to disable)
listenport_secure	The port to listen for HTTPS connections (0 to disable)
instance	The process instance to connect to

Returns

id of webserver (starting at 0), to use with cloudx1_Webserver_Stop

8.14.3.2 cloudx1_Webserver_FreeString()

```
void cloudx1_Webserver_FreeString (
            char * str )
```

Free a a string returned by cloudx1_Webserver_GetAppHealth

Parameters

str	the string to free

8.14.3.3 cloudx1_Webserver_GetAppHealth()

```
void cloudx1_Webserver_GetAppHealth (
            struct cloudx1_CInstance * instance,
            int * httpcode,
            char ** contenttype,
            char ** content )
```

Get the current web server /apphealth returned http code,content-type and content

Parameters

instance	The process instance
httpcode	The http code pointer
contenttype	The http Content-Type header pointer (to be freed with cloudx1_Webserver_FreeString)
content	The http body content pointer (to be freed with cloudx1_Webserver_FreeString)

8.14.3.4 cloudx1_Webserver_SetAppHealth()

```
void cloudx1_Webserver_SetAppHealth (
            struct cloudx1_CInstance * instance,
            int httpcode,
            const char * contenttype,
            const char * content )
```

Set the web server /apphealth status info

The hosting application can use this to customize the handling of /apphealth path.

Parameters

instance	The process instance
httpcode	The http code
contenttype	The http Content-Type header
content	The http body content

8.14.3.5 cloudx1_Webserver_Status()

```
int cloudx1_Webserver_Status (
            uint64_t id )
```

Get the web server status

Warning

On Windows, calling this from Go<1.20 code will crash.

Parameters

id	The web server Id, returned by cloudx1_Webserver_tcp or cloudx1_Webserver

Returns

a combinaison of SOUND4_WEBSERVER_HTTP_OK and SOUND4_WEBSERVER_HTTPS_OK depending on the server status

8.14.3.6 cloudx1_Webserver_Stop()

```
int cloudx1_Webserver_Stop (
            uint64_t id,
            int timeout_ms )
```

Stop a web server started with cloudx1_Webserver_tcp

Warning

On Windows, calling this from Go<1.20 code will crash.

Parameters

id	The web server Id, returned by cloudx1_Webserver_tcp or cloudx1_Webserver
timeout_ms	The timeout to wait gracefull shutdown

Returns

0 if succeed, -1 if the id is not found

8.14.3.7 cloudx1_Webserver_tcp()

```
uint64_t cloudx1_Webserver_tcp (
            unsigned int listenport,
            unsigned int listenport_secure,
```

```
            const char * socket_ip,
            unsigned int socket_port )
```

Run a web server, connecting to process with JSON over TCP

This function returns after connecting to the process, and continue to run in background See cloudx1_Webserver_Stop too stop it gracefully

For secure connection, it will use privatekey.pem and certificate.pem from current directory. Environment variables `SSL_PRIVATE_PATH` and `SSL_CERTIFICATE_PATH` can override those (see Environment variables and parameters). If none is valid, it will try also /etc/ssl/certs/server.key and /etc/ssl/certs/server.crt.

Warning

On Windows, calling this from Go<1.20 code will crash.

Parameters

listenport	The port to listen for HTTP connections
listenport_secure	The port to listen for HTTPS connections
socket_ip	The ip of the process to connect to
socket_port	The port of the process's JSON server to connect to

Returns

id of webserver (starting at 0), to use with cloudx1_Webserver_Stop

8.14.3.8 cloudx1_Webserver_tcp2()

```
uint64_t cloudx1_Webserver_tcp2 (
            unsigned int listenport,
            unsigned int listenport_secure,
            const char * socket_ip,
            unsigned int socket_port,
            const struct cloudx1_CParameters * parameters )
```

Run a web server, connecting to process with JSON over TCP, using parameters

This function returns after connecting to the process, and continue to run in background See cloudx1_Webserver_Stop too stop it gracefully

For secure connection, it will use privatekey.pem and certificate.pem from current directory. Environment variables `SSL_PRIVATE_PATH` and `SSL_CERTIFICATE_PATH` can override those (see Environment variables and parameters). If none is valid, it will try also /etc/ssl/certs/server.key and /etc/ssl/certs/server.crt.

Warning

On Windows, calling this from Go<1.20 code will crash.

Parameters

listenport	The port to listen for HTTP connections
listenport_secure	The port to listen for HTTPS connections
socket_ip	The ip of the process to connect to
socket_port	The port of the process's JSON server to connect to
parameters	The parameters to use, created with cloudx1_NewParameters

Returns

id of webserver (starting at 0), to use with cloudx1_Webserver_Stop

8.15 Sample using C++ interface wrapper

See full example cpp/sound4.x1.cloud-pipe-cxx.cpp

8.15.1 Setup and sanity checks

```
sound4::cloudx1::SetLogSeverity(verbose5);
sound4::cloudx1::SetLoggerCallback(MyLogger);

sound4::cloudx1::CInstance instance;
instance.SetParam("ADMIN_USER","admin");
instance.SetParam("ADMIN_SECRET","admin");
```

8.15.2 Sample to create the processing instance

```
if (!instance.Create(LoginKey, RadioName, KeyId, AccessKey, store_path)) {
    std::cerr « "Failed to create the processing instance" « std::endl;
    return 1;
}
```

8.15.3 Communicating with the instance

See also

JSON syntax

```
auto client = instance.NewClient();
auto answer = client->ProcessJson(R"JSON({"get":{"processorname":null}})JSON");
std::cerr « "Request for processor name returned "«answer«std::endl;
```

8.15.4 Starting a web-server

```
if (!instance.StartWebServer(listen_port,0)) {
    std::cerr « "Failed to create the web server on port " « listen_port « std::endl;
    return 1;
}
```

8.15.5 Sample processing loop

```
while (!stopthread)
{
    // Read a chunk from stdin
    if (std::fread(instance.GetBufferIn().data(), sizeof(float), sound4::cloudx1::InputSampleSize,
  stdin) != sound4::cloudx1::InputSampleSize) {
        std::cerr « "ProcessLoop: input stopped"« std::endl;
        stopthread=true;
        break;
    }
    if (stopthread) break;
    // Process it
    instance.ProcessAudio();
    // Write it to stdout
    if (fwrite(instance.GetBufferOut().data(), sizeof(float), sound4::cloudx1::OutputSampleSize, stdout)
  != sound4::cloudx1::OutputSampleSize) {
        std::cerr « "Failed to write audio output" « std::endl;
        stopthread=true;
    }
}
```

8.16 Sample using C++ interface wrapper with dynamic library loading

See full example cpp/sound4.x1.cloud-pipe-dyn.cpp

8.16.1 Dynamic loading

```
sound4::cloudx1::dyn::CDynLib dynlib;
if (!dynlib.Load()) {
    std::cerr « "Failed to load processing library" « std::endl;
    return 1;
}
```

8.16.2 Setup and sanity checks

```
sound4::cloudx1::dyn::SetLogSeverity(dynlib, verbose5);
sound4::cloudx1::dyn::SetLoggerCallback(dynlib, MyLogger);

sound4::cloudx1::dyn::CInstance instance(dynlib);
instance.SetParam("ADMIN_USER","admin");
instance.SetParam("ADMIN_SECRET","admin");
```

8.16.3 Sample to create the processing instance

```
if (!instance.Create(LoginKey, RadioName, KeyId, AccessKey, {})) {
    std::cerr « "Failed to create the processing instance" « std::endl;
    return 1;
}
```

8.16.4 Communicating with the instance

See also

JSON syntax

```
auto client = instance.NewClient();
auto answer = client->ProcessJson(R"JSON({"get":{"processorname":null}})JSON");
std::cerr « "Request for processor name returned "«answer«std::endl;
```

8.16.5 Starting a web-server

```
if (!instance.StartWebServer(listen_port,0)) {
    std::cerr « "Failed to create the web server on port " « listen_port « std::endl;
    return 1;
}
```

8.16.6 Sample processing loop

```
    while (!stopthread)
    {
        // Read a chunk from stdin
        if (std::fread(instance.GetBufferIn().data(), sizeof(float), sound4::cloudx1::dyn::InputSampleSize,
      stdin) != sound4::cloudx1::dyn::InputSampleSize) {
            std::cerr « "ProcessLoop: input stopped"« std::endl;
            stopthread=true;
            break;
        }
        if (stopthread) break;
        // Process it
        instance.ProcessAudio();
        // Write it to stdout
        if (fwrite(instance.GetBufferOut().data(), sizeof(float), sound4::cloudx1::dyn::OutputSampleSize,
      stdout) != sound4::cloudx1::dyn::OutputSampleSize) {
            std::cerr « "Failed to write audio output" « std::endl;
            stopthread=true;
        }
    }
```

8.16.7 Custom preset manager

```
class MyPresetManager : public sound4::cloudx1::dyn::CPresetLoader {
public:
    MyPresetManager() = default;
    virtual ~MyPresetManager() = default;

    bool SetupPath(const std::filesystem::path& a_preset_path)
        {
            m_preset_path=a_preset_path;
            std::error_code ec;
            if ( !std::filesystem::exists(m_preset_path,ec ) ) {
                return false;
            }
            if ( !std::filesystem::is_directory(m_preset_path, ec) ) {
                return false;
            }
            return true;
        }
    virtual bool IsReadOnly() override { return false; };
    virtual bool Exists(const std::filesystem::path &name) override
        {
            std::error_code ec;
            return std::filesystem::exists(GetRealPath(name), ec);
        }
    virtual bool Remove(const std::filesystem::path &name) override
        {
            std::error_code ec;
            return std::filesystem::remove(GetRealPath(name), ec);
        }
    virtual bool Rename(const std::filesystem::path &from, const std::filesystem::path &to) override
        {
            std::error_code ec;
            std::filesystem::rename(GetRealPath(from), GetRealPath(to), ec);
            return (!ec);
        }
    virtual std::vector<std::filesystem::path> GetAll() override
        {
            std::vector<std::filesystem::path> list;
            std::error_code ec;
            for (auto it = std::filesystem::directory_iterator(m_preset_path.c_str(),
      std::filesystem::directory_options::skip_permission_denied, ec);
                !ec && it != std::filesystem::directory_iterator{};
                 it.increment(ec) )
            {
                if (it->is_regular_file(ec)) {
                    list.push_back(it->path().lexically_relative(m_preset_path));
                }
            }
            return list;
        }
    virtual std::string Read(const std::filesystem::path &filename) override
        {
            std::ifstream f(GetRealPath(filename));
            if ( f.fail() ) {
                return std::string();
            }
            std::ostringstream ss;
            ss « f.rdbuf();
            return ss.str();
        }
    virtual bool Write(const std::filesystem::path &filename, const std::string &content) override
```

```
        {
            std::ofstream f(GetRealPath(filename));
            if ( f.fail() ) {
                return false;
            }
            f « content;
            if ( f.fail() ) {
                return false;
            }
            return true;
        }
private:
    std::filesystem::path m_preset_path;
    std::filesystem::path GetRealPath(const std::filesystem::path &name)
        {
            return m_preset_path / name;
        }
};
```

8.16.8 Custom preset manager loading

```
    MyPresetManager preset_manager;
    if (!store_path.empty()) {
        if (!preset_manager.SetupPath(store_path)) {
            std::cerr « "Failed to setup the custom preset manager on path " « store_path.c_str() «
  std::endl;
            return 1;
        }
        instance.SetPresetManager(&preset_manager);
    }
```

8.17 Sample using Generic C++ interface (multi-process compatible)

This wrapper abstracts the processing specifics, working with any SOUND4 .CL process.

It uses sound4cl.hpp header.

See full example cpp/sound4cl-pipe.cpp

8.17.1 Loading the library

```
    std::string libname =  "libsound4.x1.cloud.so";
    sound4::CProcessor processor;
    if (!processor.Load(libname)) {
        std::cerr « "Failed to load processing library" « std::endl;
        return 1;
    }
```

8.17.2 Setup and configure

```
    processor.SetLogSeverity(sound4::verbose5);
    processor.SetLoggerCallback([](sound4::LogSeverity severity,const std::string& msg) {
            std::cerr « msg « std::endl;
        });

    sound4::CInstance instance(processor);
    instance.SetParam("ADMIN_USER","admin");
    instance.SetParam("ADMIN_SECRET","admin");
```

8.17.3 Create the processing instance

```
    if (!instance.Create(LoginKey, RadioName, KeyId, AccessKey, {})) {
        std::cerr « "Failed to create the processing instance" « std::endl;
        return 1;
    }
```

8.17.4 Processing loop

```
size_t input_sample_count = instance.GetChunkFrames() * processor.GetChannelCount();
size_t output_sample_count = instance.GetChunkFrames() * processor.GetChannelCount();
while (!stopthread)
{
    // Read a chunk from stdin
    if (std::fread(instance.GetBufferIn(), sizeof(float), input_sample_count, stdin) !=
  input_sample_count) {
        std::cerr « "ProcessLoop: input stopped"« std::endl;
        stopthread=true;
        break;
    }
    if (stopthread) break;
    // Process it
    instance.ProcessAudio();
    // Write it to stdout
    if (fwrite(instance.GetBufferOut(), sizeof(float), output_sample_count, stdout) !=
  output_sample_count) {
        std::cerr « "Failed to write audio output" « std::endl;
        stopthread=true;
    }
}
```

8.17.5 Starting a web-server

```
if (!instance.StartWebServer(listen_port,0)) {
    std::cerr « "Failed to create the web server on port " « listen_port « std::endl;
    return 1;
}
```

8.17.6 Communicating with the instance

See also

JSON syntax

```
auto client = instance.NewClient();
auto answer = client->ProcessJson(R"JSON({"get":{"processorname":null}})JSON");
std::cerr « "Request for processor name returned "«answer«std::endl;
```

8.17.7 Custom preset manager example

```
class MyPresetManager : public sound4::CPresetLoader {
public:
    MyPresetManager() = default;
    virtual ~MyPresetManager() = default;

    bool SetupPath(const std::filesystem::path& a_preset_path)
        {
            m_preset_path=a_preset_path;
            std::error_code ec;
            if ( !std::filesystem::exists(m_preset_path,ec ) ) {
                return false;
            }
            if ( !std::filesystem::is_directory(m_preset_path, ec) ) {
                return false;
            }
            return true;
        }
    virtual bool IsReadOnly() override { return false; };
    virtual bool Exists(const std::filesystem::path &name) override
        {
            std::error_code ec;
            return std::filesystem::exists(GetRealPath(name), ec);
        }
    virtual bool Remove(const std::filesystem::path &name) override
        {
            std::error_code ec;
            return std::filesystem::remove(GetRealPath(name), ec);
        }
    virtual bool Rename(const std::filesystem::path &from, const std::filesystem::path &to) override
        {
            std::error_code ec;
            std::filesystem::rename(GetRealPath(from), GetRealPath(to), ec);
            return (!ec);
        }
```

```
    virtual std::vector<std::filesystem::path> GetAll() override
        {
            std::vector<std::filesystem::path> list;
            std::error_code ec;
            for (auto it = std::filesystem::directory_iterator(m_preset_path.c_str(),
      std::filesystem::directory_options::skip_permission_denied, ec);
                !ec && it != std::filesystem::directory_iterator{};
                 it.increment(ec) )
            {
                if (it->is_regular_file(ec)) {
                    list.push_back(it->path().lexically_relative(m_preset_path));
                }
            }
            return list;
        }
    virtual std::string Read(const std::filesystem::path &filename) override
        {
            std::ifstream f(GetRealPath(filename));
            if ( f.fail() ) {
                return std::string();
            }
            std::ostringstream ss;
            ss « f.rdbuf();
            return ss.str();
        }
    virtual bool Write(const std::filesystem::path &filename, const std::string &content) override
        {
            std::ofstream f(GetRealPath(filename));
            if ( f.fail() ) {
                return false;
            }
            f « content;
            if ( f.fail() ) {
                return false;
            }
            return true;
        }
private:
    std::filesystem::path m_preset_path;
    std::filesystem::path GetRealPath(const std::filesystem::path &name)
        {
            return m_preset_path / name;
        }
};
```

8.17.8 Custom preset manager loading

```
    MyPresetManager preset_manager;
    if (!store_path.empty()) {
        if (!preset_manager.SetupPath(store_path)) {
            std::cerr « "Failed to setup the custom preset manager on path " « store_path.c_str() «
      std::endl;
            return 1;
        }
        instance.SetPresetManager(&preset_manager);
    }
```

Chapter 9

Namespace Documentation

9.1 dyn Namespace Reference

9.1.1 Detailed Description

Dynamic loading namespace

9.2 sound4 Namespace Reference

Namespaces

- namespace cloudx1
- namespace helper

Classes

- class CBus

  Shared Bus.
- class CInstance

  Instance handling class.
- class CPresetLoader

  Custom preset handler helper.
- class CProcessor

  Dynamic library interface.

Typedefs

- using LogSeverity = sound4cl_LogSeverity
- using log_cb_t = std::function< void(LogSeverity, const std::string &)>
- using PresetChange_Kind = sound4cl_PresetChange_Kind

Variables

- const LogSeverity none = (LogSeverity) sound4cl_none
- const LogSeverity fatal = (LogSeverity) sound4cl_fatal
- const LogSeverity error = (LogSeverity) sound4cl_error
- const LogSeverity warning = (LogSeverity) sound4cl_warning
- const LogSeverity info = (LogSeverity) sound4cl_info
- const LogSeverity verbose = (LogSeverity) sound4cl_verbose
- const LogSeverity verbose2 = (LogSeverity) sound4cl_verbose2
- const LogSeverity verbose3 = (LogSeverity) sound4cl_verbose3
- const LogSeverity verbose4 = (LogSeverity) sound4cl_verbose4
- const LogSeverity verbose5 = (LogSeverity) sound4cl_verbose5

9.2.1 Detailed Description

SOUND4 namespace

9.2.2 Typedef Documentation

9.2.2.1 log_cb_t

```
using sound4::log_cb_t = typedef std::function<void(LogSeverity,const std::string&)>
```

Log callback type

Definition at line 258 of file sound4cl.hpp.

9.2.2.2 LogSeverity

```
using sound4::LogSeverity = typedef sound4cl_LogSeverity
```

Log Severity levels

Definition at line 243 of file sound4cl.hpp.

9.2.2.3 PresetChange_Kind

```
using sound4::PresetChange_Kind = typedef sound4cl_PresetChange_Kind
```

Definition at line 753 of file sound4cl.hpp.

9.2.3 Variable Documentation

9.2.3.1 error

```
const LogSeverity sound4::error = (LogSeverity) sound4cl_error
```

Definition at line 246 of file sound4cl.hpp.

9.2.3.2 fatal

```
const LogSeverity sound4::fatal = (LogSeverity) sound4cl_fatal
```

Definition at line 245 of file sound4cl.hpp.

9.2.3.3 info

```
const LogSeverity sound4::info = (LogSeverity) sound4cl_info
```

Definition at line 248 of file sound4cl.hpp.

9.2.3.4 none

```
const LogSeverity sound4::none = (LogSeverity) sound4cl_none
```

Definition at line 244 of file sound4cl.hpp.

9.2.3.5 verbose

```
const LogSeverity sound4::verbose = (LogSeverity) sound4cl_verbose
```

Definition at line 249 of file sound4cl.hpp.

9.2.3.6 verbose2

```
const LogSeverity sound4::verbose2 = (LogSeverity) sound4cl_verbose2
```

Definition at line 250 of file sound4cl.hpp.

9.2.3.7 verbose3

```
const LogSeverity sound4::verbose3 = (LogSeverity) sound4cl_verbose3
```

Definition at line 251 of file sound4cl.hpp.

9.2.3.8 verbose4

```
const LogSeverity sound4::verbose4 = (LogSeverity) sound4cl_verbose4
```

Definition at line 252 of file sound4cl.hpp.

9.2.3.9 verbose5

```
const LogSeverity sound4::verbose5 = (LogSeverity) sound4cl_verbose5
```

Definition at line 253 of file sound4cl.hpp.

9.2.3.10 warning

```
const LogSeverity sound4::warning = (LogSeverity) sound4cl_warning
```

Definition at line 247 of file sound4cl.hpp.

9.3 sound4::cloudx1 Namespace Reference

Namespaces

- namespace dyn
- namespace helper

Classes

- class CInstance
- class CPresetLoader

Typedefs

- using SampleFormat = cloudx1_SampleFormat
- using LogSeverity = cloudx1_LogSeverity
- using log_cb_t = std::function< void(LogSeverity, const std::string &)>
- using PresetChange_Kind = cloudx1_PresetChange_Kind

Variables

- const size_t ChunkFrames = 64
- const size_t InputChannels = 2 ∗ 1
- const size_t OutputChannels = 2 ∗ 1
- const size_t InputSampleSize =ChunkFrames∗InputChannels
- const size_t OutputSampleSize =ChunkFrames∗OutputChannels
- const size_t SampleRate = 48000

9.3.1 Detailed Description

cloudx1 namespace

9.3.2 Typedef Documentation

9.3.2.1 log_cb_t

```
using sound4::cloudx1::log_cb_t = typedef std::function<void(LogSeverity,const std::string&)>
```

Log callback type

Definition at line 320 of file sound4.x1.cloud.hpp.

9.3.2.2 LogSeverity

```
using sound4::cloudx1::LogSeverity = typedef cloudx1_LogSeverity
```

Log Severity levels

Definition at line 316 of file sound4.x1.cloud.hpp.

9.3.2.3 PresetChange_Kind

```
using sound4::cloudx1::PresetChange_Kind = typedef cloudx1_PresetChange_Kind
```

Definition at line 380 of file sound4.x1.cloud.hpp.

9.3.2.4 SampleFormat

```
using sound4::cloudx1::SampleFormat = typedef cloudx1_SampleFormat
```

Definition at line 53 of file sound4.x1.cloud.hpp.

9.3.3 Variable Documentation

9.3.3.1 ChunkFrames

```
const size_t sound4::cloudx1::ChunkFrames = 64
```

Number of frames in a chunk

Definition at line 57 of file sound4.x1.cloud.hpp.

9.3.3.2 InputChannels

```
const size_t sound4::cloudx1::InputChannels = 2 * 1
```

Number of float values in an input frame

Definition at line 61 of file sound4.x1.cloud.hpp.

9.3.3.3 InputSampleSize

```
const size_t sound4::cloudx1::InputSampleSize =ChunkFrames*InputChannels
```

Number of float values for an input chunk

Definition at line 69 of file sound4.x1.cloud.hpp.

9.3.3.4 OutputChannels

```
const size_t sound4::cloudx1::OutputChannels = 2 * 1
```

Number of float values in an output frame

Definition at line 65 of file sound4.x1.cloud.hpp.

9.3.3.5 OutputSampleSize

```
const size_t sound4::cloudx1::OutputSampleSize =ChunkFrames*OutputChannels
```

Number of float values for an output chunk

Definition at line 73 of file sound4.x1.cloud.hpp.

9.3.3.6 SampleRate

```
const size_t sound4::cloudx1::SampleRate = 48000
```

Sample rate of library

Definition at line 77 of file sound4.x1.cloud.hpp.

9.4 sound4::cloudx1::dyn Namespace Reference

Namespaces

- namespace helper

Classes

- class CDynLib

  Dynamic library interface.
- class CInstance
- class CPresetLoader

Typedefs

- using SampleFormat = cloudx1_SampleFormat
- using LogSeverity = cloudx1_LogSeverity
- using log_cb_t = std::function< void(LogSeverity, const std::string &)>
- using PresetChange_Kind = cloudx1_PresetChange_Kind

Variables

- const size_t ChunkFrames = 64
- const size_t InputChannels = 2 ∗ 1
- const size_t OutputChannels = 2 ∗ 1
- const size_t InputSampleSize =ChunkFrames∗InputChannels
- const size_t OutputSampleSize =ChunkFrames∗OutputChannels
- const size_t SampleRate = 48000

9.4.1 Typedef Documentation

9.4.1.1 log_cb_t

```
using sound4::cloudx1::dyn::log_cb_t = typedef std::function<void(LogSeverity,const std↩
::string&)>
```

Log callback type

Definition at line 743 of file sound4.x1.cloud_dyn.hpp.

9.4.1.2 LogSeverity

```
using sound4::cloudx1::dyn::LogSeverity = typedef cloudx1_LogSeverity
```

Log Severity levels

Definition at line 739 of file sound4.x1.cloud_dyn.hpp.

9.4.1.3 PresetChange_Kind

```
using sound4::cloudx1::dyn::PresetChange_Kind = typedef cloudx1_PresetChange_Kind
```

Definition at line 811 of file sound4.x1.cloud_dyn.hpp.

9.4.1.4 SampleFormat

```
using sound4::cloudx1::dyn::SampleFormat = typedef cloudx1_SampleFormat
```

Definition at line 472 of file sound4.x1.cloud_dyn.hpp.

9.4.2 Variable Documentation

9.4.2.1 ChunkFrames

```
const size_t sound4::cloudx1::dyn::ChunkFrames = 64
```

Number of frames in a chunk

Definition at line 476 of file sound4.x1.cloud_dyn.hpp.

9.4.2.2 InputChannels

```
const size_t sound4::cloudx1::dyn::InputChannels = 2 * 1
```

Number of float values in an input frame

Definition at line 480 of file sound4.x1.cloud_dyn.hpp.

9.4.2.3 InputSampleSize

```
const size_t sound4::cloudx1::dyn::InputSampleSize =ChunkFrames*InputChannels
```

Number of float values for an input chunk

Definition at line 488 of file sound4.x1.cloud_dyn.hpp.

9.4.2.4 OutputChannels

```
const size_t sound4::cloudx1::dyn::OutputChannels = 2 * 1
```

Number of float values in an output frame

Definition at line 484 of file sound4.x1.cloud_dyn.hpp.

9.4.2.5 OutputSampleSize

```
const size_t sound4::cloudx1::dyn::OutputSampleSize =ChunkFrames*OutputChannels
```

Number of float values for an output chunk

Definition at line 492 of file sound4.x1.cloud_dyn.hpp.

9.4.2.6 SampleRate

```
const size_t sound4::cloudx1::dyn::SampleRate = 48000
```

Sample rate of library

Definition at line 496 of file sound4.x1.cloud_dyn.hpp.

9.5 sound4::cloudx1::dyn::helper Namespace Reference

Classes

- class CDynLoader

  Helper to load dynamic library.
- class DynFuncHolder

  Helper to wrap a function pointer.
- struct SampleFormat

  Helper for Sample format types.
- struct SampleFormat< float >
- struct SampleFormat< int16_t >
- struct SampleFormat< int32_t >

Typedefs

- using DynLib_t = HMODULE
- using DynFunc_t = FARPROC

9.5.1 Detailed Description

helper functions for unicode strings in Windows

9.5.2 Typedef Documentation

9.5.2.1 DynFunc_t

```
using sound4::cloudx1::dyn::helper::DynFunc_t = typedef FARPROC
```

Definition at line 83 of file sound4.x1.cloud_dyn.hpp.

9.5.2.2 DynLib_t

```
using sound4::cloudx1::dyn::helper::DynLib_t = typedef HMODULE
```

Definition at line 82 of file sound4.x1.cloud_dyn.hpp.

9.6 sound4::cloudx1::helper Namespace Reference

Classes

- struct SampleFormat

  Helper for Sample format types.
- struct SampleFormat< float >
- struct SampleFormat< int16_t >
- struct SampleFormat< int32_t >

9.6.1 Detailed Description

helper functions for unicode strings in Windows

9.7 sound4::helper Namespace Reference

Classes

- class CDynLoader

  Helper to load dynamic library.
- class DynFuncHolder

  Helper to wrap a function pointer.
- struct SampleFormat

  Helper for Sample format types.
- struct SampleFormat< float >
- struct SampleFormat< int16_t >
- struct SampleFormat< int32_t >

Typedefs

- using DynLib_t = HMODULE
- using DynFunc_t = FARPROC

9.7.1 Detailed Description

helper functions for unicode strings in Windows

9.7.2 Typedef Documentation

9.7.2.1 DynFunc_t

```
using sound4::helper::DynFunc_t = typedef FARPROC
```

Definition at line 112 of file sound4cl.hpp.

9.7.2.2 DynLib_t

```
using sound4::helper::DynLib_t = typedef HMODULE
```

Definition at line 111 of file sound4cl.hpp.

9.8 std Namespace Reference

Chapter 10

Class Documentation

10.1 sound4::CBus Class Reference

Shared Bus.

```
#include <sound4cl.hpp>
```

Public Member Functions

- CBus (CProcessor &dynlib)
- ~CBus ()
- sound4cl_CBus * Get () const

10.1.1 Detailed Description

Some processor can share a bus for realtime data exchange

Definition at line 713 of file sound4cl.hpp.

10.1.2 Constructor & Destructor Documentation

10.1.2.1 CBus()

```
sound4::CBus::CBus (
            CProcessor & dynlib )  [inline]
```

Definition at line 715 of file sound4cl.hpp.

10.1.2.2 ~CBus()

```
sound4::CBus::~CBus ( )  [inline]
```

Definition at line 722 of file sound4cl.hpp.

10.1.3 Member Function Documentation

10.1.3.1 Get()

```
sound4cl_CBus * sound4::CBus::Get ( ) const  [inline]
```

Definition at line 729 of file sound4cl.hpp.

The documentation for this class was generated from the following file:

- sound4cl.hpp

10.2 sound4::CInstance::CClient Class Reference

```
#include <sound4cl.hpp>
```

Public Member Functions

- CClient (sound4cl_CInstance *instance, CProcessor &dynlib)
- CClient (const CInstance &)=delete
- CClient & operator= (const CInstance &)=delete
- ~CClient ()
- std::string ProcessJson (const std::string &request, bool *NeedSave=nullptr)

  Process a JSON request and returns the answer.

10.2.1 Detailed Description

Low-level JSON client.

See also

JSON syntax

Definition at line 1225 of file sound4cl.hpp.

10.2.2 Constructor & Destructor Documentation

10.2.2.1 CClient() [1/2]

```
sound4::CInstance::CClient::CClient (
            sound4cl_CInstance * instance,
            CProcessor & dynlib )  [inline]
```

Definition at line 1227 of file sound4cl.hpp.

10.2.2.2 CClient() [2/2]

```
sound4::CInstance::CClient::CClient (
            const CInstance &  )  [delete]
```

10.2.2.3 ~CClient()

```
sound4::CInstance::CClient::~CClient ( )  [inline]
```

Definition at line 1237 of file sound4cl.hpp.

10.2.3 Member Function Documentation

10.2.3.1 operator=()

```
CClient & sound4::CInstance::CClient::operator= (
            const CInstance &  )  [delete]
```

10.2.3.2 ProcessJson()

```
std::string sound4::CInstance::CClient::ProcessJson (
            const std::string & request,
            bool * NeedSave = nullptr )  [inline]
```

Parameters

request	the JSON request.

See also

JSON syntax

Parameters

NeedSave	if non null, returns if the saving is required (maybe delayed)

Returns

the JSON answer

Definition at line 1251 of file sound4cl.hpp.

The documentation for this class was generated from the following file:

- sound4cl.hpp

10.3 sound4::cloudx1::CInstance::CClient Class Reference

```
#include <sound4.x1.cloud.hpp>
```

Public Member Functions

- CClient (cloudx1_CInstance *instance)
- CClient (const CInstance &)=delete
- CClient & operator= (const CInstance &)=delete
- ~CClient ()
- std::string ProcessJson (const std::string &request, bool *NeedSave=nullptr)

  Process a JSON request and returns the answer.

10.3.1 Detailed Description

Low-level JSON client.

See also

JSON syntax

Definition at line 827 of file sound4.x1.cloud.hpp.

10.3.2 Constructor & Destructor Documentation

10.3.2.1 CClient() [1/2]

```
sound4::cloudx1::CInstance::CClient::CClient (
            cloudx1_CInstance * instance )  [inline]
```

Definition at line 829 of file sound4.x1.cloud.hpp.

10.3.2.2 CClient() [2/2]

```
sound4::cloudx1::CInstance::CClient::CClient (
            const CInstance &  )  [delete]
```

10.3.2.3 ~CClient()

```
sound4::cloudx1::CInstance::CClient::~CClient ( )  [inline]
```

Definition at line 838 of file sound4.x1.cloud.hpp.

10.3.3 Member Function Documentation

10.3.3.1 operator=()

```
CClient & sound4::cloudx1::CInstance::CClient::operator= (
            const CInstance &  )  [delete]
```

10.3.3.2 ProcessJson()

```
std::string sound4::cloudx1::CInstance::CClient::ProcessJson (
            const std::string & request,
            bool * NeedSave = nullptr )  [inline]
```

Parameters

request	the JSON request.

See also

JSON syntax

Parameters

NeedSave	if non null, returns if the saving is required (maybe delayed)

Returns

the JSON answer

Definition at line 852 of file sound4.x1.cloud.hpp.

The documentation for this class was generated from the following file:

- sound4.x1.cloud.hpp

10.4 sound4::cloudx1::dyn::CInstance::CClient Class Reference

```
#include <sound4.x1.cloud_dyn.hpp>
```

Public Member Functions

- CClient (cloudx1_CInstance *instance, CDynLib &dynlib)
- CClient (const CInstance &)=delete
- CClient & operator= (const CInstance &)=delete
- ~CClient ()
- std::string ProcessJson (const std::string &request, bool *NeedSave=nullptr)

  Process a JSON request and returns the answer.

10.4.1 Detailed Description

Low-level JSON client.

See also

JSON syntax

Definition at line 1282 of file sound4.x1.cloud_dyn.hpp.

10.4.2 Constructor & Destructor Documentation

10.4.2.1 CClient() [1/2]

```
sound4::cloudx1::dyn::CInstance::CClient::CClient (
            cloudx1_CInstance * instance,
            CDynLib & dynlib )  [inline]
```

Definition at line 1284 of file sound4.x1.cloud_dyn.hpp.

10.4.2.2 CClient() [2/2]

```
sound4::cloudx1::dyn::CInstance::CClient::CClient (
            const CInstance &  )  [delete]
```

10.4.2.3 ~CClient()

```
sound4::cloudx1::dyn::CInstance::CClient::~CClient ( )  [inline]
```

Definition at line 1294 of file sound4.x1.cloud_dyn.hpp.

10.4.3 Member Function Documentation

10.4.3.1 operator=()

```
CClient & sound4::cloudx1::dyn::CInstance::CClient::operator= (
            const CInstance &  )  [delete]
```

10.4.3.2 ProcessJson()

```
std::string sound4::cloudx1::dyn::CInstance::CClient::ProcessJson (
            const std::string & request,
            bool * NeedSave = nullptr )  [inline]
```

Parameters

request	the JSON request.

See also

JSON syntax

Parameters

NeedSave	if non null, returns if the saving is required (maybe delayed)

Returns

the JSON answer

Definition at line 1308 of file sound4.x1.cloud_dyn.hpp.

The documentation for this class was generated from the following file:

- sound4.x1.cloud_dyn.hpp

10.5 sound4::cloudx1::dyn::CDynLib Class Reference

Dynamic library interface.

```
#include <sound4.x1.cloud_dyn.hpp>
```

Public Member Functions

- CDynLib ()=default
- bool Load (const std::filesystem::path &path={})

  Loads the library.
- bool IsOk () const

  Check if the library was loaded correctly.

Public Attributes

- helper::DynFuncHolder< decltype(cloudx1_GetVersion) > GetVersion
- helper::DynFuncHolder< decltype(cloudx1_GetChunkSizeInFrames) > GetChunkSizeInFrames
- helper::DynFuncHolder< decltype(cloudx1_GetChannelCount) > GetChannelCount
- helper::DynFuncHolder< decltype(cloudx1_GetAudioInputCount) > GetAudioInputCount
- helper::DynFuncHolder< decltype(cloudx1_GetAudioOutputCount) > GetAudioOutputCount
- helper::DynFuncHolder< decltype(cloudx1_GetSampleRate) > GetSampleRate
- helper::DynFuncHolder< decltype(cloudx1_SetLoggerCallback) > SetLoggerCallback
- helper::DynFuncHolder< decltype(cloudx1_SetLogSeverity) > SetLogSeverity
- helper::DynFuncHolder< decltype(cloudx1_NewParameters) > NewParameters
- helper::DynFuncHolder< decltype(cloudx1_FreeParameters) > FreeParameters
- helper::DynFuncHolder< decltype(cloudx1_SetParameter) > SetParameter
- helper::DynFuncHolder< decltype(cloudx1_GetParameter) > GetParameter
- helper::DynFuncHolder< decltype(cloudx1_FreeParameterValue) > FreeParameterValue
- helper::DynFuncHolder< decltype(cloudx1_InitProcess) > InitProcess
- helper::DynFuncHolder< decltype(cloudx1_InitProcess2) > InitProcess2
- helper::DynFuncHolder< decltype(cloudx1_TerminateProcess) > TerminateProcess
- helper::DynFuncHolder< decltype(cloudx1_ExitProcess) > ExitProcess
- helper::DynFuncHolder< decltype(cloudx1_StartUpdateThread) > StartUpdateThread
- helper::DynFuncHolder< decltype(cloudx1_StopUpdateThread) > StopUpdateThread
- helper::DynFuncHolder< decltype(cloudx1_WaitUpdateThreadReady) > WaitUpdateThreadReady
- helper::DynFuncHolder< decltype(cloudx1_ProcessAudio) > ProcessAudio
- helper::DynFuncHolder< decltype(cloudx1_ProcessAudio_Planar) > ProcessAudio_Planar
- helper::DynFuncHolder< decltype(cloudx1_GetBufferIn) > GetBufferIn
- helper::DynFuncHolder< decltype(cloudx1_GetBufferOut) > GetBufferOut
- helper::DynFuncHolder< decltype(cloudx1_GetEstimatedDelay) > GetEstimatedDelay

- helper::DynFuncHolder< decltype(cloudx1_GetFormatName) > GetFormatName
- helper::DynFuncHolder< decltype(cloudx1_GetFormatFromName) > GetFormatFromName
- helper::DynFuncHolder< decltype(cloudx1_GetBytesFromFormat) > GetBytesFromFormat
- helper::DynFuncHolder< decltype(cloudx1_GetMaxPacketFrame) > GetMaxPacketFrame
- helper::DynFuncHolder< decltype(cloudx1_AddAudio) > AddAudio
- helper::DynFuncHolder< decltype(cloudx1_AddPadAudio) > AddPadAudio
- helper::DynFuncHolder< decltype(cloudx1_GetOutputCount) > GetOutputCount
- helper::DynFuncHolder< decltype(cloudx1_GetAudio) > GetAudio
- helper::DynFuncHolder< decltype(cloudx1_AudioConvertFrom) > AudioConvertFrom
- helper::DynFuncHolder< decltype(cloudx1_AudioConvertTo) > AudioConvertTo
- helper::DynFuncHolder< decltype(cloudx1_StereoToMono) > StereoToMono
- helper::DynFuncHolder< decltype(cloudx1_MonoToStereo) > MonoToStereo
- helper::DynFuncHolder< decltype(cloudx1_AudioMonoFromLiveStereo) > AudioMonoFromLiveStereo
- helper::DynFuncHolder< decltype(cloudx1_AudioMonoToLiveStereo) > AudioMonoToLiveStereo
- helper::DynFuncHolder< decltype(cloudx1_NewClient) > NewClient
- helper::DynFuncHolder< decltype(cloudx1_DeleteClient) > DeleteClient
- helper::DynFuncHolder< decltype(cloudx1_ProcessJson) > ProcessJson
- helper::DynFuncHolder< decltype(cloudx1_FreeJsonAnswer) > FreeJsonAnswer
- helper::DynFuncHolder< decltype(cloudx1_SaveState) > SaveState
- helper::DynFuncHolder< decltype(cloudx1_Webserver_tcp) > Webserver_tcp
- helper::DynFuncHolder< decltype(cloudx1_Webserver_tcp2) > Webserver_tcp2
- helper::DynFuncHolder< decltype(cloudx1_Webserver) > Webserver
- helper::DynFuncHolder< decltype(cloudx1_Webserver_Stop) > Webserver_Stop
- helper::DynFuncHolder< decltype(cloudx1_Webserver_Status) > Webserver_Status
- helper::DynFuncHolder< decltype(cloudx1_StereoToMono_Planar) > StereoToMono_Planar
- helper::DynFuncHolder< decltype(cloudx1_MonoToStereo_Planar) > MonoToStereo_Planar
- helper::DynFuncHolder< decltype(cloudx1_SetMetadata) > SetMetadata
- helper::DynFuncHolder< decltype(cloudx1_GetMetadataInfos) > GetMetadataInfos
- helper::DynFuncHolder< decltype(cloudx1_FreeMetadataInfos) > FreeMetadataInfos
- helper::DynFuncHolder< decltype(cloudx1_SetPresetManager) > SetPresetManager
- helper::DynFuncHolder< decltype(cloudx1_PresetManager_InformChange) > PresetManager_InformChange
- helper::DynFuncHolder< decltype(cloudx1_GetPossibleChunkSizeInFrames) > GetPossibleChunkSizeInFrames
- helper::DynFuncHolder< decltype(cloudx1_GetProcessChunkFrames) > GetProcessChunkFrames
- helper::DynFuncHolder< decltype(cloudx1_InitProcess3) > InitProcess3
- helper::DynFuncHolder< decltype(cloudx1_SetMetadataMulti) > SetMetadataMulti
- helper::DynFuncHolder< decltype(cloudx1_Webserver_SetAppHealth) > Webserver_SetAppHealth
- helper::DynFuncHolder< decltype(cloudx1_Webserver_GetAppHealth) > Webserver_GetAppHealth
- helper::DynFuncHolder< decltype(cloudx1_Webserver_FreeString) > Webserver_FreeString

10.5.1 Detailed Description

Once you loaded the library with Load(), if it succeed you can use all the standard C functions from this library.

Definition at line 216 of file sound4.x1.cloud_dyn.hpp.

10.5.2 Constructor & Destructor Documentation

10.5.2.1 CDynLib()

```
sound4::cloudx1::dyn::CDynLib::CDynLib ( ) [default]
```

10.5.3 Member Function Documentation

10.5.3.1 IsOk()

```
bool sound4::cloudx1::dyn::CDynLib::IsOk ( ) const  [inline]
```

Returns

true if OK.

false if not OK.

Definition at line 462 of file sound4.x1.cloud_dyn.hpp.

10.5.3.2 Load()

```
bool sound4::cloudx1::dyn::CDynLib::Load (
            const std::filesystem::path & path = {} )  [inline]
```

Parameters

path	the path of the library to load.

Returns

true if library was loaded correctly.

false if library load failed. Do not use in this case !

Definition at line 318 of file sound4.x1.cloud_dyn.hpp.

10.5.4 Member Data Documentation

10.5.4.1 AddAudio

```
helper::DynFuncHolder< decltype(cloudx1_AddAudio ) > sound4::cloudx1::dyn::CDynLib::AddAudio
```

Definition at line 253 of file sound4.x1.cloud_dyn.hpp.

10.5.4.2 AddPadAudio

```
helper::DynFuncHolder< decltype(cloudx1_AddPadAudio ) > sound4::cloudx1::dyn::CDynLib::Add↩
PadAudio
```

Definition at line 254 of file sound4.x1.cloud_dyn.hpp.

10.5.4.3 AudioConvertFrom

```
helper::DynFuncHolder< decltype(cloudx1_AudioConvertFrom ) > sound4::cloudx1::dyn::CDynLib::↩
AudioConvertFrom
```

Definition at line 257 of file sound4.x1.cloud_dyn.hpp.

10.5.4.4 AudioConvertTo

```
helper::DynFuncHolder< decltype(cloudx1_AudioConvertTo ) > sound4::cloudx1::dyn::CDynLib::↩
AudioConvertTo
```

Definition at line 258 of file sound4.x1.cloud_dyn.hpp.

10.5.4.5 AudioMonoFromLiveStereo

```
helper::DynFuncHolder< decltype(cloudx1_AudioMonoFromLiveStereo) > sound4::cloudx1::dyn::↩
CDynLib::AudioMonoFromLiveStereo
```

Definition at line 261 of file sound4.x1.cloud_dyn.hpp.

10.5.4.6 AudioMonoToLiveStereo

```
helper::DynFuncHolder< decltype(cloudx1_AudioMonoToLiveStereo ) > sound4::cloudx1::dyn::CDyn↩
Lib::AudioMonoToLiveStereo
```

Definition at line 262 of file sound4.x1.cloud_dyn.hpp.

10.5.4.7 DeleteClient

```
helper::DynFuncHolder< decltype(cloudx1_DeleteClient ) > sound4::cloudx1::dyn::CDynLib::↩
DeleteClient
```

Definition at line 264 of file sound4.x1.cloud_dyn.hpp.

10.5.4.8 ExitProcess

```
helper::DynFuncHolder< decltype(cloudx1_ExitProcess ) > sound4::cloudx1::dyn::CDynLib::Exit↩
Process
```

Definition at line 240 of file sound4.x1.cloud_dyn.hpp.

10.5.4.9 FreeJsonAnswer

```
helper::DynFuncHolder< decltype(cloudx1_FreeJsonAnswer ) > sound4::cloudx1::dyn::CDynLib::↩
FreeJsonAnswer
```

Definition at line 266 of file sound4.x1.cloud_dyn.hpp.

10.5.4.10 FreeMetadataInfos

```
helper::DynFuncHolder< decltype(cloudx1_FreeMetadataInfos ) > sound4::cloudx1::dyn::CDynLib↩
::FreeMetadataInfos
```

Definition at line 283 of file sound4.x1.cloud_dyn.hpp.

10.5.4.11 FreeParameters

```
helper::DynFuncHolder< decltype(cloudx1_FreeParameters ) > sound4::cloudx1::dyn::CDynLib::↩
FreeParameters
```

Definition at line 233 of file sound4.x1.cloud_dyn.hpp.

10.5.4.12 FreeParameterValue

```
helper::DynFuncHolder< decltype(cloudx1_FreeParameterValue ) > sound4::cloudx1::dyn::CDynLib↩
::FreeParameterValue
```

Definition at line 236 of file sound4.x1.cloud_dyn.hpp.

10.5.4.13 GetAudio

```
helper::DynFuncHolder< decltype(cloudx1_GetAudio ) > sound4::cloudx1::dyn::CDynLib::GetAudio
```

Definition at line 256 of file sound4.x1.cloud_dyn.hpp.

10.5.4.14 GetAudioInputCount

```
helper::DynFuncHolder< decltype(cloudx1_GetAudioInputCount ) > sound4::cloudx1::dyn::CDynLib↩
::GetAudioInputCount
```

Definition at line 227 of file sound4.x1.cloud_dyn.hpp.

10.5.4.15 GetAudioOutputCount

```
helper::DynFuncHolder< decltype(cloudx1_GetAudioOutputCount ) > sound4::cloudx1::dyn::CDyn↩
Lib::GetAudioOutputCount
```

Definition at line 228 of file sound4.x1.cloud_dyn.hpp.

10.5.4.16 GetBufferIn

```
helper::DynFuncHolder< decltype(cloudx1_GetBufferIn ) > sound4::cloudx1::dyn::CDynLib::Get↩
BufferIn
```

Definition at line 246 of file sound4.x1.cloud_dyn.hpp.

10.5.4.17 GetBufferOut

```
helper::DynFuncHolder< decltype(cloudx1_GetBufferOut ) > sound4::cloudx1::dyn::CDynLib::Get↩
BufferOut
```

Definition at line 247 of file sound4.x1.cloud_dyn.hpp.

10.5.4.18 GetBytesFromFormat

```
helper::DynFuncHolder< decltype(cloudx1_GetBytesFromFormat ) > sound4::cloudx1::dyn::CDynLib↩
::GetBytesFromFormat
```

Definition at line 251 of file sound4.x1.cloud_dyn.hpp.

10.5.4.19 GetChannelCount

```
helper::DynFuncHolder< decltype(cloudx1_GetChannelCount ) > sound4::cloudx1::dyn::CDynLib::↩
GetChannelCount
```

Definition at line 226 of file sound4.x1.cloud_dyn.hpp.

10.5.4.20 GetChunkSizeInFrames

```
helper::DynFuncHolder< decltype(cloudx1_GetChunkSizeInFrames ) > sound4::cloudx1::dyn::CDyn↩
Lib::GetChunkSizeInFrames
```

Definition at line 225 of file sound4.x1.cloud_dyn.hpp.

10.5.4.21 GetEstimatedDelay

```
helper::DynFuncHolder< decltype(cloudx1_GetEstimatedDelay ) > sound4::cloudx1::dyn::CDynLib↩
::GetEstimatedDelay
```

Definition at line 248 of file sound4.x1.cloud_dyn.hpp.

10.5.4.22 GetFormatFromName

```
helper::DynFuncHolder< decltype(cloudx1_GetFormatFromName ) > sound4::cloudx1::dyn::CDynLib↩
::GetFormatFromName
```

Definition at line 250 of file sound4.x1.cloud_dyn.hpp.

10.5.4.23 GetFormatName

```
helper::DynFuncHolder< decltype(cloudx1_GetFormatName ) > sound4::cloudx1::dyn::CDynLib::Get↩
FormatName
```

Definition at line 249 of file sound4.x1.cloud_dyn.hpp.

10.5.4.24 GetMaxPacketFrame

```
helper::DynFuncHolder< decltype(cloudx1_GetMaxPacketFrame ) > sound4::cloudx1::dyn::CDynLib↩
::GetMaxPacketFrame
```

Definition at line 252 of file sound4.x1.cloud_dyn.hpp.

10.5.4.25 GetMetadataInfos

```
helper::DynFuncHolder< decltype(cloudx1_GetMetadataInfos ) > sound4::cloudx1::dyn::CDynLib::↩
GetMetadataInfos
```

Definition at line 282 of file sound4.x1.cloud_dyn.hpp.

10.5.4.26 GetOutputCount

```
helper::DynFuncHolder< decltype(cloudx1_GetOutputCount ) > sound4::cloudx1::dyn::CDynLib::↩
GetOutputCount
```

Definition at line 255 of file sound4.x1.cloud_dyn.hpp.

10.5.4.27 GetParameter

```
helper::DynFuncHolder< decltype(cloudx1_GetParameter ) > sound4::cloudx1::dyn::CDynLib::Get↩
Parameter
```

Definition at line 235 of file sound4.x1.cloud_dyn.hpp.

10.5.4.28 GetPossibleChunkSizeInFrames

```
helper::DynFuncHolder< decltype(cloudx1_GetPossibleChunkSizeInFrames ) > sound4::cloudx1↩
::dyn::CDynLib::GetPossibleChunkSizeInFrames
```

Definition at line 290 of file sound4.x1.cloud_dyn.hpp.

10.5.4.29 GetProcessChunkFrames

```
helper::DynFuncHolder< decltype(cloudx1_GetProcessChunkFrames ) > sound4::cloudx1::dyn::CDyn↩
Lib::GetProcessChunkFrames
```

Definition at line 291 of file sound4.x1.cloud_dyn.hpp.

10.5.4.30 GetSampleRate

```
helper::DynFuncHolder< decltype(cloudx1_GetSampleRate ) > sound4::cloudx1::dyn::CDynLib::Get↩
SampleRate
```

Definition at line 229 of file sound4.x1.cloud_dyn.hpp.

10.5.4.31 GetVersion

```
helper::DynFuncHolder< decltype(cloudx1_GetVersion ) > sound4::cloudx1::dyn::CDynLib::Get↩
Version
```

Definition at line 224 of file sound4.x1.cloud_dyn.hpp.

10.5.4.32 InitProcess

```
helper::DynFuncHolder< decltype(cloudx1_InitProcess ) > sound4::cloudx1::dyn::CDynLib::Init↩
Process
```

Definition at line 237 of file sound4.x1.cloud_dyn.hpp.

10.5.4.33 InitProcess2

```
helper::DynFuncHolder< decltype(cloudx1_InitProcess2 ) > sound4::cloudx1::dyn::CDynLib::Init↩
Process2
```

Definition at line 238 of file sound4.x1.cloud_dyn.hpp.

10.5.4.34 InitProcess3

```
helper::DynFuncHolder< decltype(cloudx1_InitProcess3 ) > sound4::cloudx1::dyn::CDynLib::Init↩
Process3
```

Definition at line 292 of file sound4.x1.cloud_dyn.hpp.

10.5.4.35 MonoToStereo

```
helper::DynFuncHolder< decltype(cloudx1_MonoToStereo ) > sound4::cloudx1::dyn::CDynLib::Mono↩
ToStereo
```

Definition at line 260 of file sound4.x1.cloud_dyn.hpp.

10.5.4.36 MonoToStereo_Planar

```
helper::DynFuncHolder< decltype(cloudx1_MonoToStereo_Planar ) > sound4::cloudx1::dyn::CDyn↩
Lib::MonoToStereo_Planar
```

Definition at line 278 of file sound4.x1.cloud_dyn.hpp.

10.5.4.37 NewClient

```
helper::DynFuncHolder< decltype(cloudx1_NewClient ) > sound4::cloudx1::dyn::CDynLib::NewClient
```

Definition at line 263 of file sound4.x1.cloud_dyn.hpp.

10.5.4.38 NewParameters

```
helper::DynFuncHolder< decltype(cloudx1_NewParameters ) > sound4::cloudx1::dyn::CDynLib::New↩
Parameters
```

Definition at line 232 of file sound4.x1.cloud_dyn.hpp.

10.5.4.39 PresetManager_InformChange

```
helper::DynFuncHolder< decltype(cloudx1_PresetManager_InformChange ) > sound4::cloudx1::dyn↩
::CDynLib::PresetManager_InformChange
```

Definition at line 287 of file sound4.x1.cloud_dyn.hpp.

10.5.4.40 ProcessAudio

```
helper::DynFuncHolder< decltype(cloudx1_ProcessAudio ) > sound4::cloudx1::dyn::CDynLib::↩
ProcessAudio
```

Definition at line 244 of file sound4.x1.cloud_dyn.hpp.

10.5.4.41 ProcessAudio_Planar

```
helper::DynFuncHolder< decltype(cloudx1_ProcessAudio_Planar ) > sound4::cloudx1::dyn::CDyn↩
Lib::ProcessAudio_Planar
```

Definition at line 245 of file sound4.x1.cloud_dyn.hpp.

10.5.4.42 ProcessJson

```
helper::DynFuncHolder< decltype(cloudx1_ProcessJson ) > sound4::cloudx1::dyn::CDynLib::↩
ProcessJson
```

Definition at line 265 of file sound4.x1.cloud_dyn.hpp.

10.5.4.43 SaveState

```
helper::DynFuncHolder< decltype(cloudx1_SaveState ) > sound4::cloudx1::dyn::CDynLib::SaveState
```

Definition at line 267 of file sound4.x1.cloud_dyn.hpp.

10.5.4.44 SetLoggerCallback

```
helper::DynFuncHolder< decltype(cloudx1_SetLoggerCallback ) > sound4::cloudx1::dyn::CDynLib↩
::SetLoggerCallback
```

Definition at line 230 of file sound4.x1.cloud_dyn.hpp.

10.5.4.45 SetLogSeverity

```
helper::DynFuncHolder< decltype(cloudx1_SetLogSeverity ) > sound4::cloudx1::dyn::CDynLib::↩
SetLogSeverity
```

Definition at line 231 of file sound4.x1.cloud_dyn.hpp.

10.5.4.46 SetMetadata

```
helper::DynFuncHolder< decltype(cloudx1_SetMetadata ) > sound4::cloudx1::dyn::CDynLib::Set↩
Metadata
```

Definition at line 281 of file sound4.x1.cloud_dyn.hpp.

10.5.4.47 SetMetadataMulti

```
helper::DynFuncHolder< decltype(cloudx1_SetMetadataMulti ) > sound4::cloudx1::dyn::CDynLib::↩
SetMetadataMulti
```

Definition at line 302 of file sound4.x1.cloud_dyn.hpp.

10.5.4.48 SetParameter

```
helper::DynFuncHolder< decltype(cloudx1_SetParameter ) > sound4::cloudx1::dyn::CDynLib::Set↩
Parameter
```

Definition at line 234 of file sound4.x1.cloud_dyn.hpp.

10.5.4.49 SetPresetManager

```
helper::DynFuncHolder< decltype(cloudx1_SetPresetManager ) > sound4::cloudx1::dyn::CDynLib::↩
SetPresetManager
```

Definition at line 286 of file sound4.x1.cloud_dyn.hpp.

10.5.4.50 StartUpdateThread

```
helper::DynFuncHolder< decltype(cloudx1_StartUpdateThread ) > sound4::cloudx1::dyn::CDynLib↩
::StartUpdateThread
```

Definition at line 241 of file sound4.x1.cloud_dyn.hpp.

10.5.4.51 StereoToMono

```
helper::DynFuncHolder< decltype(cloudx1_StereoToMono ) > sound4::cloudx1::dyn::CDynLib::↩
StereoToMono
```

Definition at line 259 of file sound4.x1.cloud_dyn.hpp.

10.5.4.52 StereoToMono_Planar

```
helper::DynFuncHolder< decltype(cloudx1_StereoToMono_Planar ) > sound4::cloudx1::dyn::CDyn↩
Lib::StereoToMono_Planar
```

Definition at line 277 of file sound4.x1.cloud_dyn.hpp.

10.5.4.53 StopUpdateThread

```
helper::DynFuncHolder< decltype(cloudx1_StopUpdateThread ) > sound4::cloudx1::dyn::CDynLib::↩
StopUpdateThread
```

Definition at line 242 of file sound4.x1.cloud_dyn.hpp.

10.5.4.54 TerminateProcess

```
helper::DynFuncHolder< decltype(cloudx1_TerminateProcess ) > sound4::cloudx1::dyn::CDynLib::↩
TerminateProcess
```

Definition at line 239 of file sound4.x1.cloud_dyn.hpp.

10.5.4.55 WaitUpdateThreadReady

```
helper::DynFuncHolder< decltype(cloudx1_WaitUpdateThreadReady ) > sound4::cloudx1::dyn::CDyn↩
Lib::WaitUpdateThreadReady
```

Definition at line 243 of file sound4.x1.cloud_dyn.hpp.

10.5.4.56 Webserver

```
helper::DynFuncHolder< decltype(cloudx1_Webserver ) > sound4::cloudx1::dyn::CDynLib::Webserver
```

Definition at line 271 of file sound4.x1.cloud_dyn.hpp.

10.5.4.57 Webserver_FreeString

```
helper::DynFuncHolder< decltype(cloudx1_Webserver_FreeString ) > sound4::cloudx1::dyn::CDyn↩
Lib::Webserver_FreeString
```

Definition at line 308 of file sound4.x1.cloud_dyn.hpp.

10.5.4.58 Webserver_GetAppHealth

```
helper::DynFuncHolder< decltype(cloudx1_Webserver_GetAppHealth ) > sound4::cloudx1::dyn::↩
CDynLib::Webserver_GetAppHealth
```

Definition at line 307 of file sound4.x1.cloud_dyn.hpp.

10.5.4.59 Webserver_SetAppHealth

```
helper::DynFuncHolder< decltype(cloudx1_Webserver_SetAppHealth ) > sound4::cloudx1::dyn::↩
CDynLib::Webserver_SetAppHealth
```

Definition at line 306 of file sound4.x1.cloud_dyn.hpp.

10.5.4.60 Webserver_Status

```
helper::DynFuncHolder< decltype(cloudx1_Webserver_Status ) > sound4::cloudx1::dyn::CDynLib::↩
Webserver_Status
```

Definition at line 273 of file sound4.x1.cloud_dyn.hpp.

10.5.4.61 Webserver_Stop

```
helper::DynFuncHolder< decltype(cloudx1_Webserver_Stop ) > sound4::cloudx1::dyn::CDynLib::↩
Webserver_Stop
```

Definition at line 272 of file sound4.x1.cloud_dyn.hpp.

10.5.4.62 Webserver_tcp

```
helper::DynFuncHolder< decltype(cloudx1_Webserver_tcp ) > sound4::cloudx1::dyn::CDynLib::↩
Webserver_tcp
```

Definition at line 269 of file sound4.x1.cloud_dyn.hpp.

10.5.4.63 Webserver_tcp2

```
helper::DynFuncHolder< decltype(cloudx1_Webserver_tcp2 ) > sound4::cloudx1::dyn::CDynLib::↩
Webserver_tcp2
```

Definition at line 270 of file sound4.x1.cloud_dyn.hpp.

The documentation for this class was generated from the following file:

- sound4.x1.cloud_dyn.hpp

10.6 sound4::cloudx1::dyn::helper::CDynLoader Class Reference

Helper to load dynamic library.

```
#include <sound4.x1.cloud_dyn.hpp>
```

Public Member Functions

- CDynLoader ()=default
- CDynLoader (CDynLoader &&)=default
- CDynLoader (const CDynLoader &)=delete
- CDynLoader & operator= (CDynLoader const &)=delete
- operator bool () const
- bool IsOk () const
- bool Load (const std::filesystem::path &dynlib, uint32_t loadflags=LOAD_LIBRARY_SEARCH_DLL_LOAD_DIR|LOAD_LIBRAF
- void Close ()
- template<typename T >
  DynFuncHolder< T > GetSymbol (const std::string &name)
- template<typename T >
  DynFuncHolder< T > GetSymbol_safe (const std::string &name)
- virtual ~CDynLoader ()

Static Public Member Functions

- static std::filesystem::path GetThisLibraryPath (void)

10.6.1 Detailed Description

Definition at line 107 of file sound4.x1.cloud_dyn.hpp.

10.6.2 Constructor & Destructor Documentation

10.6.2.1 CDynLoader() [1/3]

```
sound4::cloudx1::dyn::helper::CDynLoader::CDynLoader ( )  [default]
```

10.6.2.2 CDynLoader() [2/3]

```
sound4::cloudx1::dyn::helper::CDynLoader::CDynLoader (
            CDynLoader &&  )  [default]
```

10.6.2.3 CDynLoader() [3/3]

```
sound4::cloudx1::dyn::helper::CDynLoader::CDynLoader (
            const CDynLoader &  )  [delete]
```

10.6.2.4 ~CDynLoader()

```
virtual sound4::cloudx1::dyn::helper::CDynLoader::~CDynLoader ( )  [inline], [virtual]
```

Definition at line 204 of file sound4.x1.cloud_dyn.hpp.

10.6.3 Member Function Documentation

10.6.3.1 Close()

```
void sound4::cloudx1::dyn::helper::CDynLoader::Close ( ) [inline]
```

Definition at line 165 of file sound4.x1.cloud_dyn.hpp.

10.6.3.2 GetSymbol()

```
template<typename T >
DynFuncHolder< T > sound4::cloudx1::dyn::helper::CDynLoader::GetSymbol (
            const std::string & name ) [inline]
```

Definition at line 178 of file sound4.x1.cloud_dyn.hpp.

10.6.3.3 GetSymbol_safe()

```
template<typename T >
DynFuncHolder< T > sound4::cloudx1::dyn::helper::CDynLoader::GetSymbol_safe (
            const std::string & name ) [inline]
```

Definition at line 186 of file sound4.x1.cloud_dyn.hpp.

10.6.3.4 GetThisLibraryPath()

```
static std::filesystem::path sound4::cloudx1::dyn::helper::CDynLoader::GetThisLibraryPath (
            void ) [inline], [static]
```

Definition at line 190 of file sound4.x1.cloud_dyn.hpp.

10.6.3.5 IsOk()

```
bool sound4::cloudx1::dyn::helper::CDynLoader::IsOk ( ) const [inline]
```

Definition at line 119 of file sound4.x1.cloud_dyn.hpp.

10.6.3.6 Load()

```
bool sound4::cloudx1::dyn::helper::CDynLoader::Load (
            const std::filesystem::path & dynlib,
            uint32_t loadflags = LOAD_LIBRARY_SEARCH_DLL_LOAD_DIR|LOAD_LIBRARY_SEARCH_APPLICATION_DIR|LOAD_LIB
) [inline]
```

Definition at line 159 of file sound4.x1.cloud_dyn.hpp.

10.6.3.7 operator bool()

```
sound4::cloudx1::dyn::helper::CDynLoader::operator bool ( ) const  [inline]
```

Definition at line 116 of file sound4.x1.cloud_dyn.hpp.

10.6.3.8 operator=()

```
CDynLoader & sound4::cloudx1::dyn::helper::CDynLoader::operator= (
            CDynLoader const &  )  [delete]
```

The documentation for this class was generated from the following file:

- sound4.x1.cloud_dyn.hpp

10.7 sound4::helper::CDynLoader Class Reference

Helper to load dynamic library.

```
#include <sound4cl.hpp>
```

Public Member Functions

- CDynLoader ()=default
- CDynLoader (CDynLoader &&)=default
- CDynLoader (const CDynLoader &)=delete
- CDynLoader & operator= (CDynLoader const &)=delete
- operator bool () const
- bool IsOk () const
- bool Load (const std::filesystem::path &dynlib, uint32_t loadflags=LOAD_LIBRARY_SEARCH_DLL_LOAD_DIR|LOAD_LIBRAF
- void Close ()
- template<typename T >
  DynFuncHolder< T > GetSymbol (const std::string &name)
- template<typename T >
  DynFuncHolder< T > GetSymbol_safe (const std::string &name)
- virtual ~CDynLoader ()

Static Public Member Functions

- static std::filesystem::path GetThisLibraryPath (void)

10.7.1 Detailed Description

Definition at line 136 of file sound4cl.hpp.

10.7.2 Constructor & Destructor Documentation

10.7.2.1 CDynLoader() [1/3]

```
sound4::helper::CDynLoader::CDynLoader ( ) [default]
```

10.7.2.2 CDynLoader() [2/3]

```
sound4::helper::CDynLoader::CDynLoader (
            CDynLoader && ) [default]
```

10.7.2.3 CDynLoader() [3/3]

```
sound4::helper::CDynLoader::CDynLoader (
            const CDynLoader & ) [delete]
```

10.7.2.4 ~CDynLoader()

```
virtual sound4::helper::CDynLoader::~CDynLoader ( ) [inline], [virtual]
```

Definition at line 233 of file sound4cl.hpp.

10.7.3 Member Function Documentation

10.7.3.1 Close()

```
void sound4::helper::CDynLoader::Close ( ) [inline]
```

Definition at line 194 of file sound4cl.hpp.

10.7.3.2 GetSymbol()

```
template<typename T >
DynFuncHolder< T > sound4::helper::CDynLoader::GetSymbol (
            const std::string & name ) [inline]
```

Definition at line 207 of file sound4cl.hpp.

10.7.3.3 GetSymbol_safe()

```
template<typename T >
DynFuncHolder< T > sound4::helper::CDynLoader::GetSymbol_safe (
            const std::string & name ) [inline]
```

Definition at line 215 of file sound4cl.hpp.

10.7.3.4 GetThisLibraryPath()

```
static std::filesystem::path sound4::helper::CDynLoader::GetThisLibraryPath (
            void  )  [inline], [static]
```

Definition at line 219 of file sound4cl.hpp.

10.7.3.5 IsOk()

```
bool sound4::helper::CDynLoader::IsOk ( ) const  [inline]
```

Definition at line 148 of file sound4cl.hpp.

10.7.3.6 Load()

```
bool sound4::helper::CDynLoader::Load (
            const std::filesystem::path & dynlib,
            uint32_t loadflags = LOAD_LIBRARY_SEARCH_DLL_LOAD_DIR|LOAD_LIBRARY_SEARCH_APPLICATION_DIR|LOAD_LIB
)  [inline]
```

Definition at line 188 of file sound4cl.hpp.

10.7.3.7 operator bool()

```
sound4::helper::CDynLoader::operator bool ( ) const  [inline]
```

Definition at line 145 of file sound4cl.hpp.

10.7.3.8 operator=()

```
CDynLoader & sound4::helper::CDynLoader::operator= (
            CDynLoader const &  )  [delete]
```

The documentation for this class was generated from the following file:

- sound4cl.hpp

10.8 sound4::CInstance Class Reference

Instance handling class.

```
#include <sound4cl.hpp>
```

Classes

- class CClient

Public Member Functions

- CInstance (CProcessor &dynlib)
- CInstance (const CInstance &)=delete
- CInstance & operator= (const CInstance &)=delete
- virtual ~CInstance ()
- bool IsOk () const
- void SetParam (const std::string &name, const std::string &value)
- std::string GetParam (const std::string &name)
- void SetBus (const CBus &bus)
- void SetPresetManager (CPresetLoader *preset_manager)
- bool Create (const std::string &LoginKey, const std::string &RadioName, const std::string &Access_Key_ID, const std::string &Access_Key_Secret, const std::filesystem::path &save_path, int json_port=0, unsigned int frames_per_chunk=0)
- unsigned int GetChunkFrames ()
- void PresetManager_InformChange (const std::filesystem::path &relative_path, PresetChange_Kind change_kind)
- void SetMetadata (const std::string &key, const char *value)
- void SetMetadataMulti (const std::unordered_map< std::string, const char * > &list)
- std::vector< std::tuple< std::string, std::string > > GetMetadataInfos ()
- virtual void OnUpdateThreadStart ()
- virtual void OnUpdateThreadStop ()
- bool StartWebServer (int http_port, int https_port=0)
- void StopWebServer ()
- void SetWebServerAppHealth (int httpcode, const std::string &contenttype, const std::string &content)
- void GetWebServerAppHealth (int &httpcode, std::string &contenttype, std::string &content)
- int Terminate ()
- void Stop ()
- unsigned int GetEstimatedDelay ()
- float * GetBufferIn ()
- float * GetBufferOut ()
- void ProcessAudio ()
- void ProcessAudio_Planar (float const *const *input, float *const *output)
- template<typename T >
  std::vector< T > ProcessAnyAudio (const std::vector< T > input)
- std::shared_ptr< CClient > NewClient ()

Protected Member Functions

- template<typename T >
  unsigned int AddAudio (const T *payload, unsigned int nFrame)
- template<typename T >
  unsigned int GetAudio (T *payload, unsigned int max_nFrame)

10.8.1 Detailed Description

Holds an instance of processing

Definition at line 760 of file sound4cl.hpp.

10.8.2 Constructor & Destructor Documentation

10.8.2.1 CInstance() [1/2]

```
sound4::CInstance::CInstance (
            CProcessor & dynlib )  [inline]
```

Creates the instance, with default parameters

Definition at line 765 of file sound4cl.hpp.

10.8.2.2 CInstance() [2/2]

```
sound4::CInstance::CInstance (
            const CInstance &  )  [delete]
```

10.8.2.3 ~CInstance()

```
virtual sound4::CInstance::~CInstance ( )  [inline], [virtual]
```

Destructor, stopping any running tasks

Definition at line 777 of file sound4cl.hpp.

10.8.3 Member Function Documentation

10.8.3.1 AddAudio()

```
template<typename T >
unsigned int sound4::CInstance::AddAudio (
            const T * payload,
            unsigned int nFrame )  [inline], [protected]
```

Definition at line 1283 of file sound4cl.hpp.

10.8.3.2 Create()

```
bool sound4::CInstance::Create (
            const std::string & LoginKey,
            const std::string & RadioName,
            const std::string & Access_Key_ID,
            const std::string & Access_Key_Secret,
            const std::filesystem::path & save_path,
            int json_port = 0,
            unsigned int frames_per_chunk = 0 )  [inline]
```

Creates and initialize the instance, and starts its update thread

See also

sound4cl_InitProcess2

Parameters

LoginKey	SOUND4 Login key
RadioName	SOUND4 RadioName
Access_Key_ID	SOUND4 AWS access ID
Access_Key_Secret	SOUND4 AWS access Secret
save_path	Path where we can load/save the configuration
json_port	Optional json listening port
frames_per_chunk	The number of audio frames in each chunk of processing. Must be in the list returned by sound4cl_GetPossibleChunkSizeInFrames, or 0 to set default

Returns

false if failed

Definition at line 864 of file sound4cl.hpp.

10.8.3.3 GetAudio()

```
template<typename T >
unsigned int sound4::CInstance::GetAudio (
            T * payload,
            unsigned int max_nFrame )  [inline], [protected]
```

Definition at line 1289 of file sound4cl.hpp.

10.8.3.4 GetBufferIn()

```
float * sound4::CInstance::GetBufferIn ( )  [inline]
```

Gets the input buffer used in ProcessAudio

Input has GetAudioInputCount() ∗ GetChannelCount() channels

Each sample is a native 32-bit floating-point number where 1.0 is full scale. Channels are interlaced, so the buffers are [L0,R0,L1,R1,...,Ln,Rn] (L=Left, R=Right)

In case of multiple audio input/output, buffer is [aL0,aR0,bL0,bR0,...,aLn,aRn,bLn,bRn]

Definition at line 1138 of file sound4cl.hpp.

10.8.3.5 GetBufferOut()

```
float * sound4::CInstance::GetBufferOut ( )  [inline]
```

Gets the output buffer used in ProcessAudio

Output has GetAudioOutputCount() ∗ GetChannelCount() channels

Each sample is a native 32-bit floating-point number where 1.0 is full scale. Channels are interlaced, so the buffers are [L0,R0,L1,R1,...,Ln,Rn] (L=Left, R=Right)

In case of multiple audio input/output, buffer is [aL0,aR0,bL0,bR0,...,aLn,aRn,bLn,bRn]

Definition at line 1154 of file sound4cl.hpp.

10.8.3.6 GetChunkFrames()

```
unsigned int sound4::CInstance::GetChunkFrames ( ) [inline]
```

Get the number of audio frames in each chunk of processing.

The value reflects the frames_per_chunk parameter passed to Create

Returns

the number of audio frames in each chunk of processing

Definition at line 910 of file sound4cl.hpp.

10.8.3.7 GetEstimatedDelay()

```
unsigned int sound4::CInstance::GetEstimatedDelay ( ) [inline]
```

Gets an estimated delay of current processing

See also

sound4cl_GetEstimatedDelay

Definition at line 1122 of file sound4cl.hpp.

10.8.3.8 GetMetadataInfos()

```
std::vector< std::tuple< std::string, std::string > > sound4::CInstance::GetMetadataInfos ( )
[inline]
```

Get information on known metadata keys.

Returns

a list of {key,description} of known metadata used in process and extensions.

Definition at line 999 of file sound4cl.hpp.

10.8.3.9 GetParam()

```
std::string sound4::CInstance::GetParam (
            const std::string & name ) [inline]
```

Gets a parameter value

See also

sound4cl_GetParameter

Definition at line 803 of file sound4cl.hpp.

10.8.3.10 GetWebServerAppHealth()

```
void sound4::CInstance::GetWebServerAppHealth (
            int & httpcode,
            std::string & contenttype,
            std::string & content )  [inline]
```

Get the web server /apphealth status info

Definition at line 1076 of file sound4cl.hpp.

10.8.3.11 IsOk()

```
bool sound4::CInstance::IsOk ( ) const  [inline]
```

Returns true if an instance has been created and not stopped.

Definition at line 785 of file sound4cl.hpp.

10.8.3.12 NewClient()

```
std::shared_ptr< CClient > sound4::CInstance::NewClient ( )  [inline]
```

Creates a low-level JSON client

See also

JSON syntax

Returns

a new client to communicate with the processing

Definition at line 1275 of file sound4cl.hpp.

10.8.3.13 OnUpdateThreadStart()

```
virtual void sound4::CInstance::OnUpdateThreadStart ( )  [inline], [virtual]
```

Definition at line 1021 of file sound4cl.hpp.

10.8.3.14 OnUpdateThreadStop()

```
virtual void sound4::CInstance::OnUpdateThreadStop ( )  [inline], [virtual]
```

Definition at line 1023 of file sound4cl.hpp.

10.8.3.15 operator=()

```
CInstance & sound4::CInstance::operator= (
            const CInstance &  )  [delete]
```

10.8.3.16 PresetManager_InformChange()

```
void sound4::CInstance::PresetManager_InformChange (
            const std::filesystem::path & relative_path,
            PresetChange_Kind change_kind )  [inline]
```

Inform that a change happened in the storage. This must be used only in conjonction with SetPresetManager

Parameters

relative_path	The path which changed, relative to the root storage
change_kind	What happened to this path

Definition at line 924 of file sound4cl.hpp.

10.8.3.17 ProcessAnyAudio()

```
template<typename T >
std::vector< T > sound4::CInstance::ProcessAnyAudio (
            const std::vector< T > input )  [inline]
```

Process audio (different formats, less optimized)

Supports for int16_t, int32_t and float (32) in native endianness

Attention

the return count is independent from the input count

Template Parameters

T	the C type for one audio sample

Parameters

input	audio to process

Returns

processed audio

Definition at line 1201 of file sound4cl.hpp.

10.8.3.18 ProcessAudio()

```
void sound4::CInstance::ProcessAudio ( )  [inline]
```

Process one audio chunk, from GetBufferIn() to GetBufferOut()

See also

sound4cl_ProcessAudio

Definition at line 1164 of file sound4cl.hpp.

10.8.3.19 ProcessAudio_Planar()

```
void sound4::CInstance::ProcessAudio_Planar (
            float const *const * input,
            float *const * output )  [inline]
```

Process one audio chunk, but with planar audio

Each sample is a native 32-bit floating-point number where 1.0 is full scale. Channels are NOT interlaced, so the buffers are arrays of planar audio : [[L0,L1,...,Ln] , [R0,R1,...,Rn]] (L=Left, R=Right)

In case of multiple audio input/output, buffer are [[aL...], [aR...], [bL...], [bR...], ...]

See also

sound4cl_ProcessAudio_Planar

Parameters

input	has GetAudioInputCount() ∗ GetChannelCount() channels
output	has GetAudioOutputCount() ∗ GetChannelCount() channels

Definition at line 1183 of file sound4cl.hpp.

10.8.3.20 SetBus()

```
void sound4::CInstance::SetBus (
            const CBus & bus )  [inline]
```

Set the instance bus

Definition at line 815 of file sound4cl.hpp.

10.8.3.21 SetMetadata()

```
void sound4::CInstance::SetMetadata (
            const std::string & key,
            const char * value )  [inline]
```

Adds the specific metadata to the process.

It can come from any thread, and will be used as soon as possible. Setting a null value erase the metadata, which is different from setting an empty string.

Parameters

key	the metadata key If key contains a dot (like wm.KEY), it will be sent only to the matching plugin (ie wm here) without the prefix (ie KEY here) Use empty prefix for routing to main only.
value	the metadata value or nullptr to erase it.

Definition at line 942 of file sound4cl.hpp.

10.8.3.22 SetMetadataMulti()

```
void sound4::CInstance::SetMetadataMulti (
            const std::unordered_map< std::string, const char * > & list )  [inline]
```

Adds multiple metadata to the process.

This works like CInstance::SetMetadata but with multiple metadata at once.

See also

CInstance::SetMetadata

Parameters

list	a map of key/value pair.

Definition at line 963 of file sound4cl.hpp.

10.8.3.23 SetParam()

```
void sound4::CInstance::SetParam (
            const std::string & name,
            const std::string & value )  [inline]
```

Set a parameter value

Must be done before Create

See also

sound4cl_SetParameter

Definition at line 793 of file sound4cl.hpp.

10.8.3.24 SetPresetManager()

```
void sound4::CInstance::SetPresetManager (
            CPresetLoader * preset_manager )  [inline]
```

Sets a custom preset manager Optional, this overrides the `save_path` in Create

See also

sound4cl_SetPresetManager

Must be done before Create

Parameters

preset_manager	The custom preset manager

Definition at line 831 of file sound4cl.hpp.

10.8.3.25 SetWebServerAppHealth()

```
void sound4::CInstance::SetWebServerAppHealth (
            int httpcode,
            const std::string & contenttype,
            const std::string & content )  [inline]
```

Set the web server /apphealth status info

Definition at line 1067 of file sound4cl.hpp.

10.8.3.26 StartWebServer()

```
bool sound4::CInstance::StartWebServer (
            int http_port,
            int https_port = 0 )  [inline]
```

Starts a Web server on requested ports

See also

sound4cl_Webserver

Definition at line 1030 of file sound4cl.hpp.

10.8.3.27 Stop()

```
void sound4::CInstance::Stop ( )  [inline]
```

Stops the instance and its web server and its update thread.

See also

sound4cl_ExitProcess,
sound4cl_StopUpdateThread and
sound4cl_Webserver_Stop

Definition at line 1105 of file sound4cl.hpp.

10.8.3.28 StopWebServer()

```
void sound4::CInstance::StopWebServer ( ) [inline]
```

Stops the Web server

See also

sound4cl_Webserver_Stop

Definition at line 1055 of file sound4cl.hpp.

10.8.3.29 Terminate()

```
int sound4::CInstance::Terminate ( ) [inline]
```

Terminate the processing. This is useful only with file processing, to get the final status.

See also

sound4cl_TerminateProcess

Definition at line 1094 of file sound4cl.hpp.

The documentation for this class was generated from the following file:

- sound4cl.hpp

10.9 sound4::cloudx1::CInstance Class Reference

```
#include <sound4.x1.cloud.hpp>
```

Classes

- class CClient

Public Member Functions

- CInstance ()
- CInstance (const CInstance &)=delete
- CInstance & operator= (const CInstance &)=delete
- virtual ~CInstance ()
- bool IsOk () const
- void SetParam (const std::string &name, const std::string &value)
- std::string GetParam (const std::string &name)
- void SetPresetManager (CPresetLoader *preset_manager)
- bool Create (const std::string &LoginKey, const std::string &RadioName, const std::string &AWS_Access_ID, const std::string &AWS_Access_Secret, const std::filesystem::path &save_path, int json_port=0, unsigned int frames_per_chunk=64)
- unsigned int GetChunkFrames ()
- void PresetManager_InformChange (const std::filesystem::path &relative_path, PresetChange_Kind change_kind)
- void SetMetadata (const std::string &key, const char *value)
- void SetMetadataMulti (const std::unordered_map< std::string, const char * > &list)
- std::vector< std::tuple< std::string, std::string > > GetMetadataInfos ()
- virtual void OnUpdateThreadStart ()
- virtual void OnUpdateThreadStop ()
- bool StartWebServer (int http_port, int https_port=0)
- void StopWebServer ()
- void SetWebServerAppHealth (int httpcode, const std::string &contenttype, const std::string &content)
- void GetWebServerAppHealth (int &httpcode, std::string &contenttype, std::string &content)
- int Terminate ()
- void Stop ()
- unsigned int GetEstimatedDelay ()
- std::array< float, InputSampleSize > & GetBufferIn ()
- std::array< float, OutputSampleSize > & GetBufferOut ()
- void ProcessAudio ()
- void ProcessAudio_Planar (float const *const *input, float *const *output)
- template<typename T >
  std::vector< T > ProcessAnyAudio (const std::vector< T > input)
- std::shared_ptr< CClient > NewClient ()

Protected Member Functions

- template<typename T >
  unsigned int AddAudio (const T *payload, unsigned int nFrame)
- template<typename T >
  unsigned int GetAudio (T *payload, unsigned int max_nFrame)

10.9.1 Detailed Description

Instance handling class

Definition at line 385 of file sound4.x1.cloud.hpp.

10.9.2 Constructor & Destructor Documentation

10.9.2.1 CInstance() [1/2]

```
sound4::cloudx1::CInstance::CInstance ( ) [inline]
```

Creates the instance, with default parameters

Definition at line 390 of file sound4.x1.cloud.hpp.

10.9.2.2 CInstance() [2/2]

```
sound4::cloudx1::CInstance::CInstance (
            const CInstance & ) [delete]
```

10.9.2.3 ~CInstance()

```
virtual sound4::cloudx1::CInstance::~CInstance ( ) [inline], [virtual]
```

Destructor, stopping any running tasks

Definition at line 401 of file sound4.x1.cloud.hpp.

10.9.3 Member Function Documentation

10.9.3.1 AddAudio()

```
template<typename T >
unsigned int sound4::cloudx1::CInstance::AddAudio (
            const T * payload,
            unsigned int nFrame ) [inline], [protected]
```

Definition at line 883 of file sound4.x1.cloud.hpp.

10.9.3.2 Create()

```
bool sound4::cloudx1::CInstance::Create (
            const std::string & LoginKey,
            const std::string & RadioName,
            const std::string & AWS_Access_ID,
            const std::string & AWS_Access_Secret,
            const std::filesystem::path & save_path,
            int json_port = 0,
            unsigned int frames_per_chunk = 64 ) [inline]
```

Creates and initialize the instance, and starts its update thread

See also

cloudx1_InitProcess2

Parameters

LoginKey	SOUND4 Login key
RadioName	SOUND4 RadioName
AWS_Access_ID	SOUND4 AWS access ID
AWS_Access_Secret	SOUND4 AWS access Secret
save_path	Path where we can load/save the configuration
json_port	Optional json listening port
frames_per_chunk	The number of audio frames in each chunk of processing. Must be in the list returned by cloudx1_GetPossibleChunkSizeInFrames, or 0 to set default

Returns

false if failed

Definition at line 487 of file sound4.x1.cloud.hpp.

10.9.3.3 GetAudio()

```
template<typename T >
unsigned int sound4::cloudx1::CInstance::GetAudio (
            T * payload,
            unsigned int max_nFrame )  [inline], [protected]
```

Definition at line 889 of file sound4.x1.cloud.hpp.

10.9.3.4 GetBufferIn()

```
std::array< float, InputSampleSize > & sound4::cloudx1::CInstance::GetBufferIn ( )  [inline]
```

Gets the input buffer used in ProcessAudio

Input has GetAudioInputCount() ∗ GetChannelCount() channels

Each sample is a native 32-bit floating-point number where 1.0 is full scale. Channels are interlaced, so the buffers are [L0,R0,L1,R1,...,Ln,Rn] (L=Left, R=Right)

In case of multiple audio input/output, buffer is [aL0,aR0,bL0,bR0,...,aLn,aRn,bLn,bRn]

Definition at line 738 of file sound4.x1.cloud.hpp.

10.9.3.5 GetBufferOut()

```
std::array< float, OutputSampleSize > & sound4::cloudx1::CInstance::GetBufferOut ( )  [inline]
```

Gets the output buffer used in ProcessAudio

Output has GetAudioOutputCount() ∗ GetChannelCount() channels

Each sample is a native 32-bit floating-point number where 1.0 is full scale. Channels are interlaced, so the buffers are [L0,R0,L1,R1,...,Ln,Rn] (L=Left, R=Right)

In case of multiple audio input/output, buffer is [aL0,aR0,bL0,bR0,...,aLn,aRn,bLn,bRn]

Definition at line 755 of file sound4.x1.cloud.hpp.

10.9.3.6 GetChunkFrames()

```
unsigned int sound4::cloudx1::CInstance::GetChunkFrames ( ) [inline]
```

Get the number of audio frames in each chunk of processing.

The value reflects the frames_per_chunk parameter passed to Create

Returns

the number of audio frames in each chunk of processing

Definition at line 524 of file sound4.x1.cloud.hpp.

10.9.3.7 GetEstimatedDelay()

```
unsigned int sound4::cloudx1::CInstance::GetEstimatedDelay ( ) [inline]
```

Gets an estimated delay of current processing

See also

cloudx1_GetEstimatedDelay

Definition at line 722 of file sound4.x1.cloud.hpp.

10.9.3.8 GetMetadataInfos()

```
std::vector< std::tuple< std::string, std::string > > sound4::cloudx1::CInstance::GetMetadata↩
Infos ( ) [inline]
```

Get information on known metadata keys.

Returns

a list of {key,description} of known metadata used in process and extensions.

Definition at line 602 of file sound4.x1.cloud.hpp.

10.9.3.9 GetParam()

```
std::string sound4::cloudx1::CInstance::GetParam (
            const std::string & name ) [inline]
```

Gets a parameter value

See also

cloudx1_GetParameter

Definition at line 427 of file sound4.x1.cloud.hpp.

10.9.3.10 GetWebServerAppHealth()

```
void sound4::cloudx1::CInstance::GetWebServerAppHealth (
            int & httpcode,
            std::string & contenttype,
            std::string & content )  [inline]
```

Get the web server /apphealth status info

Definition at line 673 of file sound4.x1.cloud.hpp.

10.9.3.11 IsOk()

```
bool sound4::cloudx1::CInstance::IsOk ( ) const  [inline]
```

Returns true if an instance has been created and not stopped.

Definition at line 409 of file sound4.x1.cloud.hpp.

10.9.3.12 NewClient()

```
std::shared_ptr< CClient > sound4::cloudx1::CInstance::NewClient ( )  [inline]
```

Creates a low-level JSON client

See also

JSON syntax

Returns

a new client to communicate with the processing

Definition at line 875 of file sound4.x1.cloud.hpp.

10.9.3.13 OnUpdateThreadStart()

```
virtual void sound4::cloudx1::CInstance::OnUpdateThreadStart ( )  [inline], [virtual]
```

Definition at line 622 of file sound4.x1.cloud.hpp.

10.9.3.14 OnUpdateThreadStop()

```
virtual void sound4::cloudx1::CInstance::OnUpdateThreadStop ( )  [inline], [virtual]
```

Definition at line 624 of file sound4.x1.cloud.hpp.

10.9.3.15 operator=()

```
CInstance & sound4::cloudx1::CInstance::operator= (
            const CInstance &  )  [delete]
```

10.9.3.16 PresetManager_InformChange()

```
void sound4::cloudx1::CInstance::PresetManager_InformChange (
            const std::filesystem::path & relative_path,
            PresetChange_Kind change_kind )  [inline]
```

Inform that a change happened in the storage. This must be used only in conjonction with SetPresetManager

Parameters

relative_path	The path which changed, relative to the root storage
change_kind	What happened to this path

Definition at line 538 of file sound4.x1.cloud.hpp.

10.9.3.17 ProcessAnyAudio()

```
template<typename T >
std::vector< T > sound4::cloudx1::CInstance::ProcessAnyAudio (
            const std::vector< T > input )  [inline]
```

Process audio (different formats, less optimized)

Supports for int16_t, int32_t and float (32) in native endianness

Attention

the return count is independent from the input count due to CLOUDX1_AUDIOFRAME_COUNT

Template Parameters

T	the C type for one audio sample

Parameters

input	audio to process

Returns

processed audio

Definition at line 803 of file sound4.x1.cloud.hpp.

10.9.3.18 ProcessAudio()

```
void sound4::cloudx1::CInstance::ProcessAudio ( )  [inline]
```

Process one audio chunk, from GetBufferIn() to GetBufferOut()

See also

cloudx1_ProcessAudio

Definition at line 766 of file sound4.x1.cloud.hpp.

10.9.3.19 ProcessAudio_Planar()

```
void sound4::cloudx1::CInstance::ProcessAudio_Planar (
            float const *const * input,
            float *const * output )  [inline]
```

Process one audio chunk, but with planar audio

Each sample is a native 32-bit floating-point number where 1.0 is full scale. Channels are NOT interlaced, so the buffers are arrays of planar audio : [[L0,L1,...,Ln] , [R0,R1,...,Rn]] (L=Left, R=Right)

In case of multiple audio input/output, buffer are [[aL...], [aR...], [bL...], [bR...], ...]

See also

cloudx1_ProcessAudio_Planar

Parameters

input	has GetAudioInputCount() ∗ GetChannelCount() channels
output	has GetAudioOutputCount() ∗ GetChannelCount() channels

Definition at line 785 of file sound4.x1.cloud.hpp.

10.9.3.20 SetMetadata()

```
void sound4::cloudx1::CInstance::SetMetadata (
            const std::string & key,
            const char * value )  [inline]
```

Adds the specific metadata to the process.

It can come from any thread, and will be used as soon as possible. Setting a null value erase the metadata, which is different from setting an empty string.

Parameters

key	the metadata key If key contains a dot (like wm.KEY), it will be sent only to the matching plugin (ie wm here) without the prefix (ie KEY here) Use empty prefix for routing to main only.
value	the metadata value or nullptr to erase it.

Definition at line 554 of file sound4.x1.cloud.hpp.

10.9.3.21 SetMetadataMulti()

```
void sound4::cloudx1::CInstance::SetMetadataMulti (
            const std::unordered_map< std::string, const char * > & list )  [inline]
```

Adds multiple metadata to the process.

This works like CInstance::SetMetadata but with multiple metadata at once.

See also

CInstance::SetMetadata

Parameters

list	a map of key/value pair.

Definition at line 572 of file sound4.x1.cloud.hpp.

10.9.3.22 SetParam()

```
void sound4::cloudx1::CInstance::SetParam (
            const std::string & name,
            const std::string & value )  [inline]
```

Set a parameter value

Must be done before Create

See also

cloudx1_SetParameter

Definition at line 417 of file sound4.x1.cloud.hpp.

10.9.3.23 SetPresetManager()

```
void sound4::cloudx1::CInstance::SetPresetManager (
            CPresetLoader * preset_manager )  [inline]
```

Sets a custom preset manager Optional, this overrides the `save_path` in Create

See also

cloudx1_SetPresetManager

Must be done before Create

Parameters

preset_manager	The custom preset manager

Definition at line 445 of file sound4.x1.cloud.hpp.

10.9.3.24 SetWebServerAppHealth()

```
void sound4::cloudx1::CInstance::SetWebServerAppHealth (
            int httpcode,
```

```
            const std::string & contenttype,
            const std::string & content )  [inline]
```

Set the web server /apphealth status info

Definition at line 665 of file sound4.x1.cloud.hpp.

10.9.3.25 StartWebServer()

```
bool sound4::cloudx1::CInstance::StartWebServer (
            int http_port,
            int https_port = 0 )  [inline]
```

Starts a Web server on requested ports

See also

cloudx1_Webserver

Definition at line 632 of file sound4.x1.cloud.hpp.

10.9.3.26 Stop()

```
void sound4::cloudx1::CInstance::Stop ( )  [inline]
```

Stops the instance and its web server and its update thread.

See also

cloudx1_ExitProcess,
cloudx1_StopUpdateThread and
cloudx1_Webserver_Stop

Definition at line 703 of file sound4.x1.cloud.hpp.

10.9.3.27 StopWebServer()

```
void sound4::cloudx1::CInstance::StopWebServer ( )  [inline]
```

Stops the Web server

See also

cloudx1_Webserver_Stop

Definition at line 654 of file sound4.x1.cloud.hpp.

10.9.3.28 Terminate()

```
int sound4::cloudx1::CInstance::Terminate ( ) [inline]
```

Terminate the processing. This is useful only with file processing, to get the final status.

See also

cloudx1_TerminateProcess

Definition at line 692 of file sound4.x1.cloud.hpp.

The documentation for this class was generated from the following file:

- sound4.x1.cloud.hpp

10.10 sound4::cloudx1::dyn::CInstance Class Reference

```
#include <sound4.x1.cloud_dyn.hpp>
```

Classes

- class CClient

Public Member Functions

- CInstance (CDynLib &dynlib)
- CInstance (const CInstance &)=delete
- CInstance & operator= (const CInstance &)=delete
- virtual ~CInstance ()
- bool IsOk () const
- void SetParam (const std::string &name, const std::string &value)
- std::string GetParam (const std::string &name)
- void SetPresetManager (CPresetLoader *preset_manager)
- bool Create (const std::string &LoginKey, const std::string &RadioName, const std::string &Access_Key_ID, const std::string &Access_Key_Secret, const std::filesystem::path &save_path, int json_port=0, unsigned int frames_per_chunk=64)
- unsigned int GetChunkFrames ()
- void PresetManager_InformChange (const std::filesystem::path &relative_path, PresetChange_Kind change_kind)
- void SetMetadata (const std::string &key, const char *value)
- void SetMetadataMulti (const std::unordered_map< std::string, const char * > &list)
- std::vector< std::tuple< std::string, std::string > > GetMetadataInfos ()
- virtual void OnUpdateThreadStart ()
- virtual void OnUpdateThreadStop ()
- bool StartWebServer (int http_port, int https_port=0)
- void StopWebServer ()
- void SetWebServerAppHealth (int httpcode, const std::string &contenttype, const std::string &content)
- void GetWebServerAppHealth (int &httpcode, std::string &contenttype, std::string &content)
- int Terminate ()
- void Stop ()
- unsigned int GetEstimatedDelay ()
- std::array< float, InputSampleSize > & GetBufferIn ()
- std::array< float, OutputSampleSize > & GetBufferOut ()
- void ProcessAudio ()
- void ProcessAudio_Planar (float const *const *input, float *const *output)
- template<typename T >
  std::vector< T > ProcessAnyAudio (const std::vector< T > input)
- std::shared_ptr< CClient > NewClient ()

Protected Member Functions

- template<typename T >
  unsigned int AddAudio (const T *payload, unsigned int nFrame)
- template<typename T >
  unsigned int GetAudio (T *payload, unsigned int max_nFrame)

10.10.1 Detailed Description

Instance handling class

Definition at line 816 of file sound4.x1.cloud_dyn.hpp.

10.10.2 Constructor & Destructor Documentation

10.10.2.1 CInstance() [1/2]

```
sound4::cloudx1::dyn::CInstance::CInstance (
            CDynLib & dynlib )  [inline]
```

Creates the instance, with default parameters

Definition at line 821 of file sound4.x1.cloud_dyn.hpp.

10.10.2.2 CInstance() [2/2]

```
sound4::cloudx1::dyn::CInstance::CInstance (
            const CInstance &  )  [delete]
```

10.10.2.3 ~CInstance()

```
virtual sound4::cloudx1::dyn::CInstance::~CInstance ( )  [inline], [virtual]
```

Destructor, stopping any running tasks

Definition at line 833 of file sound4.x1.cloud_dyn.hpp.

10.10.3 Member Function Documentation

10.10.3.1 AddAudio()

```
template<typename T >
unsigned int sound4::cloudx1::dyn::CInstance::AddAudio (
            const T * payload,
            unsigned int nFrame )  [inline], [protected]
```

Definition at line 1340 of file sound4.x1.cloud_dyn.hpp.

10.10.3.2 Create()

```
bool sound4::cloudx1::dyn::CInstance::Create (
            const std::string & LoginKey,
            const std::string & RadioName,
            const std::string & Access_Key_ID,
            const std::string & Access_Key_Secret,
            const std::filesystem::path & save_path,
            int json_port = 0,
            unsigned int frames_per_chunk = 64 )  [inline]
```

Creates and initialize the instance, and starts its update thread

See also

cloudx1_InitProcess2

Parameters

LoginKey	SOUND4 Login key
RadioName	SOUND4 RadioName
Access_Key_ID	SOUND4 AWS access ID
Access_Key_Secret	SOUND4 AWS access Secret
save_path	Path where we can load/save the configuration
json_port	Optional json listening port
frames_per_chunk	The number of audio frames in each chunk of processing. Must be in the list returned by cloudx1_GetPossibleChunkSizeInFrames, or 0 to set default

Returns

false if failed

Definition at line 921 of file sound4.x1.cloud_dyn.hpp.

10.10.3.3 GetAudio()

```
template<typename T >
unsigned int sound4::cloudx1::dyn::CInstance::GetAudio (
            T * payload,
            unsigned int max_nFrame )  [inline], [protected]
```

Definition at line 1346 of file sound4.x1.cloud_dyn.hpp.

10.10.3.4 GetBufferIn()

```
std::array< float, InputSampleSize > & sound4::cloudx1::dyn::CInstance::GetBufferIn ( )  [inline]
```

Gets the input buffer used in ProcessAudio

Input has GetAudioInputCount() ∗ GetChannelCount() channels

Each sample is a native 32-bit floating-point number where 1.0 is full scale. Channels are interlaced, so the buffers are [L0,R0,L1,R1,...,Ln,Rn] (L=Left, R=Right)

In case of multiple audio input/output, buffer is [aL0,aR0,bL0,bR0,...,aLn,aRn,bLn,bRn]

Definition at line 1193 of file sound4.x1.cloud_dyn.hpp.

10.10.3.5 GetBufferOut()

```
std::array< float, OutputSampleSize > & sound4::cloudx1::dyn::CInstance::GetBufferOut ( )
[inline]
```

Gets the output buffer used in ProcessAudio

Output has GetAudioOutputCount() ∗ GetChannelCount() channels

Each sample is a native 32-bit floating-point number where 1.0 is full scale. Channels are interlaced, so the buffers are [L0,R0,L1,R1,...,Ln,Rn] (L=Left, R=Right)

In case of multiple audio input/output, buffer is [aL0,aR0,bL0,bR0,...,aLn,aRn,bLn,bRn]

Definition at line 1210 of file sound4.x1.cloud_dyn.hpp.

10.10.3.6 GetChunkFrames()

```
unsigned int sound4::cloudx1::dyn::CInstance::GetChunkFrames ( ) [inline]
```

Get the number of audio frames in each chunk of processing.

The value reflects the frames_per_chunk parameter passed to Create

Returns

the number of audio frames in each chunk of processing

Definition at line 964 of file sound4.x1.cloud_dyn.hpp.

10.10.3.7 GetEstimatedDelay()

```
unsigned int sound4::cloudx1::dyn::CInstance::GetEstimatedDelay ( ) [inline]
```

Gets an estimated delay of current processing

See also

cloudx1_GetEstimatedDelay

Definition at line 1177 of file sound4.x1.cloud_dyn.hpp.

10.10.3.8 GetMetadataInfos()

```
std::vector< std::tuple< std::string, std::string > > sound4::cloudx1::dyn::CInstance::Get↩
MetadataInfos ( ) [inline]
```

Get information on known metadata keys.

Returns

a list of {key,description} of known metadata used in process and extensions.

Definition at line 1053 of file sound4.x1.cloud_dyn.hpp.

10.10.3.9 GetParam()

```
std::string sound4::cloudx1::dyn::CInstance::GetParam (
            const std::string & name )  [inline]
```

Gets a parameter value

See also

cloudx1_GetParameter

Definition at line 859 of file sound4.x1.cloud_dyn.hpp.

10.10.3.10 GetWebServerAppHealth()

```
void sound4::cloudx1::dyn::CInstance::GetWebServerAppHealth (
            int & httpcode,
            std::string & contenttype,
            std::string & content )  [inline]
```

Get the web server /apphealth status info

Definition at line 1127 of file sound4.x1.cloud_dyn.hpp.

10.10.3.11 IsOk()

```
bool sound4::cloudx1::dyn::CInstance::IsOk ( ) const  [inline]
```

Returns true if an instance has been created and not stopped.

Definition at line 841 of file sound4.x1.cloud_dyn.hpp.

10.10.3.12 NewClient()

```
std::shared_ptr< CClient > sound4::cloudx1::dyn::CInstance::NewClient ( )  [inline]
```

Creates a low-level JSON client

See also

JSON syntax

Returns

a new client to communicate with the processing

Definition at line 1332 of file sound4.x1.cloud_dyn.hpp.

10.10.3.13 OnUpdateThreadStart()

```
virtual void sound4::cloudx1::dyn::CInstance::OnUpdateThreadStart ( ) [inline], [virtual]
```

Definition at line 1075 of file sound4.x1.cloud_dyn.hpp.

10.10.3.14 OnUpdateThreadStop()

```
virtual void sound4::cloudx1::dyn::CInstance::OnUpdateThreadStop ( ) [inline], [virtual]
```

Definition at line 1077 of file sound4.x1.cloud_dyn.hpp.

10.10.3.15 operator=()

```
CInstance & sound4::cloudx1::dyn::CInstance::operator= (
            const CInstance & ) [delete]
```

10.10.3.16 PresetManager_InformChange()

```
void sound4::cloudx1::dyn::CInstance::PresetManager_InformChange (
            const std::filesystem::path & relative_path,
            PresetChange_Kind change_kind ) [inline]
```

Inform that a change happened in the storage. This must be used only in conjonction with SetPresetManager

Parameters

relative_path	The path which changed, relative to the root storage
change_kind	What happened to this path

Definition at line 978 of file sound4.x1.cloud_dyn.hpp.

10.10.3.17 ProcessAnyAudio()

```
template<typename T >
std::vector< T > sound4::cloudx1::dyn::CInstance::ProcessAnyAudio (
            const std::vector< T > input ) [inline]
```

Process audio (different formats, less optimized)

Supports for int16_t, int32_t and float (32) in native endianness

Attention

the return count is independent from the input count due to CLOUDX1_AUDIOFRAME_COUNT

Template Parameters

T	the C type for one audio sample

Parameters

input	audio to process

Returns

processed audio

Definition at line 1258 of file sound4.x1.cloud_dyn.hpp.

10.10.3.18 ProcessAudio()

```
void sound4::cloudx1::dyn::CInstance::ProcessAudio ( ) [inline]
```

Process one audio chunk, from GetBufferIn() to GetBufferOut()

See also

cloudx1_ProcessAudio

Definition at line 1221 of file sound4.x1.cloud_dyn.hpp.

10.10.3.19 ProcessAudio_Planar()

```
void sound4::cloudx1::dyn::CInstance::ProcessAudio_Planar (
            float const *const * input,
            float *const * output ) [inline]
```

Process one audio chunk, but with planar audio

Each sample is a native 32-bit floating-point number where 1.0 is full scale. Channels are NOT interlaced, so the buffers are arrays of planar audio : [[L0,L1,...,Ln] , [R0,R1,...,Rn]] (L=Left, R=Right)

In case of multiple audio input/output, buffer are [[aL...], [aR...], [bL...], [bR...], ...]

See also

cloudx1_ProcessAudio_Planar

Parameters

input	has GetAudioInputCount() ∗ GetChannelCount() channels
output	has GetAudioOutputCount() ∗ GetChannelCount() channels

Definition at line 1240 of file sound4.x1.cloud_dyn.hpp.

10.10.3.20 SetMetadata()

```
void sound4::cloudx1::dyn::CInstance::SetMetadata (
            const std::string & key,
            const char * value )  [inline]
```

Adds the specific metadata to the process.

It can come from any thread, and will be used as soon as possible. Setting a null value erase the metadata, which is different from setting an empty string.

Parameters

key	the metadata key If key contains a dot (like wm.KEY), it will be sent only to the matching plugin (ie wm here) without the prefix (ie KEY here) Use empty prefix for routing to main only.
value	the metadata value or nullptr to erase it.

Definition at line 996 of file sound4.x1.cloud_dyn.hpp.

10.10.3.21 SetMetadataMulti()

```
void sound4::cloudx1::dyn::CInstance::SetMetadataMulti (
            const std::unordered_map< std::string, const char * > & list )  [inline]
```

Adds multiple metadata to the process.

This works like CInstance::SetMetadata but with multiple metadata at once.

See also

CInstance::SetMetadata

Parameters

list	a map of key/value pair.

Definition at line 1017 of file sound4.x1.cloud_dyn.hpp.

10.10.3.22 SetParam()

```
void sound4::cloudx1::dyn::CInstance::SetParam (
            const std::string & name,
            const std::string & value )  [inline]
```

Set a parameter value

Must be done before Create

See also

cloudx1_SetParameter

Definition at line 849 of file sound4.x1.cloud_dyn.hpp.

10.10.3.23 SetPresetManager()

```
void sound4::cloudx1::dyn::CInstance::SetPresetManager (
            CPresetLoader * preset_manager )  [inline]
```

Sets a custom preset manager Optional, this overrides the `save_path` in Create

See also

cloudx1_SetPresetManager

Must be done before Create

Parameters

preset_manager	The custom preset manager

Definition at line 888 of file sound4.x1.cloud_dyn.hpp.

10.10.3.24 SetWebServerAppHealth()

```
void sound4::cloudx1::dyn::CInstance::SetWebServerAppHealth (
            int httpcode,
            const std::string & contenttype,
            const std::string & content )  [inline]
```

Set the web server /apphealth status info

Definition at line 1118 of file sound4.x1.cloud_dyn.hpp.

10.10.3.25 StartWebServer()

```
bool sound4::cloudx1::dyn::CInstance::StartWebServer (
            int http_port,
            int https_port = 0 )  [inline]
```

Starts a Web server on requested ports

See also

cloudx1_Webserver

Definition at line 1085 of file sound4.x1.cloud_dyn.hpp.

10.10.3.26 Stop()

```
void sound4::cloudx1::dyn::CInstance::Stop ( ) [inline]
```

Stops the instance and its web server and its update thread.

See also

cloudx1_ExitProcess,
cloudx1_StopUpdateThread and
cloudx1_Webserver_Stop

Definition at line 1158 of file sound4.x1.cloud_dyn.hpp.

10.10.3.27 StopWebServer()

```
void sound4::cloudx1::dyn::CInstance::StopWebServer ( ) [inline]
```

Stops the Web server

See also

cloudx1_Webserver_Stop

Definition at line 1107 of file sound4.x1.cloud_dyn.hpp.

10.10.3.28 Terminate()

```
int sound4::cloudx1::dyn::CInstance::Terminate ( ) [inline]
```

Terminate the processing. This is useful only with file processing, to get the final status.

See also

cloudx1_TerminateProcess

Definition at line 1147 of file sound4.x1.cloud_dyn.hpp.

The documentation for this class was generated from the following file:

- sound4.x1.cloud_dyn.hpp

10.11 cloudx1_CClientInstance Struct Reference

```
#include <sound4.x1.cloud.h>
```

10.11.1 Detailed Description

Abstract pointer for a client instance

The documentation for this struct was generated from the following file:

- sound4.x1.cloud.h

10.12 cloudx1_CInstance Struct Reference

```
#include <sound4.x1.cloud.h>
```

10.12.1 Detailed Description

Abstract holder for a process instance

The documentation for this struct was generated from the following file:

- sound4.x1.cloud.h

10.13 cloudx1_CParameters Struct Reference

```
#include <sound4.x1.cloud.h>
```

10.13.1 Detailed Description

Abstract holder for a process instance parameters

The documentation for this struct was generated from the following file:

- sound4.x1.cloud.h

10.14 sound4::cloudx1::CPresetLoader Class Reference

```
#include <sound4.x1.cloud.hpp>
```

Public Member Functions

- CPresetLoader ()=default
- virtual ~CPresetLoader ()=default
- virtual bool IsReadOnly ()=0
- virtual bool Exists (const std::filesystem::path &name)=0
- virtual bool Remove (const std::filesystem::path &name)=0
- virtual bool Rename (const std::filesystem::path &from, const std::filesystem::path &to)=0
- virtual std::vector< std::filesystem::path > GetAll ()=0
- virtual std::string Read (const std::filesystem::path &filename)=0
- virtual bool Write (const std::filesystem::path &filename, const std::string &content)=0

10.14.1 Detailed Description

Custom preset handler helper Derive from this class and call CInstance::SetPresetManager

Definition at line 367 of file sound4.x1.cloud.hpp.

10.14.2 Constructor & Destructor Documentation

10.14.2.1 CPresetLoader()

```
sound4::cloudx1::CPresetLoader::CPresetLoader ( ) [default]
```

10.14.2.2 ~CPresetLoader()

```
virtual sound4::cloudx1::CPresetLoader::~CPresetLoader ( ) [virtual], [default]
```

10.14.3 Member Function Documentation

10.14.3.1 Exists()

```
virtual bool sound4::cloudx1::CPresetLoader::Exists (
            const std::filesystem::path & name ) [pure virtual]
```

10.14.3.2 GetAll()

```
virtual std::vector< std::filesystem::path > sound4::cloudx1::CPresetLoader::GetAll ( ) [pure
virtual]
```

10.14.3.3 IsReadOnly()

```
virtual bool sound4::cloudx1::CPresetLoader::IsReadOnly ( ) [pure virtual]
```

10.14.3.4 Read()

```
virtual std::string sound4::cloudx1::CPresetLoader::Read (
            const std::filesystem::path & filename ) [pure virtual]
```

10.14.3.5 Remove()

```
virtual bool sound4::cloudx1::CPresetLoader::Remove (
            const std::filesystem::path & name ) [pure virtual]
```

10.14.3.6 Rename()

```
virtual bool sound4::cloudx1::CPresetLoader::Rename (
            const std::filesystem::path & from,
            const std::filesystem::path & to )  [pure virtual]
```

10.14.3.7 Write()

```
virtual bool sound4::cloudx1::CPresetLoader::Write (
            const std::filesystem::path & filename,
            const std::string & content )  [pure virtual]
```

The documentation for this class was generated from the following file:

- sound4.x1.cloud.hpp

10.15 sound4::cloudx1::dyn::CPresetLoader Class Reference

```
#include <sound4.x1.cloud_dyn.hpp>
```

Inheritance diagram for sound4::cloudx1::dyn::CPresetLoader:

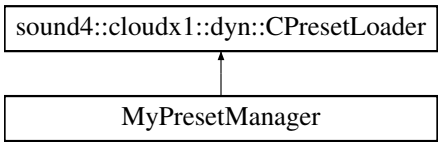

Public Member Functions

- CPresetLoader ()=default
- virtual ~CPresetLoader ()=default
- virtual bool IsReadOnly ()=0
- virtual bool Exists (const std::filesystem::path &name)=0
- virtual bool Remove (const std::filesystem::path &name)=0
- virtual bool Rename (const std::filesystem::path &from, const std::filesystem::path &to)=0
- virtual std::vector< std::filesystem::path > GetAll ()=0
- virtual std::string Read (const std::filesystem::path &filename)=0
- virtual bool Write (const std::filesystem::path &filename, const std::string &content)=0

10.15.1 Detailed Description

Custom preset handler helper Derive from this class and call CInstance::SetPresetManager

Definition at line 798 of file sound4.x1.cloud_dyn.hpp.

10.15.2 Constructor & Destructor Documentation

10.15.2.1 CPresetLoader()

```
sound4::cloudx1::dyn::CPresetLoader::CPresetLoader ( ) [default]
```

10.15.2.2 ~CPresetLoader()

```
virtual sound4::cloudx1::dyn::CPresetLoader::~CPresetLoader ( ) [virtual], [default]
```

10.15.3 Member Function Documentation

10.15.3.1 Exists()

```
virtual bool sound4::cloudx1::dyn::CPresetLoader::Exists (
            const std::filesystem::path & name ) [pure virtual]
```

Implemented in MyPresetManager, and MyPresetManager.

10.15.3.2 GetAll()

```
virtual std::vector< std::filesystem::path > sound4::cloudx1::dyn::CPresetLoader::GetAll ( )
[pure virtual]
```

Implemented in MyPresetManager, and MyPresetManager.

10.15.3.3 IsReadOnly()

```
virtual bool sound4::cloudx1::dyn::CPresetLoader::IsReadOnly ( ) [pure virtual]
```

Implemented in MyPresetManager, and MyPresetManager.

10.15.3.4 Read()

```
virtual std::string sound4::cloudx1::dyn::CPresetLoader::Read (
            const std::filesystem::path & filename ) [pure virtual]
```

Implemented in MyPresetManager, and MyPresetManager.

10.15.3.5 Remove()

```
virtual bool sound4::cloudx1::dyn::CPresetLoader::Remove (
            const std::filesystem::path & name ) [pure virtual]
```

Implemented in MyPresetManager, and MyPresetManager.

10.15.3.6 Rename()

```
virtual bool sound4::cloudx1::dyn::CPresetLoader::Rename (
            const std::filesystem::path & from,
            const std::filesystem::path & to )  [pure virtual]
```

Implemented in MyPresetManager, and MyPresetManager.

10.15.3.7 Write()

```
virtual bool sound4::cloudx1::dyn::CPresetLoader::Write (
            const std::filesystem::path & filename,
            const std::string & content )  [pure virtual]
```

Implemented in MyPresetManager, and MyPresetManager.

The documentation for this class was generated from the following file:

- sound4.x1.cloud_dyn.hpp

10.16 sound4::CPresetLoader Class Reference

Custom preset handler helper.

```
#include <sound4cl.hpp>
```

Inheritance diagram for sound4::CPresetLoader:

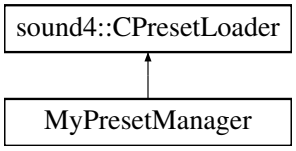

Public Member Functions

- CPresetLoader ()=default
- virtual ~CPresetLoader ()=default
- virtual bool IsReadOnly ()=0
- virtual bool Exists (const std::filesystem::path &name)=0
- virtual bool Remove (const std::filesystem::path &name)=0
- virtual bool Rename (const std::filesystem::path &from, const std::filesystem::path &to)=0
- virtual std::vector< std::filesystem::path > GetAll ()=0
- virtual std::string Read (const std::filesystem::path &filename)=0
- virtual bool Write (const std::filesystem::path &filename, const std::string &content)=0

10.16.1 Detailed Description

Derive from this class and call CInstance::SetPresetManager

Definition at line 740 of file sound4cl.hpp.

10.16.2 Constructor & Destructor Documentation

10.16.2.1 CPresetLoader()

```
sound4::CPresetLoader::CPresetLoader ( ) [default]
```

10.16.2.2 ~CPresetLoader()

```
virtual sound4::CPresetLoader::~CPresetLoader ( ) [virtual], [default]
```

10.16.3 Member Function Documentation

10.16.3.1 Exists()

```
virtual bool sound4::CPresetLoader::Exists (
            const std::filesystem::path & name ) [pure virtual]
```

Implemented in MyPresetManager, and MyPresetManager.

10.16.3.2 GetAll()

```
virtual std::vector< std::filesystem::path > sound4::CPresetLoader::GetAll ( ) [pure virtual]
```

Implemented in MyPresetManager, and MyPresetManager.

10.16.3.3 IsReadOnly()

```
virtual bool sound4::CPresetLoader::IsReadOnly ( ) [pure virtual]
```

Implemented in MyPresetManager, and MyPresetManager.

10.16.3.4 Read()

```
virtual std::string sound4::CPresetLoader::Read (
            const std::filesystem::path & filename ) [pure virtual]
```

Implemented in MyPresetManager, and MyPresetManager.

10.16.3.5 Remove()

```
virtual bool sound4::CPresetLoader::Remove (
            const std::filesystem::path & name ) [pure virtual]
```

Implemented in MyPresetManager, and MyPresetManager.

10.16.3.6 Rename()

```
virtual bool sound4::CPresetLoader::Rename (
            const std::filesystem::path & from,
            const std::filesystem::path & to )  [pure virtual]
```

Implemented in MyPresetManager, and MyPresetManager.

10.16.3.7 Write()

```
virtual bool sound4::CPresetLoader::Write (
            const std::filesystem::path & filename,
            const std::string & content )  [pure virtual]
```

Implemented in MyPresetManager, and MyPresetManager.

The documentation for this class was generated from the following file:

- sound4cl.hpp

10.17 sound4::CProcessor Class Reference

Dynamic library interface.

```
#include <sound4cl.hpp>
```

Public Member Functions

- CProcessor ()=default
- bool Load (const std::filesystem::path &filepath)

  Loads the library.
- bool IsOk () const

  Check if the library was loaded correctly.
- void AudioConvertFrom (const uint8_t ∗payload, float ∗output, size_t nSpl, sound4cl_SampleFormat fmt)
- void AudioConvertTo (const float ∗input, uint8_t ∗payload, size_t nSpl, sound4cl_SampleFormat fmt)
- void StereoToMono (const float ∗input, float ∗output, size_t nSpl)
- void MonoToStereo (const float ∗input, float ∗output, size_t nSpl)
- void StereoToMono_Planar (const float ∗inputL, const float ∗inputR, float ∗output, size_t nSpl)
- void MonoToStereo_Planar (const float ∗input, float ∗outputL, float ∗outputR, size_t nSpl)
- void AudioMonoFromLiveStereo (const uint8_t ∗payload, float ∗output)
- void AudioMonoToLiveStereo (const float ∗input, uint8_t ∗payload)
- std::string GetVersion ()
- unsigned int GetChunkSizeInFrames ()
- std::vector< unsigned int > GetPossibleChunkSizeInFrames ()
- unsigned int GetChannelCount ()
- unsigned int GetAudioInputCount ()
- unsigned int GetAudioOutputCount ()
- unsigned int GetSampleRate ()
- std::string GetFormatName (const sound4cl_SampleFormat fmt)
- sound4cl_SampleFormat GetFormatFromName (const std::string &name)
- unsigned int GetBytesFromFormat (const sound4cl_SampleFormat fmt)
- void SetLogSeverity (LogSeverity severity)
- void SetLoggerCallback (log_cb_t cb)

Protected Member Functions

- template<typename T >
  helper::DynFuncHolder< T > GetPrefixSymbol (const std::string &name)

Protected Attributes

- helper::DynFuncHolder< decltype(sound4cl_GetVersion) > fnGetVersion
- helper::DynFuncHolder< decltype(sound4cl_GetChunkSizeInFrames) > fnGetChunkSizeInFrames
- helper::DynFuncHolder< decltype(sound4cl_GetChannelCount) > fnGetChannelCount
- helper::DynFuncHolder< decltype(sound4cl_GetAudioInputCount) > fnGetAudioInputCount
- helper::DynFuncHolder< decltype(sound4cl_GetAudioOutputCount) > fnGetAudioOutputCount
- helper::DynFuncHolder< decltype(sound4cl_GetSampleRate) > fnGetSampleRate
- helper::DynFuncHolder< decltype(sound4cl_SetLoggerCallback) > fnSetLoggerCallback
- helper::DynFuncHolder< decltype(sound4cl_SetLogSeverity) > fnSetLogSeverity
- helper::DynFuncHolder< decltype(sound4cl_NewParameters) > fnNewParameters
- helper::DynFuncHolder< decltype(sound4cl_FreeParameters) > fnFreeParameters
- helper::DynFuncHolder< decltype(sound4cl_SetParameter) > fnSetParameter
- helper::DynFuncHolder< decltype(sound4cl_GetParameter) > fnGetParameter
- helper::DynFuncHolder< decltype(sound4cl_FreeParameterValue) > fnFreeParameterValue
- helper::DynFuncHolder< decltype(sound4cl_InitProcess) > fnInitProcess
- helper::DynFuncHolder< decltype(sound4cl_InitProcess2) > fnInitProcess2
- helper::DynFuncHolder< decltype(sound4cl_TerminateProcess) > fnTerminateProcess
- helper::DynFuncHolder< decltype(sound4cl_ExitProcess) > fnExitProcess
- helper::DynFuncHolder< decltype(sound4cl_StartUpdateThread) > fnStartUpdateThread
- helper::DynFuncHolder< decltype(sound4cl_StopUpdateThread) > fnStopUpdateThread
- helper::DynFuncHolder< decltype(sound4cl_WaitUpdateThreadReady) > fnWaitUpdateThreadReady
- helper::DynFuncHolder< decltype(sound4cl_ProcessAudio) > fnProcessAudio
- helper::DynFuncHolder< decltype(sound4cl_ProcessAudio_Planar) > fnProcessAudio_Planar
- helper::DynFuncHolder< decltype(sound4cl_GetBufferIn) > fnGetBufferIn
- helper::DynFuncHolder< decltype(sound4cl_GetBufferOut) > fnGetBufferOut
- helper::DynFuncHolder< decltype(sound4cl_GetEstimatedDelay) > fnGetEstimatedDelay
- helper::DynFuncHolder< decltype(sound4cl_GetFormatName) > fnGetFormatName
- helper::DynFuncHolder< decltype(sound4cl_GetFormatFromName) > fnGetFormatFromName
- helper::DynFuncHolder< decltype(sound4cl_GetBytesFromFormat) > fnGetBytesFromFormat
- helper::DynFuncHolder< decltype(sound4cl_GetMaxPacketFrame) > fnGetMaxPacketFrame
- helper::DynFuncHolder< decltype(sound4cl_AddAudio) > fnAddAudio
- helper::DynFuncHolder< decltype(sound4cl_AddPadAudio) > fnAddPadAudio
- helper::DynFuncHolder< decltype(sound4cl_GetOutputCount) > fnGetOutputCount
- helper::DynFuncHolder< decltype(sound4cl_GetAudio) > fnGetAudio
- helper::DynFuncHolder< decltype(sound4cl_AudioConvertFrom) > fnAudioConvertFrom
- helper::DynFuncHolder< decltype(sound4cl_AudioConvertTo) > fnAudioConvertTo
- helper::DynFuncHolder< decltype(sound4cl_StereoToMono) > fnStereoToMono
- helper::DynFuncHolder< decltype(sound4cl_MonoToStereo) > fnMonoToStereo
- helper::DynFuncHolder< decltype(sound4cl_AudioMonoFromLiveStereo) > fnAudioMonoFromLiveStereo
- helper::DynFuncHolder< decltype(sound4cl_AudioMonoToLiveStereo) > fnAudioMonoToLiveStereo
- helper::DynFuncHolder< decltype(sound4cl_NewClient) > fnNewClient
- helper::DynFuncHolder< decltype(sound4cl_DeleteClient) > fnDeleteClient
- helper::DynFuncHolder< decltype(sound4cl_ProcessJson) > fnProcessJson
- helper::DynFuncHolder< decltype(sound4cl_FreeJsonAnswer) > fnFreeJsonAnswer
- helper::DynFuncHolder< decltype(sound4cl_SaveState) > fnSaveState
- helper::DynFuncHolder< decltype(sound4cl_Webserver_tcp) > fnWebserver_tcp
- helper::DynFuncHolder< decltype(sound4cl_Webserver_tcp2) > fnWebserver_tcp2
- helper::DynFuncHolder< decltype(sound4cl_Webserver) > fnWebserver

- helper::DynFuncHolder< decltype(sound4cl_Webserver_Stop) > fnWebserver_Stop
- helper::DynFuncHolder< decltype(sound4cl_Webserver_Status) > fnWebserver_Status
- helper::DynFuncHolder< decltype(sound4cl_StereoToMono_Planar) > fnStereoToMono_Planar
- helper::DynFuncHolder< decltype(sound4cl_MonoToStereo_Planar) > fnMonoToStereo_Planar
- helper::DynFuncHolder< decltype(sound4cl_SetMetadata) > fnSetMetadata
- helper::DynFuncHolder< decltype(sound4cl_GetMetadataInfos) > fnGetMetadataInfos
- helper::DynFuncHolder< decltype(sound4cl_FreeMetadataInfos) > fnFreeMetadataInfos
- helper::DynFuncHolder< decltype(sound4cl_SetPresetManager) > fnSetPresetManager
- helper::DynFuncHolder< decltype(sound4cl_PresetManager_InformChange) > fnPresetManager_InformChange
- helper::DynFuncHolder< decltype(sound4cl_GetPossibleChunkSizeInFrames) > fnGetPossibleChunkSizeInFrames
- helper::DynFuncHolder< decltype(sound4cl_GetProcessChunkFrames) > fnGetProcessChunkFrames
- helper::DynFuncHolder< decltype(sound4cl_InitProcess3) > fnInitProcess3
- helper::DynFuncHolder< decltype(sound4cl_NewBus) > fnNewBus
- helper::DynFuncHolder< decltype(sound4cl_FreeBus) > fnFreeBus
- helper::DynFuncHolder< decltype(sound4cl_SetInstanceBus) > fnSetInstanceBus
- helper::DynFuncHolder< decltype(sound4cl_SetMetadataMulti) > fnSetMetadataMulti
- helper::DynFuncHolder< decltype(sound4cl_Webserver_SetAppHealth) > fnWebserver_SetAppHealth
- helper::DynFuncHolder< decltype(sound4cl_Webserver_GetAppHealth) > fnWebserver_GetAppHealth
- helper::DynFuncHolder< decltype(sound4cl_Webserver_FreeString) > fnWebserver_FreeString

Friends

- class CBus
- class CInstance

10.17.1 Detailed Description

Once you loaded the library with Load(), if it succeed you can use all the standard C functions from this library.

Definition at line 276 of file sound4cl.hpp.

10.17.2 Constructor & Destructor Documentation

10.17.2.1 CProcessor()

```
sound4::CProcessor::CProcessor ( ) [default]
```

10.17.3 Member Function Documentation

10.17.3.1 AudioConvertFrom()

```
void sound4::CProcessor::AudioConvertFrom (
            const uint8_t * payload,
            float * output,
            size_t nSpl,
            sound4cl_SampleFormat fmt ) [inline]
```

Conversion helpers

Definition at line 573 of file sound4cl.hpp.

10.17.3.2 AudioConvertTo()

```
void sound4::CProcessor::AudioConvertTo (
            const float * input,
            uint8_t * payload,
            size_t nSpl,
            sound4cl_SampleFormat fmt )  [inline]
```

Definition at line 575 of file sound4cl.hpp.

10.17.3.3 AudioMonoFromLiveStereo()

```
void sound4::CProcessor::AudioMonoFromLiveStereo (
            const uint8_t * payload,
            float * output )  [inline]
```

Definition at line 585 of file sound4cl.hpp.

10.17.3.4 AudioMonoToLiveStereo()

```
void sound4::CProcessor::AudioMonoToLiveStereo (
            const float * input,
            uint8_t * payload )  [inline]
```

Definition at line 587 of file sound4cl.hpp.

10.17.3.5 GetAudioInputCount()

```
unsigned int sound4::CProcessor::GetAudioInputCount ( )  [inline]
```

Get the number of inputs for this process

Remarks

All inputs have sound4cl_GetChannelCount() channels

Returns

The process input count

Definition at line 645 of file sound4cl.hpp.

10.17.3.6 GetAudioOutputCount()

```
unsigned int sound4::CProcessor::GetAudioOutputCount ( )  [inline]
```

Get the number of outputs for this process

Remarks

All outputs have sound4cl_GetChannelCount() channels

Returns

The process outputs count

Definition at line 655 of file sound4cl.hpp.

10.17.3.7 GetBytesFromFormat()

```
unsigned int sound4::CProcessor::GetBytesFromFormat (
            const sound4cl_SampleFormat fmt ) [inline]
```

Get the format byte size

Parameters

fmt	the format

Returns

the number of bytes used by this format for a single channel audio sample

Definition at line 692 of file sound4cl.hpp.

10.17.3.8 GetChannelCount()

```
unsigned int sound4::CProcessor::GetChannelCount ( ) [inline]
```

Get the number of channels needed by this process

Returns

The process channels count

Definition at line 635 of file sound4cl.hpp.

10.17.3.9 GetChunkSizeInFrames()

```
unsigned int sound4::CProcessor::GetChunkSizeInFrames ( ) [inline]
```

Get the number of frames in a process chunk.

The output will be available only by chunks of this size.

Note

A Frame is a set of sound4cl_GetChannelCount samples

Returns

The process chunk size in frame

Definition at line 606 of file sound4cl.hpp.

10.17.3.10 GetFormatFromName()

```
sound4cl_SampleFormat sound4::CProcessor::GetFormatFromName (
            const std::string & name ) [inline]
```

Convert string to format

Parameters

name	the format string

Returns

the matching format, or INVALID_FORMAT if invalid.

Definition at line 683 of file sound4cl.hpp.

10.17.3.11 GetFormatName()

```
std::string sound4::CProcessor::GetFormatName (
            const sound4cl_SampleFormat fmt ) [inline]
```

Convert format to string

Parameters

fmt	the format

Returns

the string name of the format

Definition at line 674 of file sound4cl.hpp.

10.17.3.12 GetPossibleChunkSizeInFrames()

```
std::vector< unsigned int > sound4::CProcessor::GetPossibleChunkSizeInFrames ( ) [inline]
```

Get the possibles number of frames in a process chunk.

The output will be available only by chunks of this size.

Note

A Frame is a set of sound4cl_GetChannelCount samples

Returns

An vector of possible process chunk size in frame

Definition at line 617 of file sound4cl.hpp.

10.17.3.13 GetPrefixSymbol()

```
template<typename T >
helper::DynFuncHolder< T > sound4::CProcessor::GetPrefixSymbol (
            const std::string & name )  [inline], [protected]
```

Definition at line 370 of file sound4cl.hpp.

10.17.3.14 GetSampleRate()

```
unsigned int sound4::CProcessor::GetSampleRate ( )  [inline]
```

Get the processing sample-rate

Remarks

For now, always return 48000, but should be checked for backward compatibility

Returns

The process sample-rate in Hz

Definition at line 665 of file sound4cl.hpp.

10.17.3.15 GetVersion()

```
std::string sound4::CProcessor::GetVersion ( )  [inline]
```

Get the process version string

Returns

version string

Definition at line 595 of file sound4cl.hpp.

10.17.3.16 IsOk()

```
bool sound4::CProcessor::IsOk ( ) const  [inline]
```

Returns

true if OK.

false if not OK.

Definition at line 565 of file sound4cl.hpp.

10.17.3.17 Load()

```
bool sound4::CProcessor::Load (
            const std::filesystem::path & filepath )  [inline]
```

Parameters

filepath	the path of the library to load.

Returns

true if library was loaded correctly.

false if library load failed. Do not use in this case !

Definition at line 385 of file sound4cl.hpp.

10.17.3.18 MonoToStereo()

```
void sound4::CProcessor::MonoToStereo (
            const float * input,
            float * output,
            size_t nSpl )  [inline]
```

Definition at line 579 of file sound4cl.hpp.

10.17.3.19 MonoToStereo_Planar()

```
void sound4::CProcessor::MonoToStereo_Planar (
            const float * input,
            float * outputL,
            float * outputR,
            size_t nSpl )  [inline]
```

Definition at line 583 of file sound4cl.hpp.

10.17.3.20 SetLoggerCallback()

```
void sound4::CProcessor::SetLoggerCallback (
            log_cb_t cb )  [inline]
```

Sets the log callback. If not set, console output will be used.

Definition at line 704 of file sound4cl.hpp.

10.17.3.21 SetLogSeverity()

```
void sound4::CProcessor::SetLogSeverity (
            LogSeverity severity )  [inline]
```

Sets the log severity (global)

Definition at line 698 of file sound4cl.hpp.

10.17.3.22 StereoToMono()

```
void sound4::CProcessor::StereoToMono (
            const float * input,
            float * output,
            size_t nSpl )  [inline]
```

Definition at line 577 of file sound4cl.hpp.

10.17.3.23 StereoToMono_Planar()

```
void sound4::CProcessor::StereoToMono_Planar (
            const float * inputL,
            const float * inputR,
            float * output,
            size_t nSpl )  [inline]
```

Definition at line 581 of file sound4cl.hpp.

10.17.4 Friends And Related Symbol Documentation

10.17.4.1 CBus

```
friend class CBus  [friend]
```

Definition at line 282 of file sound4cl.hpp.

10.17.4.2 CInstance

```
friend class CInstance  [friend]
```

Definition at line 283 of file sound4cl.hpp.

10.17.5 Member Data Documentation

10.17.5.1 fnAddAudio

```
helper::DynFuncHolder< decltype(sound4cl_AddAudio ) > sound4::CProcessor::fnAddAudio  [protected]
```

Definition at line 315 of file sound4cl.hpp.

10.17.5.2 fnAddPadAudio

```
helper::DynFuncHolder< decltype(sound4cl_AddPadAudio ) > sound4::CProcessor::fnAddPadAudio
[protected]
```

Definition at line 316 of file sound4cl.hpp.

10.17.5.3 fnAudioConvertFrom

```
helper::DynFuncHolder< decltype(sound4cl_AudioConvertFrom ) > sound4::CProcessor::fnAudio↩
ConvertFrom [protected]
```

Definition at line 319 of file sound4cl.hpp.

10.17.5.4 fnAudioConvertTo

```
helper::DynFuncHolder< decltype(sound4cl_AudioConvertTo ) > sound4::CProcessor::fnAudio↩
ConvertTo [protected]
```

Definition at line 320 of file sound4cl.hpp.

10.17.5.5 fnAudioMonoFromLiveStereo

```
helper::DynFuncHolder< decltype(sound4cl_AudioMonoFromLiveStereo) > sound4::CProcessor::fn↩
AudioMonoFromLiveStereo [protected]
```

Definition at line 323 of file sound4cl.hpp.

10.17.5.6 fnAudioMonoToLiveStereo

```
helper::DynFuncHolder< decltype(sound4cl_AudioMonoToLiveStereo ) > sound4::CProcessor::fn↩
AudioMonoToLiveStereo [protected]
```

Definition at line 324 of file sound4cl.hpp.

10.17.5.7 fnDeleteClient

```
helper::DynFuncHolder< decltype(sound4cl_DeleteClient ) > sound4::CProcessor::fnDeleteClient
[protected]
```

Definition at line 326 of file sound4cl.hpp.

10.17.5.8 fnExitProcess

```
helper::DynFuncHolder< decltype(sound4cl_ExitProcess ) > sound4::CProcessor::fnExitProcess
[protected]
```

Definition at line 302 of file sound4cl.hpp.

10.17.5.9 fnFreeBus

```
helper::DynFuncHolder< decltype(sound4cl_FreeBus ) > sound4::CProcessor::fnFreeBus [protected]
```

Definition at line 358 of file sound4cl.hpp.

10.17.5.10 fnFreeJsonAnswer

```
helper::DynFuncHolder< decltype(sound4cl_FreeJsonAnswer ) > sound4::CProcessor::fnFreeJson↩
Answer [protected]
```

Definition at line 328 of file sound4cl.hpp.

10.17.5.11 fnFreeMetadataInfos

```
helper::DynFuncHolder< decltype(sound4cl_FreeMetadataInfos ) > sound4::CProcessor::fnFree↩
MetadataInfos [protected]
```

Definition at line 345 of file sound4cl.hpp.

10.17.5.12 fnFreeParameters

```
helper::DynFuncHolder< decltype(sound4cl_FreeParameters ) > sound4::CProcessor::fnFreeParameters
[protected]
```

Definition at line 295 of file sound4cl.hpp.

10.17.5.13 fnFreeParameterValue

```
helper::DynFuncHolder< decltype(sound4cl_FreeParameterValue ) > sound4::CProcessor::fnFree↩
ParameterValue [protected]
```

Definition at line 298 of file sound4cl.hpp.

10.17.5.14 fnGetAudio

```
helper::DynFuncHolder< decltype(sound4cl_GetAudio ) > sound4::CProcessor::fnGetAudio [protected]
```

Definition at line 318 of file sound4cl.hpp.

10.17.5.15 fnGetAudioInputCount

```
helper::DynFuncHolder< decltype(sound4cl_GetAudioInputCount ) > sound4::CProcessor::fnGet↩
AudioInputCount [protected]
```

Definition at line 289 of file sound4cl.hpp.

10.17.5.16 fnGetAudioOutputCount

```
helper::DynFuncHolder< decltype(sound4cl_GetAudioOutputCount ) > sound4::CProcessor::fnGet↩
AudioOutputCount [protected]
```

Definition at line 290 of file sound4cl.hpp.

10.17.5.17 fnGetBufferIn

```
helper::DynFuncHolder< decltype(sound4cl_GetBufferIn ) > sound4::CProcessor::fnGetBufferIn
[protected]
```

Definition at line 308 of file sound4cl.hpp.

10.17.5.18 fnGetBufferOut

```
helper::DynFuncHolder< decltype(sound4cl_GetBufferOut ) > sound4::CProcessor::fnGetBufferOut
[protected]
```

Definition at line 309 of file sound4cl.hpp.

10.17.5.19 fnGetBytesFromFormat

```
helper::DynFuncHolder< decltype(sound4cl_GetBytesFromFormat ) > sound4::CProcessor::fnGet↩
BytesFromFormat [protected]
```

Definition at line 313 of file sound4cl.hpp.

10.17.5.20 fnGetChannelCount

```
helper::DynFuncHolder< decltype(sound4cl_GetChannelCount ) > sound4::CProcessor::fnGetChannel↩
Count [protected]
```

Definition at line 288 of file sound4cl.hpp.

10.17.5.21 fnGetChunkSizeInFrames

```
helper::DynFuncHolder< decltype(sound4cl_GetChunkSizeInFrames ) > sound4::CProcessor::fnGet↩
ChunkSizeInFrames [protected]
```

Definition at line 287 of file sound4cl.hpp.

10.17.5.22 fnGetEstimatedDelay

```
helper::DynFuncHolder< decltype(sound4cl_GetEstimatedDelay ) > sound4::CProcessor::fnGet↩
EstimatedDelay [protected]
```

Definition at line 310 of file sound4cl.hpp.

10.17.5.23 fnGetFormatFromName

```
helper::DynFuncHolder< decltype(sound4cl_GetFormatFromName ) > sound4::CProcessor::fnGet↩
FormatFromName [protected]
```

Definition at line 312 of file sound4cl.hpp.

10.17.5.24 fnGetFormatName

```
helper::DynFuncHolder< decltype(sound4cl_GetFormatName ) > sound4::CProcessor::fnGetFormatName
[protected]
```

Definition at line 311 of file sound4cl.hpp.

10.17.5.25 fnGetMaxPacketFrame

```
helper::DynFuncHolder< decltype(sound4cl_GetMaxPacketFrame ) > sound4::CProcessor::fnGetMax↩
PacketFrame [protected]
```

Definition at line 314 of file sound4cl.hpp.

10.17.5.26 fnGetMetadataInfos

```
helper::DynFuncHolder< decltype(sound4cl_GetMetadataInfos ) > sound4::CProcessor::fnGet↩
MetadataInfos [protected]
```

Definition at line 344 of file sound4cl.hpp.

10.17.5.27 fnGetOutputCount

```
helper::DynFuncHolder< decltype(sound4cl_GetOutputCount ) > sound4::CProcessor::fnGetOutput↩
Count [protected]
```

Definition at line 317 of file sound4cl.hpp.

10.17.5.28 fnGetParameter

```
helper::DynFuncHolder< decltype(sound4cl_GetParameter ) > sound4::CProcessor::fnGetParameter
[protected]
```

Definition at line 297 of file sound4cl.hpp.

10.17.5.29 fnGetPossibleChunkSizeInFrames

```
helper::DynFuncHolder< decltype(sound4cl_GetPossibleChunkSizeInFrames ) > sound4::CProcessor↩
::fnGetPossibleChunkSizeInFrames [protected]
```

Definition at line 352 of file sound4cl.hpp.

10.17.5.30 fnGetProcessChunkFrames

```
helper::DynFuncHolder< decltype(sound4cl_GetProcessChunkFrames ) > sound4::CProcessor::fnGet↩
ProcessChunkFrames [protected]
```

Definition at line 353 of file sound4cl.hpp.

10.17.5.31 fnGetSampleRate

```
helper::DynFuncHolder< decltype(sound4cl_GetSampleRate ) > sound4::CProcessor::fnGetSampleRate
[protected]
```

Definition at line 291 of file sound4cl.hpp.

10.17.5.32 fnGetVersion

```
helper::DynFuncHolder< decltype(sound4cl_GetVersion ) > sound4::CProcessor::fnGetVersion
[protected]
```

Definition at line 286 of file sound4cl.hpp.

10.17.5.33 fnInitProcess

```
helper::DynFuncHolder< decltype(sound4cl_InitProcess ) > sound4::CProcessor::fnInitProcess
[protected]
```

Definition at line 299 of file sound4cl.hpp.

10.17.5.34 fnInitProcess2

```
helper::DynFuncHolder< decltype(sound4cl_InitProcess2 ) > sound4::CProcessor::fnInitProcess2
[protected]
```

Definition at line 300 of file sound4cl.hpp.

10.17.5.35 fnInitProcess3

```
helper::DynFuncHolder< decltype(sound4cl_InitProcess3 ) > sound4::CProcessor::fnInitProcess3
[protected]
```

Definition at line 354 of file sound4cl.hpp.

10.17.5.36 fnMonoToStereo

```
helper::DynFuncHolder< decltype(sound4cl_MonoToStereo ) > sound4::CProcessor::fnMonoToStereo
[protected]
```

Definition at line 322 of file sound4cl.hpp.

10.17.5.37 fnMonoToStereo_Planar

```
helper::DynFuncHolder< decltype(sound4cl_MonoToStereo_Planar ) > sound4::CProcessor::fnMono↩
ToStereo_Planar [protected]
```

Definition at line 340 of file sound4cl.hpp.

10.17.5.38 fnNewBus

```
helper::DynFuncHolder< decltype(sound4cl_NewBus ) > sound4::CProcessor::fnNewBus [protected]
```

Definition at line 357 of file sound4cl.hpp.

10.17.5.39 fnNewClient

```
helper::DynFuncHolder< decltype(sound4cl_NewClient ) > sound4::CProcessor::fnNewClient [protected]
```

Definition at line 325 of file sound4cl.hpp.

10.17.5.40 fnNewParameters

```
helper::DynFuncHolder< decltype(sound4cl_NewParameters ) > sound4::CProcessor::fnNewParameters
[protected]
```

Definition at line 294 of file sound4cl.hpp.

10.17.5.41 fnPresetManager_InformChange

```
helper::DynFuncHolder< decltype(sound4cl_PresetManager_InformChange ) > sound4::CProcessor↩
::fnPresetManager_InformChange [protected]
```

Definition at line 349 of file sound4cl.hpp.

10.17.5.42 fnProcessAudio

```
helper::DynFuncHolder< decltype(sound4cl_ProcessAudio ) > sound4::CProcessor::fnProcessAudio
[protected]
```

Definition at line 306 of file sound4cl.hpp.

10.17.5.43 fnProcessAudio_Planar

```
helper::DynFuncHolder< decltype(sound4cl_ProcessAudio_Planar ) > sound4::CProcessor::fn↩
ProcessAudio_Planar [protected]
```

Definition at line 307 of file sound4cl.hpp.

10.17.5.44 fnProcessJson

```
helper::DynFuncHolder< decltype(sound4cl_ProcessJson ) > sound4::CProcessor::fnProcessJson
[protected]
```

Definition at line 327 of file sound4cl.hpp.

10.17.5.45 fnSaveState

```
helper::DynFuncHolder< decltype(sound4cl_SaveState ) > sound4::CProcessor::fnSaveState [protected]
```

Definition at line 329 of file sound4cl.hpp.

10.17.5.46 fnSetInstanceBus

```
helper::DynFuncHolder< decltype(sound4cl_SetInstanceBus ) > sound4::CProcessor::fnSetInstance↩
Bus [protected]
```

Definition at line 359 of file sound4cl.hpp.

10.17.5.47 fnSetLoggerCallback

```
helper::DynFuncHolder< decltype(sound4cl_SetLoggerCallback ) > sound4::CProcessor::fnSet↩
LoggerCallback [protected]
```

Definition at line 292 of file sound4cl.hpp.

10.17.5.48 fnSetLogSeverity

```
helper::DynFuncHolder< decltype(sound4cl_SetLogSeverity ) > sound4::CProcessor::fnSetLog↩
Severity [protected]
```

Definition at line 293 of file sound4cl.hpp.

10.17.5.49 fnSetMetadata

```
helper::DynFuncHolder< decltype(sound4cl_SetMetadata ) > sound4::CProcessor::fnSetMetadata
[protected]
```

Definition at line 343 of file sound4cl.hpp.

10.17.5.50 fnSetMetadataMulti

```
helper::DynFuncHolder< decltype(sound4cl_SetMetadataMulti ) > sound4::CProcessor::fnSet↩
MetadataMulti [protected]
```

Definition at line 362 of file sound4cl.hpp.

10.17.5.51 fnSetParameter

```
helper::DynFuncHolder< decltype(sound4cl_SetParameter ) > sound4::CProcessor::fnSetParameter
[protected]
```

Definition at line 296 of file sound4cl.hpp.

10.17.5.52 fnSetPresetManager

```
helper::DynFuncHolder< decltype(sound4cl_SetPresetManager ) > sound4::CProcessor::fnSet↩
PresetManager [protected]
```

Definition at line 348 of file sound4cl.hpp.

10.17.5.53 fnStartUpdateThread

```
helper::DynFuncHolder< decltype(sound4cl_StartUpdateThread ) > sound4::CProcessor::fnStart↩
UpdateThread [protected]
```

Definition at line 303 of file sound4cl.hpp.

10.17.5.54 fnStereoToMono

```
helper::DynFuncHolder< decltype(sound4cl_StereoToMono ) > sound4::CProcessor::fnStereoToMono
[protected]
```

Definition at line 321 of file sound4cl.hpp.

10.17.5.55 fnStereoToMono_Planar

```
helper::DynFuncHolder< decltype(sound4cl_StereoToMono_Planar ) > sound4::CProcessor::fn↩
StereoToMono_Planar [protected]
```

Definition at line 339 of file sound4cl.hpp.

10.17.5.56 fnStopUpdateThread

```
helper::DynFuncHolder< decltype(sound4cl_StopUpdateThread ) > sound4::CProcessor::fnStop↩
UpdateThread [protected]
```

Definition at line 304 of file sound4cl.hpp.

10.17.5.57 fnTerminateProcess

```
helper::DynFuncHolder< decltype(sound4cl_TerminateProcess ) > sound4::CProcessor::fnTerminate↩
Process [protected]
```

Definition at line 301 of file sound4cl.hpp.

10.17.5.58 fnWaitUpdateThreadReady

```
helper::DynFuncHolder< decltype(sound4cl_WaitUpdateThreadReady ) > sound4::CProcessor::fn↩
WaitUpdateThreadReady [protected]
```

Definition at line 305 of file sound4cl.hpp.

10.17.5.59 fnWebserver

```
helper::DynFuncHolder< decltype(sound4cl_Webserver ) > sound4::CProcessor::fnWebserver [protected]
```

Definition at line 334 of file sound4cl.hpp.

10.17.5.60 fnWebserver_FreeString

```
helper::DynFuncHolder< decltype(sound4cl_Webserver_FreeString ) > sound4::CProcessor::fn↩
Webserver_FreeString [protected]
```

Definition at line 367 of file sound4cl.hpp.

10.17.5.61 fnWebserver_GetAppHealth

```
helper::DynFuncHolder< decltype(sound4cl_Webserver_GetAppHealth ) > sound4::CProcessor::fn↩
Webserver_GetAppHealth [protected]
```

Definition at line 366 of file sound4cl.hpp.

10.17.5.62 fnWebserver_SetAppHealth

```
helper::DynFuncHolder< decltype(sound4cl_Webserver_SetAppHealth ) > sound4::CProcessor::fn↩
Webserver_SetAppHealth [protected]
```

Definition at line 365 of file sound4cl.hpp.

10.17.5.63 fnWebserver_Status

```
helper::DynFuncHolder< decltype(sound4cl_Webserver_Status ) > sound4::CProcessor::fnWebserver↩
_Status [protected]
```

Definition at line 336 of file sound4cl.hpp.

10.17.5.64 fnWebserver_Stop

```
helper::DynFuncHolder< decltype(sound4cl_Webserver_Stop ) > sound4::CProcessor::fnWebserver_↩
Stop [protected]
```

Definition at line 335 of file sound4cl.hpp.

10.17.5.65 fnWebserver_tcp

```
helper::DynFuncHolder< decltype(sound4cl_Webserver_tcp ) > sound4::CProcessor::fnWebserver_tcp
[protected]
```

Definition at line 332 of file sound4cl.hpp.

10.17.5.66 fnWebserver_tcp2

```
helper::DynFuncHolder< decltype(sound4cl_Webserver_tcp2 ) > sound4::CProcessor::fnWebserver_↩
tcp2 [protected]
```

Definition at line 333 of file sound4cl.hpp.

The documentation for this class was generated from the following file:

- sound4cl.hpp

10.18 sound4::cloudx1::dyn::helper::DynFuncHolder< T > Class Template Reference

Helper to wrap a function pointer.

```
#include <sound4.x1.cloud_dyn.hpp>
```

Public Member Functions

- DynFuncHolder ()=default
- DynFuncHolder (DynFunc_t a_ptr)
- operator bool () const
- bool IsOk () const
- operator T* () const

10.18.1 Detailed Description

template<typename T>
class sound4::cloudx1::dyn::helper::DynFuncHolder< T >

Parameters

T	is the function type, you may use decltype(fn)

Definition at line 92 of file sound4.x1.cloud_dyn.hpp.

10.18.2 Constructor & Destructor Documentation

10.18.2.1 DynFuncHolder() [1/2]

```
template<typename T >
sound4::cloudx1::dyn::helper::DynFuncHolder< T >::DynFuncHolder ( ) [default]
```

10.18.2.2 DynFuncHolder() [2/2]

```
template<typename T >
sound4::cloudx1::dyn::helper::DynFuncHolder< T >::DynFuncHolder (
            DynFunc_t a_ptr ) [inline]
```

Definition at line 97 of file sound4.x1.cloud_dyn.hpp.

10.18.3 Member Function Documentation

10.18.3.1 IsOk()

```
template<typename T >
bool sound4::cloudx1::dyn::helper::DynFuncHolder< T >::IsOk ( ) const [inline]
```

Definition at line 99 of file sound4.x1.cloud_dyn.hpp.

10.18.3.2 operator bool()

```
template<typename T >
sound4::cloudx1::dyn::helper::DynFuncHolder< T >::operator bool ( ) const [inline]
```

Definition at line 98 of file sound4.x1.cloud_dyn.hpp.

10.18.3.3 operator T∗()

```
template<typename T >
sound4::cloudx1::dyn::helper::DynFuncHolder< T >::operator T* ( ) const [inline]
```

Definition at line 100 of file sound4.x1.cloud_dyn.hpp.

The documentation for this class was generated from the following file:

- sound4.x1.cloud_dyn.hpp

10.19 sound4::helper::DynFuncHolder< T > Class Template Reference

Helper to wrap a function pointer.

```
#include <sound4cl.hpp>
```

Public Member Functions

- DynFuncHolder ()=default
- DynFuncHolder (DynFunc_t a_ptr)
- operator bool () const
- bool IsOk () const
- operator T∗ () const

10.19.1 Detailed Description

template<typename T>
class sound4::helper::DynFuncHolder< T >

Parameters

T	is the function type, you may use decltype(fn)

Definition at line 121 of file sound4cl.hpp.

10.19.2 Constructor & Destructor Documentation

10.19.2.1 DynFuncHolder() [1/2]

```
template<typename T >
sound4::helper::DynFuncHolder< T >::DynFuncHolder ( ) [default]
```

10.19.2.2 DynFuncHolder() [2/2]

```
template<typename T >
sound4::helper::DynFuncHolder< T >::DynFuncHolder (
            DynFunc_t a_ptr ) [inline]
```

Definition at line 126 of file sound4cl.hpp.

10.19.3 Member Function Documentation

10.19.3.1 IsOk()

```
template<typename T >
bool sound4::helper::DynFuncHolder< T >::IsOk ( ) const [inline]
```

Definition at line 128 of file sound4cl.hpp.

10.19.3.2 operator bool()

```
template<typename T >
sound4::helper::DynFuncHolder< T >::operator bool ( ) const [inline]
```

Definition at line 127 of file sound4cl.hpp.

10.19.3.3 operator T*()

```
template<typename T >
sound4::helper::DynFuncHolder< T >::operator T* ( ) const [inline]
```

Definition at line 129 of file sound4cl.hpp.

The documentation for this class was generated from the following file:

- sound4cl.hpp

10.20 MyPresetManager Class Reference

[Custom preset manager]

Inheritance diagram for MyPresetManager:

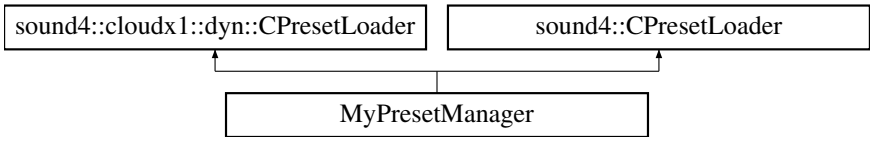

Public Member Functions

- MyPresetManager ()=default
- virtual ~MyPresetManager ()=default
- bool SetupPath (const std::filesystem::path &a_preset_path)
- virtual bool IsReadOnly () override
- virtual bool Exists (const std::filesystem::path &name) override
- virtual bool Remove (const std::filesystem::path &name) override
- virtual bool Rename (const std::filesystem::path &from, const std::filesystem::path &to) override
- virtual std::vector< std::filesystem::path > GetAll () override
- virtual std::string Read (const std::filesystem::path &filename) override
- virtual bool Write (const std::filesystem::path &filename, const std::string &content) override
- MyPresetManager ()=default
- virtual ~MyPresetManager ()=default
- bool SetupPath (const std::filesystem::path &a_preset_path)
- virtual bool IsReadOnly () override
- virtual bool Exists (const std::filesystem::path &name) override
- virtual bool Remove (const std::filesystem::path &name) override
- virtual bool Rename (const std::filesystem::path &from, const std::filesystem::path &to) override
- virtual std::vector< std::filesystem::path > GetAll () override
- virtual std::string Read (const std::filesystem::path &filename) override
- virtual bool Write (const std::filesystem::path &filename, const std::string &content) override

Public Member Functions inherited from sound4::cloudx1::dyn::CPresetLoader

- CPresetLoader ()=default
- virtual ~CPresetLoader ()=default

Public Member Functions inherited from sound4::CPresetLoader

- CPresetLoader ()=default
- virtual ~CPresetLoader ()=default

10.20.1 Detailed Description

Definition at line 119 of file sound4.x1.cloud-pipe-dyn.cpp.

10.20.2 Constructor & Destructor Documentation

10.20.2.1 MyPresetManager() [1/2]

```
MyPresetManager::MyPresetManager ( ) [default]
```

10.20.2.2 ~MyPresetManager() [1/2]

```
virtual MyPresetManager::~MyPresetManager ( ) [virtual], [default]
```

10.20.2.3 MyPresetManager() [2/2]

```
MyPresetManager::MyPresetManager ( ) [default]
```

10.20.2.4 ~MyPresetManager() [2/2]

```
virtual MyPresetManager::~MyPresetManager ( ) [virtual], [default]
```

10.20.3 Member Function Documentation

10.20.3.1 Exists() [1/2]

```
virtual bool MyPresetManager::Exists (
            const std::filesystem::path & name ) [inline], [override], [virtual]
```

Implements sound4::cloudx1::dyn::CPresetLoader.

Definition at line 137 of file sound4.x1.cloud-pipe-dyn.cpp.

10.20.3.2 Exists() [2/2]

```
virtual bool MyPresetManager::Exists (
            const std::filesystem::path & name ) [inline], [override], [virtual]
```

Implements sound4::cloudx1::dyn::CPresetLoader.

Definition at line 121 of file sound4cl-pipe.cpp.

10.20.3.3 GetAll() [1/2]

```
virtual std::vector< std::filesystem::path > MyPresetManager::GetAll ( ) [inline], [override],
[virtual]
```

Implements sound4::cloudx1::dyn::CPresetLoader.

Definition at line 153 of file sound4.x1.cloud-pipe-dyn.cpp.

10.20.3.4 GetAll() [2/2]

```
virtual std::vector< std::filesystem::path > MyPresetManager::GetAll ( ) [inline], [override],
[virtual]
```

Implements sound4::cloudx1::dyn::CPresetLoader.

Definition at line 137 of file sound4cl-pipe.cpp.

10.20.3.5 IsReadOnly() [1/2]

```
virtual bool MyPresetManager::IsReadOnly ( ) [inline], [override], [virtual]
```

Implements sound4::cloudx1::dyn::CPresetLoader.

Definition at line 136 of file sound4.x1.cloud-pipe-dyn.cpp.

10.20.3.6 IsReadOnly() [2/2]

```
virtual bool MyPresetManager::IsReadOnly ( ) [inline], [override], [virtual]
```

Implements sound4::cloudx1::dyn::CPresetLoader.

Definition at line 120 of file sound4cl-pipe.cpp.

10.20.3.7 Read() [1/2]

```
virtual std::string MyPresetManager::Read (
            const std::filesystem::path & filename ) [inline], [override], [virtual]
```

Implements sound4::cloudx1::dyn::CPresetLoader.

Definition at line 167 of file sound4.x1.cloud-pipe-dyn.cpp.

10.20.3.8 Read() [2/2]

```
virtual std::string MyPresetManager::Read (
            const std::filesystem::path & filename ) [inline], [override], [virtual]
```

Implements sound4::cloudx1::dyn::CPresetLoader.

Definition at line 151 of file sound4cl-pipe.cpp.

10.20.3.9 Remove() [1/2]

```
virtual bool MyPresetManager::Remove (
            const std::filesystem::path & name ) [inline], [override], [virtual]
```

Implements sound4::cloudx1::dyn::CPresetLoader.

Definition at line 142 of file sound4.x1.cloud-pipe-dyn.cpp.

10.20.3.10 Remove() [2/2]

```
virtual bool MyPresetManager::Remove (
            const std::filesystem::path & name )  [inline], [override], [virtual]
```

Implements sound4::cloudx1::dyn::CPresetLoader.

Definition at line 126 of file sound4cl-pipe.cpp.

10.20.3.11 Rename() [1/2]

```
virtual bool MyPresetManager::Rename (
            const std::filesystem::path & from,
            const std::filesystem::path & to )  [inline], [override], [virtual]
```

Implements sound4::cloudx1::dyn::CPresetLoader.

Definition at line 147 of file sound4.x1.cloud-pipe-dyn.cpp.

10.20.3.12 Rename() [2/2]

```
virtual bool MyPresetManager::Rename (
            const std::filesystem::path & from,
            const std::filesystem::path & to )  [inline], [override], [virtual]
```

Implements sound4::cloudx1::dyn::CPresetLoader.

Definition at line 131 of file sound4cl-pipe.cpp.

10.20.3.13 SetupPath() [1/2]

```
bool MyPresetManager::SetupPath (
            const std::filesystem::path & a_preset_path )  [inline]
```

Definition at line 124 of file sound4.x1.cloud-pipe-dyn.cpp.

10.20.3.14 SetupPath() [2/2]

```
bool MyPresetManager::SetupPath (
            const std::filesystem::path & a_preset_path )  [inline]
```

Definition at line 108 of file sound4cl-pipe.cpp.

10.20.3.15 Write() [1/2]

```
virtual bool MyPresetManager::Write (
            const std::filesystem::path & filename,
            const std::string & content )  [inline], [override], [virtual]
```

Implements sound4::cloudx1::dyn::CPresetLoader.

Definition at line 177 of file sound4.x1.cloud-pipe-dyn.cpp.

10.20.3.16 Write() [2/2]

```
virtual bool MyPresetManager::Write (
            const std::filesystem::path & filename,
            const std::string & content )  [inline], [override], [virtual]
```

Implements sound4::cloudx1::dyn::CPresetLoader.

Definition at line 161 of file sound4cl-pipe.cpp.

The documentation for this class was generated from the following files:

- sound4.x1.cloud-pipe-dyn.cpp
- sound4cl-pipe.cpp

10.21 sound4::cloudx1::dyn::helper::SampleFormat< T > Struct Template Reference

Helper for Sample format types.

```
#include <sound4.x1.cloud_dyn.hpp>
```

10.21.1 Detailed Description

template<typename T>
struct sound4::cloudx1::dyn::helper::SampleFormat< T >

Template Parameters

T	the C type for one audio sample

Definition at line 535 of file sound4.x1.cloud_dyn.hpp.

The documentation for this struct was generated from the following file:

- sound4.x1.cloud_dyn.hpp

10.22 sound4::cloudx1::helper::SampleFormat< T > Struct Template Reference

Helper for Sample format types.

```
#include <sound4.x1.cloud.hpp>
```

10.22.1 Detailed Description

template<typename T>
struct sound4::cloudx1::helper::SampleFormat< T >

Template Parameters

T	the C type for one audio sample

Definition at line 116 of file sound4.x1.cloud.hpp.

The documentation for this struct was generated from the following file:

- sound4.x1.cloud.hpp

10.23 sound4::helper::SampleFormat< T > Struct Template Reference

Helper for Sample format types.

```
#include <sound4cl.hpp>
```

10.23.1 Detailed Description

template<typename T>
struct sound4::helper::SampleFormat< T >

Template Parameters

T	the C type for one audio sample

Definition at line 91 of file sound4cl.hpp.

The documentation for this struct was generated from the following file:

- sound4cl.hpp

10.24 sound4::cloudx1::dyn::helper::SampleFormat< float > Struct Reference

```
#include <sound4.x1.cloud_dyn.hpp>
```

Public Attributes

- const cloudx1_SampleFormat format = F32_NATIVE

10.24.1 Detailed Description

Definition at line 546 of file sound4.x1.cloud_dyn.hpp.

10.24.2 Member Data Documentation

10.24.2.1 format

```
const cloudx1_SampleFormat sound4::cloudx1::dyn::helper::SampleFormat< float >::format =
F32_NATIVE
```

Definition at line 547 of file sound4.x1.cloud_dyn.hpp.

The documentation for this struct was generated from the following file:

- sound4.x1.cloud_dyn.hpp

10.25 sound4::cloudx1::helper::SampleFormat< float > Struct Reference

```
#include <sound4.x1.cloud.hpp>
```

Public Attributes

- const cloudx1_SampleFormat format = F32_NATIVE

10.25.1 Detailed Description

Definition at line 127 of file sound4.x1.cloud.hpp.

10.25.2 Member Data Documentation

10.25.2.1 format

```
const cloudx1_SampleFormat sound4::cloudx1::helper::SampleFormat< float >::format = F32_NATIVE
```

Definition at line 128 of file sound4.x1.cloud.hpp.

The documentation for this struct was generated from the following file:

- sound4.x1.cloud.hpp

10.26 sound4::helper::SampleFormat< float > Struct Reference

```
#include <sound4cl.hpp>
```

Public Attributes

- const sound4cl_SampleFormat format = F32_NATIVE

10.26.1 Detailed Description

Definition at line 102 of file sound4cl.hpp.

10.26.2 Member Data Documentation

10.26.2.1 format

```
const sound4cl_SampleFormat sound4::helper::SampleFormat< float >::format = F32_NATIVE
```

Definition at line 103 of file sound4cl.hpp.

The documentation for this struct was generated from the following file:

- sound4cl.hpp

10.27 sound4::cloudx1::dyn::helper::SampleFormat< int16_t > Struct Reference

```
#include <sound4.x1.cloud_dyn.hpp>
```

Public Attributes

- const cloudx1_SampleFormat format = S16_NATIVE

10.27.1 Detailed Description

Definition at line 538 of file sound4.x1.cloud_dyn.hpp.

10.27.2 Member Data Documentation

10.27.2.1 format

```
const cloudx1_SampleFormat sound4::cloudx1::dyn::helper::SampleFormat< int16_t >::format =
S16_NATIVE
```

Definition at line 539 of file sound4.x1.cloud_dyn.hpp.

The documentation for this struct was generated from the following file:

- sound4.x1.cloud_dyn.hpp

10.28 sound4::cloudx1::helper::SampleFormat< int16_t > Struct Reference

```
#include <sound4.x1.cloud.hpp>
```

Public Attributes

- const cloudx1_SampleFormat format = S16_NATIVE

10.28.1 Detailed Description

Definition at line 119 of file sound4.x1.cloud.hpp.

10.28.2 Member Data Documentation

10.28.2.1 format

```
const cloudx1_SampleFormat sound4::cloudx1::helper::SampleFormat< int16_t >::format = S16_NATIVE
```

Definition at line 120 of file sound4.x1.cloud.hpp.

The documentation for this struct was generated from the following file:

- sound4.x1.cloud.hpp

10.29 sound4::helper::SampleFormat< int16_t > Struct Reference

```
#include <sound4cl.hpp>
```

Public Attributes

- const sound4cl_SampleFormat format = S16_NATIVE

10.29.1 Detailed Description

Definition at line 94 of file sound4cl.hpp.

10.29.2 Member Data Documentation

10.29.2.1 format

```
const sound4cl_SampleFormat sound4::helper::SampleFormat< int16_t >::format = S16_NATIVE
```

Definition at line 95 of file sound4cl.hpp.

The documentation for this struct was generated from the following file:

- sound4cl.hpp

10.30 sound4::cloudx1::dyn::helper::SampleFormat< int32_t > Struct Reference

```
#include <sound4.x1.cloud_dyn.hpp>
```

Public Attributes

- const cloudx1_SampleFormat format = S32_NATIVE

10.30.1 Detailed Description

Definition at line 542 of file sound4.x1.cloud_dyn.hpp.

10.30.2 Member Data Documentation

10.30.2.1 format

```
const cloudx1_SampleFormat sound4::cloudx1::dyn::helper::SampleFormat< int32_t >::format =
S32_NATIVE
```

Definition at line 543 of file sound4.x1.cloud_dyn.hpp.

The documentation for this struct was generated from the following file:

- sound4.x1.cloud_dyn.hpp

10.31 sound4::cloudx1::helper::SampleFormat< int32_t > Struct Reference

```
#include <sound4.x1.cloud.hpp>
```

Public Attributes

- const cloudx1_SampleFormat format = S32_NATIVE

10.31.1 Detailed Description

Definition at line 123 of file sound4.x1.cloud.hpp.

10.31.2 Member Data Documentation

10.31.2.1 format

```
const cloudx1_SampleFormat sound4::cloudx1::helper::SampleFormat< int32_t >::format = S32_NATIVE
```

Definition at line 124 of file sound4.x1.cloud.hpp.

The documentation for this struct was generated from the following file:

- sound4.x1.cloud.hpp

10.32 sound4::helper::SampleFormat< int32_t > Struct Reference

```
#include <sound4cl.hpp>
```

Public Attributes

- const sound4cl_SampleFormat format = S32_NATIVE

10.32.1 Detailed Description

Definition at line 98 of file sound4cl.hpp.

10.32.2 Member Data Documentation

10.32.2.1 format

```
const sound4cl_SampleFormat sound4::helper::SampleFormat< int32_t >::format = S32_NATIVE
```

Definition at line 99 of file sound4cl.hpp.

The documentation for this struct was generated from the following file:

- sound4cl.hpp

10.33 SOUND4_ProcessInfo Struct Reference

```
#include <sound4.x1.cloud.h>
```

Public Attributes

- size_t struct_size

  The size of total this structure, for compatibility checking.
- const char * name

  The name of the processor.
- const char * prefix

  The prefix of this processor functions.
- const char * shortname

  A short name of the processor, single word.
- const char * version

  Library version.

10.33.1 Detailed Description

Information on this processor.

See also

SOUND4_GetProcessInfo

Definition at line 203 of file sound4.x1.cloud.h.

10.33.2 Member Data Documentation

10.33.2.1 name

```
const char* SOUND4_ProcessInfo::name
```

Definition at line 205 of file sound4.x1.cloud.h.

10.33.2.2 prefix

```
const char* SOUND4_ProcessInfo::prefix
```

Definition at line 206 of file sound4.x1.cloud.h.

10.33.2.3 shortname

```
const char* SOUND4_ProcessInfo::shortname
```

Definition at line 207 of file sound4.x1.cloud.h.

10.33.2.4 struct_size

```
size_t SOUND4_ProcessInfo::struct_size
```

Definition at line 204 of file sound4.x1.cloud.h.

10.33.2.5 version

```
const char* SOUND4_ProcessInfo::version
```

Definition at line 208 of file sound4.x1.cloud.h.

The documentation for this struct was generated from the following file:

- sound4.x1.cloud.h

10.34 sound4cl_SOUND4_ProcessInfo Struct Reference

```
#include <sound4cl_cdef.h>
```

Public Attributes

- size_t struct_size

  The size of total this structure, for compatibility checking.
- const char * name

  The name of the processor.
- const char * prefix

  The prefix of this processor functions.
- const char * shortname

  A short name of the processor, single word.
- const char * version

  Library version.

10.34.1 Detailed Description

Definition at line 34 of file sound4cl_cdef.h.

10.34.2 Member Data Documentation

10.34.2.1 name

```
const char* sound4cl_SOUND4_ProcessInfo::name
```

Definition at line 36 of file sound4cl_cdef.h.

10.34.2.2 prefix

```
const char* sound4cl_SOUND4_ProcessInfo::prefix
```

Definition at line 37 of file sound4cl_cdef.h.

10.34.2.3 shortname

```
const char* sound4cl_SOUND4_ProcessInfo::shortname
```

Definition at line 38 of file sound4cl_cdef.h.

10.34.2.4 struct_size

```
size_t sound4cl_SOUND4_ProcessInfo::struct_size
```

Definition at line 35 of file sound4cl_cdef.h.

10.34.2.5 version

```
const char* sound4cl_SOUND4_ProcessInfo::version
```

Definition at line 39 of file sound4cl_cdef.h.

The documentation for this struct was generated from the following file:

- sound4cl_cdef.h

Chapter 11

File Documentation

11.1 sound4.x1.cloud-pipe-cxx.cpp File Reference

C++ sample using C++ interface wrapper.

```
#include <unistd.h>
#include <iostream>
#include <strings.h>
#include <sys/types.h>
#include <filesystem>
#include <io.h>
#include <fcntl.h>
#include "sound4.x1.cloud.hpp"
```

Functions

- std::string GetEnv (const std::string &name)
- void ProcessLoop (sound4::cloudx1::CInstance &instance)
- void Usage (const char *progname)
- void MyLogger (sound4::cloudx1::LogSeverity severity, const std::string &msg)
- int main (int argc, const char **argv)

11.1.1 Function Documentation

11.1.1.1 GetEnv()

```
std::string GetEnv (
            const std::string & name )
```

Definition at line 39 of file sound4.x1.cloud-pipe-cxx.cpp.

11.1.1.2 main()

```
int main (
            int argc,
            const char ** argv )
```

[Setup and sanity checks]

[Setup and sanity checks]

[Create the processing instance]

[Create the processing instance]

[Communicating with the instance]

[Communicating with the instance]

Definition at line 104 of file sound4.x1.cloud-pipe-cxx.cpp.

11.1.1.3 MyLogger()

```
void MyLogger (
            sound4::cloudx1::LogSeverity severity,
            const std::string & msg )
```

Definition at line 99 of file sound4.x1.cloud-pipe-cxx.cpp.

11.1.1.4 ProcessLoop()

```
void ProcessLoop (
            sound4::cloudx1::CInstance & instance )
```

[Processing Loop]

[Processing Loop]

Definition at line 48 of file sound4.x1.cloud-pipe-cxx.cpp.

11.1.1.5 Usage()

```
void Usage (
            const char * progname )
```

Definition at line 79 of file sound4.x1.cloud-pipe-cxx.cpp.

11.2 sound4.x1.cloud-pipe-cxx.cpp

Go to the documentation of this file.

```
#include <unistd.h>
#include <iostream>
#include <strings.h>
#include <sys/types.h>
#include <filesystem>
#if defined(_WIN32) || defined(WIN32)
    #include <io.h>
    #include <fcntl.h>
#endif

#include "sound4.x1.cloud.hpp"

// ---------------------------------------------------------------
std::string GetEnv(const std::string& name)
{
    char *data=getenv(name.c_str());
    if (!data) return {};
    return std::string(data);
}


// Reads from stdin, write to stdout
void ProcessLoop(sound4::cloudx1::CInstance &instance)
{
bool stopthread=false;

    #if defined(_WIN32) || defined(WIN32)
        // Windows: The stdin, stdout, and stderr streams always open in text mode by default
        _setmode(_fileno(stdin), _O_BINARY);
        _setmode(_fileno(stdout), _O_BINARY);
    #endif

    while (!stopthread)
    {
        // Read a chunk from stdin
        if (std::fread(instance.GetBufferIn().data(), sizeof(float), sound4::cloudx1::InputSampleSize, stdin) != sound4::cloudx1::InputSampleSize) {
            std::cerr « "ProcessLoop: input stopped"« std::endl;
            stopthread=true;
            break;
        }
        if (stopthread) break;
        // Process it
        instance.ProcessAudio();
        // Write it to stdout
        if (fwrite(instance.GetBufferOut().data(), sizeof(float), sound4::cloudx1::OutputSampleSize, stdout) != sound4::cloudx1::OutputSampleSize) {
            std::cerr « "Failed to write audio output" « std::endl;
            stopthread=true;
        }
    }
}

void Usage(const char *progname)
{
    std::cerr « "Usage: " « progname « std::endl;;
    std::cerr « "  Reads audio from stdin and return processed audio in stdout" « std::endl;
    std::cerr « "Environment:"« std::endl;;
    std::cerr « " - S4STORE_PATH            : path to store config [default: (no storage)]"« std::endl;;
    std::cerr « " - S4LOGINKEY              : SOUND4 Login key (or S4USERID)"« std::endl;;
    std::cerr « " - RADIO_NAME              : SOUND4 Radio Name"« std::endl;;
    std::cerr « " - ACCESS_KEY_ID           : SOUND4 Access Key ID"« std::endl;;
    std::cerr « " - ACCESS_KEY_SECRET       : SOUND4 Access Key Secret"« std::endl;;
    std::cerr « std::endl;
    std::cerr « "Example:"« std::endl;
    std::cerr « "ffmpeg -re -i file.wav -ar "«sound4::cloudx1::GetSampleRate()«" -ac "«sound4::cloudx1::GetChannelCount()«" -f f32le - | "«progname«" | ffplay -f f32le -ar "«sound4::cloudx1::GetSampleRate()«" -ac "«sound4::cloudx1::GetChannelCount()«" -i -" « std::endl;;
    #if defined(_WIN32) || defined(WIN32)
        std::cerr « "ffmpeg -f dshow -i audio=\"Microphone\" -ar "«sound4::cloudx1::GetSampleRate()«" -ac "«sound4::cloudx1::GetChannelCount()«" -f f32le - | "«progname«" | ffplay -f f32le -ar "«sound4::cloudx1::GetSampleRate()«" -ac "«sound4::cloudx1::GetChannelCount()«" -i -" « std::endl;;
    #else
        std::cerr « "ffmpeg -f pulse -i default -ar "«sound4::cloudx1::GetSampleRate()«" -ac "«sound4::cloudx1::GetChannelCount()«" -f f32le - | "«progname«" | ffplay -f f32le -ar "«sound4::cloudx1::GetSampleRate()«" -ac "«sound4::cloudx1::GetChannelCount()«" -i -" « std::endl;;
    #endif
}

void MyLogger(sound4::cloudx1::LogSeverity severity,const std::string& msg)
```

```
{
    std::cerr « msg « std::endl;
}

int main(int argc, const char **argv)
{
#if (CLOUDX1_HAS_WEBSERVER)
    int listen_port = 8080;
#endif // (CLOUDX1_HAS_WEBSERVER)
    auto store_path_str=GetEnv("S4STORE_PATH");

    // Get credentials from environment
    auto LoginKey=GetEnv("S4LOGINKEY");
    if (LoginKey.empty()) {
        LoginKey=GetEnv("S4USERID");
    }
    auto RadioName=GetEnv("RADIO_NAME");
    auto KeyId=GetEnv("ACCESS_KEY_ID");
    auto AccessKey=GetEnv("ACCESS_KEY_SECRET");

    const char *progname=argv[0];

    if (argc>1) {
        if ((strcasecmp(argv[1],"-h")==0) || (strcasecmp(argv[1],"--help")==0)) {
            Usage(progname);
            return 0;
        }
    }
    if (LoginKey.empty() || RadioName.empty() || KeyId.empty() || AccessKey.empty()) {
        std::cerr « "Missing credentials in environment" « std::endl;
        Usage(progname);
        return 1;
    }
    std::filesystem::path store_path;
    if (!store_path_str.empty()) {
        std::error_code ec;
        store_path = std::filesystem::path(store_path_str);
        if (!std::filesystem::exists(store_path,ec) || !std::filesystem::is_directory(store_path,ec))
{
            std::cerr « "Storage folder '"«store_path.c_str()«"' is not a valid directory" «
std::endl;
            Usage(progname);
            return 1;
        }
    }

    sound4::cloudx1::SetLogSeverity(verbose5);
    sound4::cloudx1::SetLoggerCallback(MyLogger);

    sound4::cloudx1::CInstance instance;
    instance.SetParam("ADMIN_USER","admin");
    instance.SetParam("ADMIN_SECRET","admin");

    std::cerr « "Creating" « std::endl;
    if (!instance.Create(LoginKey, RadioName, KeyId, AccessKey, store_path)) {
        std::cerr « "Failed to create the processing instance" « std::endl;
        return 1;
    }

#if (CLOUDX1_HAS_WEBSERVER)
    std::cerr « "Starting web server" « std::endl;
    if (!instance.StartWebServer(listen_port,0)) {
        std::cerr « "Failed to create the web server on port " « listen_port « std::endl;
        return 1;
    }
#endif // (CLOUDX1_HAS_WEBSERVER)

    {
        auto client = instance.NewClient();
        auto answer = client->ProcessJson(R"JSON({"get":{"processorname":null}})JSON");
        std::cerr « "Request for processor name returned "«answer«std::endl;
    }

    ProcessLoop(instance);

    std::cerr « "Stopping now" « std::endl;
    instance.Stop();

    std::cerr « "End" « std::endl;
    return 0;
}
```

11.3 sound4.x1.cloud-pipe-dyn.cpp File Reference

C++ sample using C++ interface wrapper with dynamic library loading.

```
#include <unistd.h>
#include <iostream>
#include <strings.h>
#include <sys/types.h>
#include <filesystem>
#include <fstream>
#include <sstream>
#include <io.h>
#include <fcntl.h>
#include "sound4.x1.cloud_dyn.hpp"
```

Classes

- class MyPresetManager

  [Custom preset manager]

Functions

- std::string GetEnv (const std::string &name)
- void ProcessLoop (sound4::cloudx1::dyn::CInstance &instance)
- void Usage (const char *progname, sound4::cloudx1::dyn::CDynLib &dynlib)
- void MyLogger (sound4::cloudx1::dyn::LogSeverity severity, const std::string &msg)
- int main (int argc, const char **argv)

  [Custom preset manager]

11.3.1 Function Documentation

11.3.1.1 GetEnv()

```
std::string GetEnv (
            const std::string & name )
```

Definition at line 51 of file sound4.x1.cloud-pipe-dyn.cpp.

11.3.1.2 main()

```
int main (
            int argc,
            const char ** argv )
```

[Dynamic loading]

[Dynamic loading]

[Setup and sanity checks]

[Setup and sanity checks]

[Custom preset manager loading]

[Custom preset manager loading]

[Create the processing instance]

[Create the processing instance]

[Communicating with the instance]

[Communicating with the instance]

Definition at line 198 of file sound4.x1.cloud-pipe-dyn.cpp.

11.3.1.3 MyLogger()

```
void MyLogger (
            sound4::cloudx1::dyn::LogSeverity severity,
            const std::string & msg )
```

Definition at line 113 of file sound4.x1.cloud-pipe-dyn.cpp.

11.3.1.4 ProcessLoop()

```
void ProcessLoop (
            sound4::cloudx1::dyn::CInstance & instance )
```

[Processing Loop]

[Processing Loop]

Definition at line 60 of file sound4.x1.cloud-pipe-dyn.cpp.

11.3.1.5 Usage()

```
void Usage (
            const char * progname,
            sound4::cloudx1::dyn::CDynLib & dynlib )
```

Definition at line 91 of file sound4.x1.cloud-pipe-dyn.cpp.

11.4 sound4.x1.cloud-pipe-dyn.cpp

Go to the documentation of this file.

```
#include <unistd.h>
#include <iostream>
#include <strings.h>
#include <sys/types.h>
#include <filesystem>
#include <fstream>
#include <sstream>
#if defined(_WIN32) || defined(WIN32)
    #include <io.h>
    #include <fcntl.h>
#endif

#include "sound4.x1.cloud_dyn.hpp"

// ------------------------------------------------------------
std::string GetEnv(const std::string& name)
{
    char *data=getenv(name.c_str());
    if (!data) return {};
    return std::string(data);
}


// Reads from stdin, write to stdout
void ProcessLoop(sound4::cloudx1::dyn::CInstance &instance)
{
bool stopthread=false;

    #if defined(_WIN32) || defined(WIN32)
        // Windows: The stdin, stdout, and stderr streams always open in text mode by default
        _setmode(_fileno(stdin), _O_BINARY);
        _setmode(_fileno(stdout), _O_BINARY);
    #endif

    while (!stopthread)
    {
        // Read a chunk from stdin
        if (std::fread(instance.GetBufferIn().data(), sizeof(float), sound4::cloudx1::dyn::InputSampleSize, stdin) != sound4::cloudx1::dyn::InputSampleSize) {
            std::cerr « "ProcessLoop: input stopped"« std::endl;
            stopthread=true;
            break;
        }
        if (stopthread) break;
        // Process it
        instance.ProcessAudio();
        // Write it to stdout
        if (fwrite(instance.GetBufferOut().data(), sizeof(float), sound4::cloudx1::dyn::OutputSampleSize, stdout) != sound4::cloudx1::dyn::OutputSampleSize) {
            std::cerr « "Failed to write audio output" « std::endl;
            stopthread=true;
        }
    }
}

void Usage(const char *progname, sound4::cloudx1::dyn::CDynLib &dynlib)
{
    std::cerr « "Usage: " « progname « std::endl;;
    std::cerr « "  Reads audio from stdin and return processed audio in stdout" « std::endl;
    std::cerr « "Environment:"« std::endl;;
    std::cerr « " - S4STORE_PATH            : path to store config [default: (no storage)]"« std::endl;;
    std::cerr « " - S4LOGINKEY              : SOUND4 Login key (or S4USERID)"« std::endl;;
    std::cerr « " - RADIO_NAME              : SOUND4 Radio Name"« std::endl;;
    std::cerr « " - ACCESS_KEY_ID           : SOUND4 Access Key ID"« std::endl;;
    std::cerr « " - ACCESS_KEY_SECRET       : SOUND4 Access Key Secret"« std::endl;;
    if (dynlib.IsOk()) {
        std::cerr « std::endl;
        std::cerr « "Example:"« std::endl;
        std::cerr « "ffmpeg -re -i file.wav -ar "«dynlib.GetSampleRate()«" -ac "«dynlib.GetChannelCount()«" -f f32le - | "«progname«" | ffplay -f f32le -ar "«dynlib.GetSampleRate()«" -ac "«dynlib.GetChannelCount()«" -i -" « std::endl;;
        #if defined(_WIN32) || defined(WIN32)
            std::cerr « "ffmpeg -f dshow -i audio=\"Microphone\" -ar "«dynlib.GetSampleRate()«" -ac "«dynlib.GetChannelCount()«" -f f32le - | "«progname«" | ffplay -f f32le -ar "«dynlib.GetSampleRate()«" -ac "«dynlib.GetChannelCount()«" -i -" « std::endl;;
        #else
            std::cerr « "ffmpeg -f pulse -i default -ar "«dynlib.GetSampleRate()«" -ac "«dynlib.GetChannelCount()«" -f f32le - | "«progname«" | ffplay -f f32le -ar "«dynlib.GetSampleRate()«" -ac "«dynlib.GetChannelCount()«" -i -" « std::endl;;
        #endif
```

```
    }
}

void MyLogger(sound4::cloudx1::dyn::LogSeverity severity,const std::string& msg)
{
    std::cerr « msg « std::endl;
}

class MyPresetManager : public sound4::cloudx1::dyn::CPresetLoader {
public:
    MyPresetManager() = default;
    virtual ~MyPresetManager() = default;

    bool SetupPath(const std::filesystem::path& a_preset_path)
        {
            m_preset_path=a_preset_path;
            std::error_code ec;
            if ( !std::filesystem::exists(m_preset_path,ec ) ) {
                return false;
            }
            if ( !std::filesystem::is_directory(m_preset_path, ec) ) {
                return false;
            }
            return true;
        }
    virtual bool IsReadOnly() override { return false; };
    virtual bool Exists(const std::filesystem::path &name) override
        {
            std::error_code ec;
            return std::filesystem::exists(GetRealPath(name), ec);
        }
    virtual bool Remove(const std::filesystem::path &name) override
        {
            std::error_code ec;
            return std::filesystem::remove(GetRealPath(name), ec);
        }
    virtual bool Rename(const std::filesystem::path &from, const std::filesystem::path &to) override
        {
            std::error_code ec;
            std::filesystem::rename(GetRealPath(from), GetRealPath(to), ec);
            return (!ec);
        }
    virtual std::vector<std::filesystem::path> GetAll() override
        {
            std::vector<std::filesystem::path> list;
            std::error_code ec;
            for (auto it = std::filesystem::directory_iterator(m_preset_path.c_str(),
std::filesystem::directory_options::skip_permission_denied, ec);
                !ec && it != std::filesystem::directory_iterator{};
                 it.increment(ec) )
            {
                if (it->is_regular_file(ec)) {
                    list.push_back(it->path().lexically_relative(m_preset_path));
                }
            }
            return list;
        }
    virtual std::string Read(const std::filesystem::path &filename) override
        {
            std::ifstream f(GetRealPath(filename));
            if ( f.fail() ) {
                return std::string();
            }
            std::ostringstream ss;
            ss « f.rdbuf();
            return ss.str();
        }
    virtual bool Write(const std::filesystem::path &filename, const std::string &content) override
        {
            std::ofstream f(GetRealPath(filename));
            if ( f.fail() ) {
                return false;
            }
            f « content;
            if ( f.fail() ) {
                return false;
            }
            return true;
        }
private:
    std::filesystem::path m_preset_path;
    std::filesystem::path GetRealPath(const std::filesystem::path &name)
        {
            return m_preset_path / name;
        }
};

```

```
00198 int main(int argc, const char **argv)
00199 {
00200 #if (CLOUDX1_HAS_WEBSERVER)
00201     int listen_port = 8080;
00202 #endif // (CLOUDX1_HAS_WEBSERVER)
00203     auto store_path_str=GetEnv("S4STORE_PATH");
00204
00205     // Get credentials from environment
00206     auto LoginKey=GetEnv("S4LOGINKEY");
00207     if (LoginKey.empty()) {
00208         LoginKey=GetEnv("S4USERID");
00209     }
00210     auto RadioName=GetEnv("RADIO_NAME");
00211     auto KeyId=GetEnv("ACCESS_KEY_ID");
00212     auto AccessKey=GetEnv("ACCESS_KEY_SECRET");
00213
00214     const char *progname=argv[0];
00215
00216
00218     sound4::cloudx1::dyn::CDynLib dynlib;
00219     if (!dynlib.Load()) {
00220         std::cerr « "Failed to load processing library" « std::endl;
00221         return 1;
00222     }
00224
00225     if (argc>1) {
00226         if ((strcasecmp(argv[1],"-h")==0) || (strcasecmp(argv[1],"--help")==0)) {
00227             Usage(progname,dynlib);
00228             return 0;
00229         }
00230     }
00231     if (LoginKey.empty() || RadioName.empty() || KeyId.empty() || AccessKey.empty()) {
00232         std::cerr « "Missing credentials in environment" « std::endl;
00233         Usage(progname,dynlib);
00234         return 1;
00235     }
00236     std::filesystem::path store_path;
00237     if (!store_path_str.empty()) {
00238         std::error_code ec;
00239         store_path = std::filesystem::path(store_path_str);
00240         if (!std::filesystem::exists(store_path,ec) || !std::filesystem::is_directory(store_path,ec))
      {
00241             std::cerr « "Storage folder '"«store_path.c_str()«"' is not a valid directory" «
      std::endl;
00242             Usage(progname,dynlib);
00243             return 1;
00244         }
00245     }
00246
00248     sound4::cloudx1::dyn::SetLogSeverity(dynlib, verbose5);
00249     sound4::cloudx1::dyn::SetLoggerCallback(dynlib, MyLogger);
00250
00251     sound4::cloudx1::dyn::CInstance instance(dynlib);
00252     instance.SetParam("ADMIN_USER","admin");
00253     instance.SetParam("ADMIN_SECRET","admin");
00255
00257     MyPresetManager preset_manager;
00258     if (!store_path.empty()) {
00259         if (!preset_manager.SetupPath(store_path)) {
00260             std::cerr « "Failed to setup the custom preset manager on path " « store_path.c_str() «
      std::endl;
00261             return 1;
00262         }
00263         instance.SetPresetManager(&preset_manager);
00264     }
00266
00267     std::cerr « "Creating" « std::endl;
00269     if (!instance.Create(LoginKey, RadioName, KeyId, AccessKey, {})) {
00270         std::cerr « "Failed to create the processing instance" « std::endl;
00271         return 1;
00272     }
00274
00275 #if (CLOUDX1_HAS_WEBSERVER)
00276     std::cerr « "Starting web server" « std::endl;
00278     if (!instance.StartWebServer(listen_port,0)) {
00279         std::cerr « "Failed to create the web server on port " « listen_port « std::endl;
00280         return 1;
00281     }
00283 #endif // (CLOUDX1_HAS_WEBSERVER)
00284
00285     {
00287         auto client = instance.NewClient();
00288         auto answer = client->ProcessJson(R"JSON({"get":{"processorname":null}})JSON");
00289         std::cerr « "Request for processor name returned "«answer«std::endl;
00291     }
00292
00293     ProcessLoop(instance);
```

```

    std::cerr « "Stopping now" « std::endl;
    instance.Stop();

    std::cerr « "End" « std::endl;
    return 0;
}
```

11.5 sound4.x1.cloud-pipe.cpp File Reference

C++ sample using only C interface.

```
#include <unistd.h>
#include <iostream>
#include <strings.h>
#include <sys/types.h>
#include <thread>
#include <experimental/filesystem>
#include <io.h>
#include <fcntl.h>
#include <stringapiset.h>
#include <sound4.x1.cloud.h>
```

Namespaces

- namespace std

Macros

- #define SAMPLE_RATE 48000
- #define CHUNK_SIZE 64
- #define CHANNEL_COUNT 2

Functions

- void ProcessLoop (struct cloudx1_CInstance ∗pInstance)
- void Usage (const char ∗progname)
- void MyLogger (cloudx1_LogSeverity severe, const char ∗str)
- int main (int argc, char ∗const argv[ ])

11.5.1 Macro Definition Documentation

11.5.1.1 CHANNEL_COUNT

```
#define CHANNEL_COUNT 2
```

Definition at line 28 of file sound4.x1.cloud-pipe.cpp.

11.5.1.2 CHUNK_SIZE

```
#define CHUNK_SIZE 64
```

Definition at line 27 of file sound4.x1.cloud-pipe.cpp.

11.5.1.3 SAMPLE_RATE

```
#define SAMPLE_RATE 48000
```

Definition at line 26 of file sound4.x1.cloud-pipe.cpp.

11.5.2 Function Documentation

11.5.2.1 main()

```
int main (
            int argc,
            char *const argv[] )
```

[Setup and sanity checks]

[Setup and sanity checks]

[Create the processing instance]

[Create the processing instance]

[Stopping the processing instance]

[Stopping the processing instance]

Definition at line 90 of file sound4.x1.cloud-pipe.cpp.

11.5.2.2 MyLogger()

```
void MyLogger (
            cloudx1_LogSeverity severe,
            const char * str )
```

Definition at line 84 of file sound4.x1.cloud-pipe.cpp.

11.5.2.3 ProcessLoop()

```
void ProcessLoop (
            struct cloudx1_CInstance * pInstance )
```

[Processing Loop]

[Processing Loop]

Definition at line 31 of file sound4.x1.cloud-pipe.cpp.

11.5.2.4 Usage()

```
void Usage (
            const char * progname )
```

Definition at line 64 of file sound4.x1.cloud-pipe.cpp.

11.6 sound4.x1.cloud-pipe.cpp

Go to the documentation of this file.

```
00001
00004 #include <unistd.h>
00005 #include <iostream>
00006 #include <strings.h>
00007 #include <sys/types.h>
00008 #include <thread>           // NOTE: needs pthread link
00009 // Choose good filesystem version depending on compiler.
00010 #if __has_include(<filesystem>)
00011     #include <filesystem>
00012 #else //if __cpp_lib_experimental_filesystem
00013     // We need the alias from std::experimental::filesystem to std::filesystem
00014     #include <experimental/filesystem>
00015     namespace std {
00016         namespace filesystem = experimental::filesystem;
00017     }
00018 #endif
00019 #if defined(_WIN32) || defined(WIN32)
00020     #include <io.h>
00021     #include <fcntl.h>
00022     #include <stringapiset.h>   // UTF-8 conversion
00023 #endif
00024 #include <sound4.x1.cloud.h>
00025
00026 #define SAMPLE_RATE       48000
00027 #define CHUNK_SIZE        64
00028 #define CHANNEL_COUNT     2
00029
00030 // Reads from stdin, write to stdout
00031 void ProcessLoop(struct cloudx1_CInstance *pInstance)
00032 {
00034 bool stopthread=false;
00035 alignas(64) float audio_in[CHUNK_SIZE*CHANNEL_COUNT];
00036 alignas(64) float audio_out[CHUNK_SIZE*CHANNEL_COUNT];
00037
00038     #if defined(_WIN32) || defined(WIN32)
00039         // Windows: The stdin, stdout, and stderr streams always open in text mode by default
00040         _setmode(_fileno(stdin), _O_BINARY);
00041         _setmode(_fileno(stdout), _O_BINARY);
00042     #endif
00043
00044     while (!stopthread)
00045     {
00046         // Read a chunk from stdin
00047         if (std::fread(&audio_in[0], sizeof(float), CHUNK_SIZE*CHANNEL_COUNT, stdin) !=
      CHUNK_SIZE*CHANNEL_COUNT) {
00048             std::cerr « "ProcessLoop: input stopped"« std::endl;
00049             stopthread=true;
00050             break;
00051         }
00052         if (stopthread) break;
00053         // Process it
00054         cloudx1_ProcessAudio(pInstance, audio_in, audio_out);
00055         // Write it to stdout
00056         if (fwrite(&audio_out[0], sizeof(float), CHUNK_SIZE*CHANNEL_COUNT, stdout) !=
      CHUNK_SIZE*CHANNEL_COUNT) {
00057             std::cerr « "Failed to write audio output" « std::endl;
00058             stopthread=true;
00059         }
00060     }
00062 }
00063
00064 void Usage(const char *progname)
00065 {
00066     std::cerr « "Usage: " « progname « std::endl;;
00067     std::cerr « "  Reads audio from stdin and return processed audio in stdout" « std::endl;
00068     std::cerr « "Environment:"« std::endl;;
00069     std::cerr « " - S4STORE_PATH            : path to store config [default: ./state]"« std::endl;;
00070     std::cerr « " - S4LOGINKEY              : SOUND4 Login key (or S4USERID)"« std::endl;;
```

```
    std::cerr « " - RADIO_NAME              : SOUND4 Radio Name"« std::endl;;
    std::cerr « " - ACCESS_KEY_ID           : SOUND4 Access Key ID"« std::endl;;
    std::cerr « " - ACCESS_KEY_SECRET       : SOUND4 Access Key Secret"« std::endl;;
    std::cerr « std::endl;
    std::cerr « "Example:"« std::endl;
    std::cerr « "ffmpeg -re -i file.wav -ar "«SAMPLE_RATE«" -ac "«CHANNEL_COUNT«" -f f32le - | "«progname«" | ffplay -f f32le -ar "«SAMPLE_RATE«" -ac "«CHANNEL_COUNT«" -i -" « std::endl;;
    #if defined(_WIN32) || defined(WIN32)
        std::cerr « "ffmpeg -f dshow -i audio=\"Microphone\" -ar "«SAMPLE_RATE«" -ac "«CHANNEL_COUNT«" -f f32le - | "«progname«" | ffplay -f f32le -ar "«SAMPLE_RATE«" -ac "«CHANNEL_COUNT«" -i -" « std::endl;;
    #else
        std::cerr « "ffmpeg -f pulse -i default -ar "«SAMPLE_RATE«" -ac "«CHANNEL_COUNT«" -f f32le - | "«progname«" | ffplay -f f32le -ar "«SAMPLE_RATE«" -ac "«CHANNEL_COUNT«" -i -" « std::endl;;
    #endif
}

void MyLogger(cloudx1_LogSeverity severe [[maybe_unused]], const char *str)
{
    std::cerr « str « std::endl;
}


int main(int argc, char *const argv[])
{
    struct cloudx1_CInstance *pInstance = NULL;
    const char *store_path_str=getenv("S4STORE_PATH");
    // Get credentials from environment
    char *pLoginKey=getenv("S4LOGINKEY");
    if (!pLoginKey) {
        pLoginKey=getenv("S4USERID");
    }
    char *pRadioName=getenv("RADIO_NAME");
    char *pKeyId=getenv("ACCESS_KEY_ID");
    char *pAccessKey=getenv("ACCESS_KEY_SECRET");

    const char *progname=argv[0];

    if (argc>1) {
        if ((strcasecmp(argv[1],"-h")==0) || (strcasecmp(argv[1],"--help")==0)) {
            Usage(progname);
            return 0;
        }
    }
    if (!pLoginKey || !pRadioName || !pKeyId || !pAccessKey) {
        std::cerr « "Missing credentials in environment" « std::endl;
        Usage(progname);
        return 1;
    }
    std::error_code ec;
    std::filesystem::path fs_store_path;
    if (!store_path_str || store_path_str[0]==0) {
        fs_store_path=std::filesystem::current_path(ec) / "state";
    } else {
        fs_store_path = std::filesystem::path(store_path_str);
    }
    if (!std::filesystem::exists(fs_store_path,ec) || !std::filesystem::is_directory(fs_store_path,ec)) {
        std::cerr « "Storage folder '"«fs_store_path.c_str()«"' is not a valid directory" « std::endl;
        Usage(progname);
        return 1;
    }
    std::string store_path;
    #ifdef _WIN32
    {
        // Convert path to UTF-8
        std::wstring wstr(fs_store_path.wstring());
        if (wstr.empty()) return {};
        int size = WideCharToMultiByte(CP_UTF8, 0, &wstr[0], (int)wstr.size(), NULL, 0, NULL, NULL);
        std::string str(size, 0);
        WideCharToMultiByte(CP_UTF8, 0, &wstr[0], (int)wstr.size(), &str[0], size, NULL, NULL);
        store_path=str;
    }
    #else // !_WIN32
        store_path=fs_store_path;
    #endif // !_WIN32

    // Optional: Use our own logging, instead of default color output to stderr.
    //cloudx1_SetLoggerCallback(&MyLogger);

    //cloudx1_SetLogSeverity(cloudx1_LogSeverity::info);
    cloudx1_SetLogSeverity(cloudx1_LogSeverity::verbose5);

    std::cerr « "Process version: " « cloudx1_GetVersion() « std::endl;
    // Do some sanity checks
    if (cloudx1_GetSampleRate()!=SAMPLE_RATE) {
      std::cerr « "Bad library sampling rate, expecting '"«SAMPLE_RATE«"' but has "«
```

```
cloudx1_GetSampleRate() « std::endl;
      return 1;
    }
    if (cloudx1_GetChunkSizeInFrames()!=CHUNK_SIZE) {
      std::cerr « "Bad library frame size, expecting '"«CHUNK_SIZE«"' but has "«
cloudx1_GetChunkSizeInFrames() « std::endl;
      return 1;
    }
    if (cloudx1_GetChannelCount()!=CHANNEL_COUNT) {
      std::cerr « "Bad library channel count, expecting '"«CHANNEL_COUNT«"' but has "«
cloudx1_GetChannelCount() « std::endl;
      return 1;
    }

    // Setup parameters
    struct cloudx1_CParameters *params = cloudx1_NewParameters();
    // Optional: activate web authentication, set admin password
    // This creates the authentication only for a new storage path
    cloudx1_SetParameter(params,"ADMIN_USER", "admin");
    cloudx1_SetParameter(params,"ADMIN_SECRET", "admin");

    // Create the processing instance
    pInstance=cloudx1_InitProcess2(pLoginKey,pRadioName,pKeyId,pAccessKey,store_path.c_str(), params);
    cloudx1_FreeParameters(params);
    if (!pInstance) {
      std::cerr « "Failed to create the process instance"« std::endl;
      return 1;
    }

    // Start the update thread, without JSON server (low priority)
    std::thread updater([pInstance](){
       // will returned when stopped or destroyed
       std::cerr « "cloudx1_StartUpdateThread (no json port)" « std::endl;
       cloudx1_StartUpdateThread(pInstance, 0);
       std::cerr « "cloudx1_StartUpdateThread END" « std::endl;
     });

    // This is not mandatory, but better be sure we are ready right now
    std::cerr « "Waiting update thread" « std::endl;
    if (cloudx1_WaitUpdateThreadReady(pInstance, 5000)<0) {
        std::cerr « "Timeout to create the process instance"« std::endl;
    }
    std::cerr « "Waiting update thread DONE" « std::endl;

#if (CLOUDX1_HAS_WEBSERVER)
    // Starts a web server, listening on port http://localhost:8080, https://localhost:8443
    std::cerr « "Starting web server" « std::endl;
    int listenport= 8080;
    int listenport_secure= 8443;
    uint64_t webserver= SOUND4_INVALID_WEBSERVER_ID;
    if (listenport || listenport_secure) {
        webserver = cloudx1_Webserver(listenport,listenport_secure,pInstance);
        if (webserver==SOUND4_INVALID_WEBSERVER_ID) {
            std::cerr « "Starting web server FAILED" « std::endl;
        } else {
            int web_status=cloudx1_Webserver_Status(webserver);
            if (listenport) {
                if (web_status & SOUND4_WEBSERVER_HTTP_OK) {
                    std::cerr « "Web server listening on port " « listenport;
                } else {
                    std::cerr « "Web server failed to listen on port " « listenport;
                }
            }
            if (listenport_secure) {
                if (web_status & SOUND4_WEBSERVER_HTTPS_OK) {
                    std::cerr « "Web server listening on secure port " « listenport_secure;
                } else {
                    std::cerr « "Web server failed to listen on secure port " « listenport_secure;
                }
            }
            std::cerr « "Starting web server DONE" « std::endl;
        }
    }
#endif // (CLOUDX1_HAS_WEBSERVER)

     // Force load a factory preset now
     // Could be used instead of setting a store_path
     /*{
         cloudx1_CClientInstance *pClient=cloudx1_NewClient(pInstance);
         const char *answer=cloudx1_ProcessJson(pClient, "{ \"factoryload\": \"All Programs\" }",
NULL);
         std::cerr « "Loaded factory preset answer: " « answer« std::endl;
         cloudx1_FreeJsonAnswer(answer);
         cloudx1_DeleteClient(pClient);
     }*/

    std::cerr « "Estimated delay " « ( cloudx1_GetEstimatedDelay(pInstance)*1000.0/SAMPLE_RATE ) « "
```

```
ms" « std::endl;

    ProcessLoop(pInstance);

#if (CLOUDX1_HAS_WEBSERVER)
    // Stopping the webserver
    std::cerr « "Stopping web server" « std::endl;
    cloudx1_Webserver_Stop(webserver, 1000);
    std::cerr « "Stopping web server DONE" « std::endl;
#endif // (CLOUDX1_HAS_WEBSERVER)

    // Stopping the processing instance
    std::cerr « "Stopping Update thread" « std::endl;
    cloudx1_StopUpdateThread(pInstance); // this will exit the update thread
    std::cerr « "Stopping Update thread DONE" « std::endl;

    updater.join();

    cloudx1_ExitProcess(pInstance);

    return 0;
}
```

11.7 sound4cl-pipe.cpp File Reference

C++ sample using C++ interface wrapper with dynamic library loading Works with any SOUND4 processor provided.

```
#include <unistd.h>
#include <iostream>
#include <strings.h>
#include <sys/types.h>
#include <filesystem>
#include <fstream>
#include <sstream>
#include <io.h>
#include <fcntl.h>
#include "sound4cl.hpp"
```

Classes

- class MyPresetManager

  [Custom preset manager]

Functions

- std::string GetEnv (const std::string &name)
- void ProcessLoop (sound4::CInstance &instance, sound4::CProcessor &processor)
- int main (int argc, const char **argv)

  [Custom preset manager]

11.7.1 Function Documentation

11.7.1.1 GetEnv()

```
std::string GetEnv (
            const std::string & name )
```

Definition at line 60 of file sound4cl-pipe.cpp.

11.7.1.2 main()

```
int main (
            int argc,
            const char ** argv )
```

[Dynamic loading config]

[Dynamic loading config]

[Dynamic loading]

[Dynamic loading]

[Setup and configure]

[Setup and configure]

[Custom preset manager loading]

[Custom preset manager loading]

[Create the processing instance]

[Create the processing instance]

[Starting a web-server]

[Starting a web-server]

[Communicating with the instance]

[Communicating with the instance]

Definition at line 182 of file sound4cl-pipe.cpp.

11.7.1.3 ProcessLoop()

```
void ProcessLoop (
            sound4::CInstance & instance,
            sound4::CProcessor & processor )
```

[Processing Loop]

[Processing Loop]

Definition at line 69 of file sound4cl-pipe.cpp.

11.8 sound4cl-pipe.cpp

Go to the documentation of this file.

```
#include <unistd.h>
#include <iostream>
#include <strings.h>
#include <sys/types.h>
#include <filesystem>
#include <fstream>
#include <sstream>
#if defined(_WIN32) || defined(WIN32)
    #include <io.h>
    #include <fcntl.h>
#endif

#include "sound4cl.hpp"

// ------------------------------------------------------------
std::string GetEnv(const std::string& name)
{
    char *data=getenv(name.c_str());
    if (!data) return {};
    return std::string(data);
}


// Reads from stdin, write to stdout
void ProcessLoop(sound4::CInstance &instance, sound4::CProcessor &processor)
{
bool stopthread=false;

    #if defined(_WIN32) || defined(WIN32)
        // Windows: The stdin, stdout, and stderr streams always open in text mode by default
        _setmode(_fileno(stdin), _O_BINARY);
        _setmode(_fileno(stdout), _O_BINARY);
    #endif

    size_t input_sample_count = instance.GetChunkFrames() * processor.GetChannelCount();
    size_t output_sample_count = instance.GetChunkFrames() * processor.GetChannelCount();
    while (!stopthread)
    {
        // Read a chunk from stdin
        if (std::fread(instance.GetBufferIn(), sizeof(float), input_sample_count, stdin) !=
input_sample_count) {
            std::cerr « "ProcessLoop: input stopped"« std::endl;
            stopthread=true;
            break;
        }
        if (stopthread) break;
        // Process it
        instance.ProcessAudio();
        // Write it to stdout
        if (fwrite(instance.GetBufferOut(), sizeof(float), output_sample_count, stdout) !=
output_sample_count) {
            std::cerr « "Failed to write audio output" « std::endl;
            stopthread=true;
        }
    }
}

class MyPresetManager : public sound4::CPresetLoader {
public:
    MyPresetManager() = default;
    virtual ~MyPresetManager() = default;

    bool SetupPath(const std::filesystem::path& a_preset_path)
        {
            m_preset_path=a_preset_path;
            std::error_code ec;
            if ( !std::filesystem::exists(m_preset_path,ec ) ) {
                return false;
            }
            if ( !std::filesystem::is_directory(m_preset_path, ec) ) {
                return false;
            }
            return true;
        }
    virtual bool IsReadOnly() override { return false; };
    virtual bool Exists(const std::filesystem::path &name) override
        {
            std::error_code ec;
            return std::filesystem::exists(GetRealPath(name), ec);
        }
    virtual bool Remove(const std::filesystem::path &name) override
```

```
        {
            std::error_code ec;
            return std::filesystem::remove(GetRealPath(name), ec);
        }
    virtual bool Rename(const std::filesystem::path &from, const std::filesystem::path &to) override
        {
            std::error_code ec;
            std::filesystem::rename(GetRealPath(from), GetRealPath(to), ec);
            return (!ec);
        }
    virtual std::vector<std::filesystem::path> GetAll() override
        {
            std::vector<std::filesystem::path> list;
            std::error_code ec;
            for (auto it = std::filesystem::directory_iterator(m_preset_path.c_str(),
std::filesystem::directory_options::skip_permission_denied, ec);
                !ec && it != std::filesystem::directory_iterator{};
                 it.increment(ec) )
            {
                if (it->is_regular_file(ec)) {
                    list.push_back(it->path().lexically_relative(m_preset_path));
                }
            }
            return list;
        }
    virtual std::string Read(const std::filesystem::path &filename) override
        {
            std::ifstream f(GetRealPath(filename));
            if ( f.fail() ) {
                return std::string();
            }
            std::ostringstream ss;
            ss « f.rdbuf();
            return ss.str();
        }
    virtual bool Write(const std::filesystem::path &filename, const std::string &content) override
        {
            std::ofstream f(GetRealPath(filename));
            if ( f.fail() ) {
                return false;
            }
            f « content;
            if ( f.fail() ) {
                return false;
            }
            return true;
        }
private:
    std::filesystem::path m_preset_path;
    std::filesystem::path GetRealPath(const std::filesystem::path &name)
        {
            return m_preset_path / name;
        }
};

int main(int argc, const char **argv)
{
    int listen_port = 8080;
    auto store_path_str=GetEnv("S4STORE_PATH");
    std::string libname =  "libsound4.x1.cloud.so";


    // Get credentials from environment
    auto LoginKey=GetEnv("S4LOGINKEY");
    if (LoginKey.empty()) {
        LoginKey=GetEnv("S4USERID");
    }
    auto RadioName=GetEnv("RADIO_NAME");
    auto KeyId=GetEnv("ACCESS_KEY_ID");
    auto AccessKey=GetEnv("ACCESS_KEY_SECRET");

    const char *progname=argv[0];
    for (int n=1;n<argc;n++) {
        std::string arg = argv[n];
        if (arg=="-p" || arg=="--port") {
            if (argc<n+1) {
                std::cerr « "--port needs a number"« std::endl;
                return 1;
            }
            n++;
            listen_port=atoi(argv[n]);
        } else if (arg=="-l" || arg=="--lib") {
            if (argc<n+1) {
                std::cerr « "--port needs a number"« std::endl;
                return 1;
            }
            n++;
```

```
            libname=argv[n];
        } else if (arg=="-h" || arg=="--help") {
            std::cerr « "Usage: " « progname « " [-p port] [-l libname.so]"«std::endl;;
            std::cerr « "  Reads audio from stdin and return processed audio in stdout" « std::endl;
            std::cerr « "   -l, --lib   : library to load ["«libname«"]" « std::endl;
            std::cerr « "   -p, --port  : port for web server ["«listen_port«"]" « std::endl;
            std::cerr « std::endl;
            std::cerr « "Environment:"« std::endl;;
            std::cerr « " - S4STORE_PATH            : path to store config [default: (no storage)]"« std::endl;;
            std::cerr « " - S4LOGINKEY              : SOUND4 Login key (or S4USERID)"« std::endl;;
            std::cerr « " - RADIO_NAME              : SOUND4 Radio Name"« std::endl;;
            std::cerr « " - ACCESS_KEY_ID           : SOUND4 Access Key ID"« std::endl;;
            std::cerr « " - ACCESS_KEY_SECRET       : SOUND4 Access Key Secret"« std::endl;
            std::cerr « std::endl;
            std::cerr « "Example:"« std::endl;
            std::cerr « "  ffmpeg -re -i file.wav -ar 48000 -ac 2 -f f32le - | "«progname«" | ffplay -f f32le -ar 48000 -ac 2 -i -" « std::endl;;
            #if defined(_WIN32) || defined(WIN32)
            std::cerr « "  ffmpeg -f dshow -i audio=\"Microphone\" -ar 48000 -ac 2 -f f32le - | "«progname«" | ffplay -f f32le -ar 48000 -ac 2 -i -" « std::endl;;
            #else
            std::cerr « "  ffmpeg -f pulse -i default -ar 48000 -ac 2 -f f32le - | "«progname«" | ffplay -f f32le -ar 48000 -ac 2 -i -" « std::endl;;
            #endif
            return 0;
        } else {
            std::cerr « "unknown argument '"«arg«"'"« std::endl;
            return 1;
        }
    }


    sound4::CProcessor processor;
    if (!processor.Load(libname)) {
        std::cerr « "Failed to load processing library" « std::endl;
        return 1;
    }

    if (LoginKey.empty() || RadioName.empty() || KeyId.empty() || AccessKey.empty()) {
        std::cerr « "Missing credentials in environment" « std::endl;
        return 1;
    }
    std::filesystem::path store_path;
    if (!store_path_str.empty()) {
        store_path = std::filesystem::path(store_path_str);
        std::error_code ec;
        if (!std::filesystem::exists(store_path,ec) || !std::filesystem::is_directory(store_path,ec)) {
            std::cerr « "Storage folder '"«store_path.c_str()«"' is not a valid directory" « std::endl;
            return 1;
        }
    }

    processor.SetLogSeverity(sound4::verbose5);
    processor.SetLoggerCallback([](sound4::LogSeverity severity,const std::string& msg) {
            std::cerr « msg « std::endl;
        });

    sound4::CInstance instance(processor);
    instance.SetParam("ADMIN_USER","admin");
    instance.SetParam("ADMIN_SECRET","admin");

    MyPresetManager preset_manager;
    if (!store_path.empty()) {
        if (!preset_manager.SetupPath(store_path)) {
            std::cerr « "Failed to setup the custom preset manager on path " « store_path.c_str() « std::endl;
            return 1;
        }
        instance.SetPresetManager(&preset_manager);
    }

    std::cerr « "Creating" « std::endl;
    if (!instance.Create(LoginKey, RadioName, KeyId, AccessKey, {})) {
        std::cerr « "Failed to create the processing instance" « std::endl;
        return 1;
    }

    std::cerr « "Starting web server" « std::endl;
    if (!instance.StartWebServer(listen_port,0)) {
        std::cerr « "Failed to create the web server on port " « listen_port « std::endl;
        return 1;
    }

    {
```

```
        auto client = instance.NewClient();
        auto answer = client->ProcessJson(R"JSON({"get":{"processorname":null}})JSON");
        std::cerr « "Request for processor name returned "«answer«std::endl;
    }

    ProcessLoop(instance, processor);

    std::cerr « "Stopping now" « std::endl;
    instance.Stop();

    std::cerr « "End" « std::endl;
    return 0;
}
```

11.9 sound4.x1.cloud.h File Reference

C interface for library.

```
#include <stdint.h>
```

Classes

- struct SOUND4_ProcessInfo

Macros

- #define CLOUDX1_DECL __declspec(dllimport)
- #define CLOUDX1_HAS_WEBSERVER 1
- #define CLOUDX1_HAS_CLOUDBUS 0
- #define CLOUDX1_AUDIOFRAME_COUNT 64
- #define CLOUDX1_CHANNEL_COUNT 2
- #define CLOUDX1_AUDIO_INPUT_COUNT 1
- #define CLOUDX1_AUDIO_OUTPUT_COUNT 1
- #define CLOUDX1_SAMPLE_RATE 48000
- #define SOUND4_INVALID_WEBSERVER_ID ((uint64_t)-1)
- #define SOUND4_WEBSERVER_HTTP_OK (1<<0)
- #define SOUND4_WEBSERVER_HTTPS_OK (1<<1)

Typedefs

- typedef void(∗ cloudx1_loggerfn) (enum cloudx1_LogSeverity, const char ∗)
- typedef wchar_t fs_char
- typedef char ∗(∗ cloudx1_storage_reader) (const fs_char ∗filename, void ∗userdata)
- typedef void(∗ cloudx1_storage_reader_free) (char ∗content, void ∗userdata)
- typedef int(∗ cloudx1_storage_writer) (const fs_char ∗filename, const char ∗content, void ∗userdata)
- typedef int(∗ cloudx1_storage_exists) (const fs_char ∗filename, void ∗userdata)
- typedef fs_char ∗∗(∗ cloudx1_storage_getall) (void ∗userdata)
- typedef void(∗ cloudx1_storage_getall_free) (fs_char ∗∗all, void ∗userdata)
- typedef int(∗ cloudx1_storage_remove) (const fs_char ∗filename, void ∗userdata)
- typedef int(∗ cloudx1_storage_rename) (const fs_char ∗from, const fs_char ∗to, void ∗userdata)

Enumerations

- enum cloudx1_LogSeverity {
  none = 0 , fatal = 1 , error = 2 , warning = 3 ,
  info = 4 , verbose = 5 , verbose2 = 6 , verbose3 = 7 ,
  verbose4 = 8 , verbose5 = 9 }
- enum cloudx1_PresetChange_Kind { change_kind_created = 1 , change_kind_modified , change_kind_deleted }
- enum cloudx1_SampleFormat {
  INVALID_FORMAT =0 , S16_LE , S16_BE , S24_LE ,
  S24_BE , S32_LE , S32_BE , F32_LE ,
  F32_BE , S16_NATIVE =S16_LE , S24_NATIVE =S24_LE , S32_NATIVE =S32_LE ,
  F32_NATIVE =F32_LE }

Functions

- const struct SOUND4_ProcessInfo ∗ SOUND4_GetProcessInfo ()
- const char ∗ cloudx1_GetVersion ()
- unsigned int cloudx1_GetChunkSizeInFrames ()
- unsigned int ∗ cloudx1_GetPossibleChunkSizeInFrames ()
- unsigned int cloudx1_GetChannelCount ()
- unsigned int cloudx1_GetAudioInputCount ()
- unsigned int cloudx1_GetAudioOutputCount ()
- unsigned int cloudx1_GetSampleRate ()
- void cloudx1_SetLoggerCallback (cloudx1_loggerfn logger)
- void cloudx1_SetLogSeverity (enum cloudx1_LogSeverity severity)
- struct cloudx1_CParameters ∗ cloudx1_NewParameters ()
- void cloudx1_FreeParameters (struct cloudx1_CParameters ∗params)
- void cloudx1_SetParameter (struct cloudx1_CParameters ∗params, const char ∗name, const char ∗value)
- const char ∗ cloudx1_GetParameter (struct cloudx1_CParameters ∗params, const char ∗name)
- void cloudx1_FreeParameterValue (const char ∗value)
- struct cloudx1_CInstance ∗ cloudx1_InitProcess (const char ∗LoginKey, const char ∗RadioName, const char ∗Access_Key_ID, const char ∗Access_Key_Secret, const char ∗save_path)
- struct cloudx1_CInstance ∗ cloudx1_InitProcess2 (const char ∗LoginKey, const char ∗RadioName, const char ∗Access_Key_ID, const char ∗Access_Key_Secret, const char ∗save_path, const struct cloudx1_CParameters ∗parameters)
- struct cloudx1_CInstance ∗ cloudx1_InitProcess3 (const char ∗LoginKey, const char ∗RadioName, const char ∗Access_Key_ID, const char ∗Access_Key_Secret, const char ∗save_path, const struct cloudx1_CParameters ∗parameters, unsigned int frames_per_chunk)
- unsigned int cloudx1_GetProcessChunkFrames (struct cloudx1_CInstance ∗instance)
- int cloudx1_TerminateProcess (struct cloudx1_CInstance ∗instance)
- void cloudx1_ExitProcess (struct cloudx1_CInstance ∗instance)
- void cloudx1_SetPresetManager (struct cloudx1_CParameters ∗params, cloudx1_storage_reader reader, cloudx1_storage_reader_free, cloudx1_storage_writer writer, cloudx1_storage_exists exists, cloudx1_storage_getall getall, cloudx1_storage_getall_free getall_free, cloudx1_storage_remove remove, cloudx1_storage_rename rename, int IsReadOnly, void ∗userdata)
- void cloudx1_PresetManager_InformChange (struct cloudx1_CInstance ∗instance, const fs_char ∗relative↩_path, enum cloudx1_PresetChange_Kind change_kind)
- void cloudx1_SetMetadata (struct cloudx1_CInstance ∗instance, const char ∗key, const char ∗value)
- void cloudx1_SetMetadataMulti (struct cloudx1_CInstance ∗instance, const char ∗∗keyvalue)
- const char ∗∗ cloudx1_GetMetadataInfos (struct cloudx1_CInstance ∗instance)
- void cloudx1_FreeMetadataInfos (struct cloudx1_CInstance ∗instance, const char ∗∗infos)
- void cloudx1_StartUpdateThread (struct cloudx1_CInstance ∗instance, unsigned int port)
- void cloudx1_StopUpdateThread (struct cloudx1_CInstance ∗instance)
- int cloudx1_WaitUpdateThreadReady (struct cloudx1_CInstance ∗instance, int milliseconds)

- void cloudx1_ProcessAudio (struct cloudx1_CInstance *instance, const float *input, float *output)
- void cloudx1_ProcessAudio_Planar (struct cloudx1_CInstance *instance, float const *const *input, float *const *output)
- float * cloudx1_GetBufferIn (struct cloudx1_CInstance *instance)
- float * cloudx1_GetBufferOut (struct cloudx1_CInstance *instance)
- unsigned int cloudx1_GetEstimatedDelay (struct cloudx1_CInstance *instance)
- const char * cloudx1_GetFormatName (const enum cloudx1_SampleFormat fmt)
- enum cloudx1_SampleFormat cloudx1_GetFormatFromName (const char *name)
- unsigned int cloudx1_GetBytesFromFormat (const enum cloudx1_SampleFormat fmt)
- unsigned int cloudx1_GetMaxPacketFrame (struct cloudx1_CInstance *instance)
- unsigned int cloudx1_AddAudio (struct cloudx1_CInstance *instance, const uint8_t *payload, unsigned int nFrame, enum cloudx1_SampleFormat fmt)
- unsigned int cloudx1_AddPadAudio (struct cloudx1_CInstance *instance)
- unsigned int cloudx1_GetOutputCount (struct cloudx1_CInstance *instance)
- unsigned int cloudx1_GetAudio (struct cloudx1_CInstance *instance, uint8_t *payload, unsigned int max_↩ nFrame, enum cloudx1_SampleFormat fmt)
- void cloudx1_AudioConvertFrom (const uint8_t *payload, float *output, size_t nSpl, enum cloudx1_SampleFormat fmt)
- void cloudx1_AudioConvertTo (const float *input, uint8_t *payload, size_t nSpl, enum cloudx1_SampleFormat fmt)
- void cloudx1_StereoToMono (const float *input, float *output, size_t nFrame)
- void cloudx1_MonoToStereo (const float *input, float *output, size_t nFrame)
- void cloudx1_StereoToMono_Planar (const float *inputL, const float *inputR, float *output, size_t nFrame)
- void cloudx1_MonoToStereo_Planar (const float *input, float *outputL, float *outputR, size_t nFrame)
- void cloudx1_AudioMonoFromLiveStereo (const uint8_t *payload, float *output)
- void cloudx1_AudioMonoToLiveStereo (const float *input, uint8_t *payload)
- struct cloudx1_CClientInstance * cloudx1_NewClient (struct cloudx1_CInstance *instance)
- void cloudx1_DeleteClient (struct cloudx1_CClientInstance *client)
- const char * cloudx1_ProcessJson (struct cloudx1_CClientInstance *client, const char *json_str, int *need↩ _save)
- void cloudx1_FreeJsonAnswer (const char *json_str)
- int cloudx1_SaveState (struct cloudx1_CInstance *instance)
- uint64_t cloudx1_Webserver_tcp (unsigned int listenport, unsigned int listenport_secure, const char *socket_ip, unsigned int socket_port)
- uint64_t cloudx1_Webserver_tcp2 (unsigned int listenport, unsigned int listenport_secure, const char *socket_ip, unsigned int socket_port, const struct cloudx1_CParameters *parameters)
- uint64_t cloudx1_Webserver (unsigned int listenport, unsigned int listenport_secure, struct cloudx1_CInstance *instance)
- int cloudx1_Webserver_Stop (uint64_t id, int timeout_ms)
- int cloudx1_Webserver_Status (uint64_t id)
- void cloudx1_Webserver_SetAppHealth (struct cloudx1_CInstance *instance, int httpcode, const char *contenttype, const char *content)
- void cloudx1_Webserver_GetAppHealth (struct cloudx1_CInstance *instance, int *httpcode, char **contenttype, char **content)
- void cloudx1_Webserver_FreeString (char *str)

11.9.1 Macro Definition Documentation

11.9.1.1 CLOUDX1_DECL

```
#define CLOUDX1_DECL __declspec(dllimport)
```

Definition at line 14 of file sound4.x1.cloud.h.

11.9.1.2 CLOUDX1_HAS_CLOUDBUS

```
#define CLOUDX1_HAS_CLOUDBUS 0
```

Definition at line 22 of file sound4.x1.cloud.h.

11.9.1.3 CLOUDX1_HAS_WEBSERVER

```
#define CLOUDX1_HAS_WEBSERVER 1
```

Definition at line 21 of file sound4.x1.cloud.h.

11.10 sound4.x1.cloud.h

Go to the documentation of this file.

```
00001
00004 #pragma once
00005
00006 #include <stdint.h>
00007 #ifdef __unix__
00008     #include <sys/types.h>
00009     #define CLOUDX1_DECL        __attribute__ ((visibility ("default")))
00010 #elif defined(_WIN32) || defined(WIN32)
00011     #ifdef BUILDING_CLOUDX1_DLL
00012         #define CLOUDX1_DECL    __declspec(dllexport)
00013     #else
00014         #define CLOUDX1_DECL    __declspec(dllimport)
00015     #endif
00016 #elif defined(__APPLE__)
00017     #include <sys/types.h>
00018     #define CLOUDX1_DECL        __attribute__ ((visibility ("default")))
00019 #endif
00020
00021 #define CLOUDX1_HAS_WEBSERVER 1
00022 #define CLOUDX1_HAS_CLOUDBUS 0
00023
00024 #ifdef __cplusplus
00025 extern "C" {
00026 #endif // __cplusplus
00027
00073 // ---------------------------------------------------------------
00092 // ---------------------------------------------------------------
00158 // ---------------------------------------------------------------
00159
00160 // ---------------------------------------------------------------
00172 #define CLOUDX1_AUDIOFRAME_COUNT      64
00178 #define CLOUDX1_CHANNEL_COUNT          2
00184 #define CLOUDX1_AUDIO_INPUT_COUNT      1
00190 #define CLOUDX1_AUDIO_OUTPUT_COUNT     1
00196 #define CLOUDX1_SAMPLE_RATE            48000
00197
00203 struct SOUND4_ProcessInfo {
00204     size_t struct_size;
00205     const char *name;
00206     const char *prefix;
00207     const char *shortname;
00208     const char *version;
00209 };
00210
00218 CLOUDX1_DECL const struct SOUND4_ProcessInfo* SOUND4_GetProcessInfo();
00219
00225 CLOUDX1_DECL const char *cloudx1_GetVersion();
00226
00239 CLOUDX1_DECL unsigned int cloudx1_GetChunkSizeInFrames();
00240
00249 CLOUDX1_DECL unsigned int* cloudx1_GetPossibleChunkSizeInFrames();
00250
00258 CLOUDX1_DECL unsigned int cloudx1_GetChannelCount();
00259
00268 CLOUDX1_DECL unsigned int cloudx1_GetAudioInputCount();
00269
00278 CLOUDX1_DECL unsigned int cloudx1_GetAudioOutputCount();
00279
```

```
CLOUDX1_DECL unsigned int cloudx1_GetSampleRate();

enum cloudx1_LogSeverity {
    none = 0,
    fatal = 1,
    error = 2,
    warning = 3,
    info = 4,
    verbose = 5,
    verbose2 = 6,
    verbose3 = 7,
    verbose4 = 8,
    verbose5 = 9,
};

typedef void (*cloudx1_loggerfn) (enum cloudx1_LogSeverity, const char *);

CLOUDX1_DECL void cloudx1_SetLoggerCallback( cloudx1_loggerfn logger );

CLOUDX1_DECL void cloudx1_SetLogSeverity( enum cloudx1_LogSeverity severity );

// ---------------------------------------------------------------
// ---------------------------------------------------------------
struct cloudx1_CInstance;

struct cloudx1_CParameters;

CLOUDX1_DECL struct cloudx1_CParameters *cloudx1_NewParameters();

CLOUDX1_DECL void cloudx1_FreeParameters(struct cloudx1_CParameters *params);

CLOUDX1_DECL void cloudx1_SetParameter(struct cloudx1_CParameters *params, const char *name, const char *value);

CLOUDX1_DECL const char *cloudx1_GetParameter(struct cloudx1_CParameters *params, const char *name);

CLOUDX1_DECL void cloudx1_FreeParameterValue(const char *value);

CLOUDX1_DECL struct cloudx1_CInstance *cloudx1_InitProcess(
        const char *LoginKey,
        const char *RadioName,
        const char *Access_Key_ID,
        const char *Access_Key_Secret,
        const char *save_path
    );

CLOUDX1_DECL struct cloudx1_CInstance *cloudx1_InitProcess2(
        const char *LoginKey,
        const char *RadioName,
        const char *Access_Key_ID,
        const char *Access_Key_Secret,
        const char *save_path,
        const struct cloudx1_CParameters *parameters
    );

CLOUDX1_DECL struct cloudx1_CInstance *cloudx1_InitProcess3(
        const char *LoginKey,
        const char *RadioName,
        const char *Access_Key_ID,
        const char *Access_Key_Secret,
        const char *save_path,
        const struct cloudx1_CParameters *parameters,
        unsigned int frames_per_chunk
    );

CLOUDX1_DECL unsigned int cloudx1_GetProcessChunkFrames(struct cloudx1_CInstance *instance);

CLOUDX1_DECL int cloudx1_TerminateProcess(struct cloudx1_CInstance *instance);

CLOUDX1_DECL void cloudx1_ExitProcess(struct cloudx1_CInstance *instance);

#if CLOUDX1_HAS_CLOUDBUS
// ---------------------------------------------------------------
struct cloudx1_CBus;

CLOUDX1_DECL struct cloudx1_CBus* cloudx1_NewBus();

CLOUDX1_DECL void cloudx1_FreeBus(struct cloudx1_CBus *bus);

CLOUDX1_DECL void cloudx1_SetInstanceBus(struct cloudx1_CParameters *params, struct cloudx1_CBus *bus);


#endif // CLOUDX1_HAS_CLOUDBUS

// ---------------------------------------------------------------
// ---------------------------------------------------------------
```

```
// OS dependent filesystem path char type
#ifdef _WIN32
    typedef wchar_t fs_char;
#else // !_WIN32
    typedef char fs_char;
#endif // !_WIN32

typedef char * (*cloudx1_storage_reader) (const fs_char *filename, void* userdata);

typedef void (*cloudx1_storage_reader_free) (char *content, void* userdata);

typedef int (*cloudx1_storage_writer) (const fs_char *filename, const char *content, void* userdata);

typedef int (*cloudx1_storage_exists) (const fs_char *filename, void* userdata);

typedef fs_char** (*cloudx1_storage_getall) (void* userdata);

typedef void (*cloudx1_storage_getall_free) (fs_char**all, void* userdata);

typedef int (*cloudx1_storage_remove) (const fs_char *filename, void* userdata);

typedef int (*cloudx1_storage_rename) (const fs_char *from, const fs_char *to, void* userdata);

CLOUDX1_DECL void cloudx1_SetPresetManager(struct cloudx1_CParameters *params
    , cloudx1_storage_reader reader, cloudx1_storage_reader_free
    , cloudx1_storage_writer writer
    , cloudx1_storage_exists exists
    , cloudx1_storage_getall getall, cloudx1_storage_getall_free getall_free
    , cloudx1_storage_remove remove
    , cloudx1_storage_rename rename
    , int IsReadOnly
    , void* userdata
    );

enum cloudx1_PresetChange_Kind {
    change_kind_created = 1,
    change_kind_modified   ,
    change_kind_deleted    ,
};

CLOUDX1_DECL void cloudx1_PresetManager_InformChange(struct cloudx1_CInstance *instance, const fs_char *relative_path, enum cloudx1_PresetChange_Kind change_kind);

// ---------------------------------------------------------------
// ---------------------------------------------------------------

CLOUDX1_DECL void cloudx1_SetMetadata(struct cloudx1_CInstance *instance, const char* key, const char* value);

CLOUDX1_DECL void cloudx1_SetMetadataMulti(struct cloudx1_CInstance *instance, const char** keyvalue);

CLOUDX1_DECL const char** cloudx1_GetMetadataInfos(struct cloudx1_CInstance *instance);

CLOUDX1_DECL void cloudx1_FreeMetadataInfos(struct cloudx1_CInstance *instance, const char** infos);

// ---------------------------------------------------------------
// ---------------------------------------------------------------

CLOUDX1_DECL void cloudx1_StartUpdateThread(struct cloudx1_CInstance *instance, unsigned int port);

CLOUDX1_DECL void cloudx1_StopUpdateThread(struct cloudx1_CInstance *instance);

CLOUDX1_DECL int cloudx1_WaitUpdateThreadReady(struct cloudx1_CInstance *instance, int milliseconds);

// ---------------------------------------------------------------
// ---------------------------------------------------------------

CLOUDX1_DECL void cloudx1_ProcessAudio(struct cloudx1_CInstance *instance, const float *input, float *output );

CLOUDX1_DECL void cloudx1_ProcessAudio_Planar(struct cloudx1_CInstance *instance
    , float const * const *input
    , float * const *output);

CLOUDX1_DECL float *cloudx1_GetBufferIn(struct cloudx1_CInstance *instance);

CLOUDX1_DECL float *cloudx1_GetBufferOut(struct cloudx1_CInstance *instance);

CLOUDX1_DECL unsigned int cloudx1_GetEstimatedDelay(struct cloudx1_CInstance *instance);

// ---------------------------------------------------------------
// ---------------------------------------------------------------
    #ifdef _MSC_VER
        #define __BYTE_ORDER__  REG_DWORD
        #define __ORDER_LITTLE_ENDIAN__ REG_DWORD_LITTLE_ENDIAN
        #define __ORDER_BIG_ENDIAN__    REG_DWORD_BIG_ENDIAN
    #endif
```

```
enum cloudx1_SampleFormat {
    INVALID_FORMAT=0,
    S16_LE,
    S16_BE,
    S24_LE,
    S24_BE,
    S32_LE,
    S32_BE,
    F32_LE,
    F32_BE,

    // Native definitions, only links to the physical ones
    #if __BYTE_ORDER__ == __ORDER_LITTLE_ENDIAN__
        S16_NATIVE=S16_LE,
        S24_NATIVE=S24_LE,
        S32_NATIVE=S32_LE,
        F32_NATIVE=F32_LE,
    #else
        S16_NATIVE=S16_BE,
        S24_NATIVE=S24_BE,
        S32_NATIVE=S32_BE,
        F32_NATIVE=F32_BE,
    #endif
};

CLOUDX1_DECL const char *cloudx1_GetFormatName(const enum cloudx1_SampleFormat fmt);

CLOUDX1_DECL enum cloudx1_SampleFormat cloudx1_GetFormatFromName(const char *name);

CLOUDX1_DECL unsigned int cloudx1_GetBytesFromFormat(const enum cloudx1_SampleFormat fmt);


CLOUDX1_DECL unsigned int cloudx1_GetMaxPacketFrame(struct cloudx1_CInstance *instance);

CLOUDX1_DECL unsigned int cloudx1_AddAudio(struct cloudx1_CInstance *instance, const uint8_t *payload, unsigned int nFrame, enum cloudx1_SampleFormat fmt );

CLOUDX1_DECL unsigned int cloudx1_AddPadAudio(struct cloudx1_CInstance *instance);

CLOUDX1_DECL unsigned int cloudx1_GetOutputCount(struct cloudx1_CInstance *instance);

CLOUDX1_DECL unsigned int cloudx1_GetAudio(struct cloudx1_CInstance *instance, uint8_t *payload, unsigned int max_nFrame, enum cloudx1_SampleFormat fmt );

// ------------------------------------------------------------
// ------------------------------------------------------------
CLOUDX1_DECL void cloudx1_AudioConvertFrom(const uint8_t *payload, float *output, size_t nSpl, enum cloudx1_SampleFormat fmt);

CLOUDX1_DECL void cloudx1_AudioConvertTo(const float *input, uint8_t *payload, size_t nSpl, enum cloudx1_SampleFormat fmt);

CLOUDX1_DECL void cloudx1_StereoToMono(const float *input, float *output, size_t nFrame);

CLOUDX1_DECL void cloudx1_MonoToStereo(const float *input, float *output, size_t nFrame);

CLOUDX1_DECL void cloudx1_StereoToMono_Planar(const float *inputL, const float *inputR, float *output, size_t nFrame);

CLOUDX1_DECL void cloudx1_MonoToStereo_Planar(const float *input, float *outputL, float *outputR, size_t nFrame);

CLOUDX1_DECL void cloudx1_AudioMonoFromLiveStereo(const uint8_t *payload, float *output);

CLOUDX1_DECL void cloudx1_AudioMonoToLiveStereo(const float *input, uint8_t *payload);

// ------------------------------------------------------------
// ------------------------------------------------------------
struct cloudx1_CClientInstance;

CLOUDX1_DECL struct cloudx1_CClientInstance *cloudx1_NewClient(struct cloudx1_CInstance *instance);

CLOUDX1_DECL void cloudx1_DeleteClient(struct cloudx1_CClientInstance *client);

CLOUDX1_DECL const char *cloudx1_ProcessJson(struct cloudx1_CClientInstance *client, const char *json_str, int *need_save);

CLOUDX1_DECL void cloudx1_FreeJsonAnswer(const char *json_str);

CLOUDX1_DECL int cloudx1_SaveState(struct cloudx1_CInstance *instance);

#if CLOUDX1_HAS_WEBSERVER
// ------------------------------------------------------------
// ------------------------------------------------------------
CLOUDX1_DECL uint64_t cloudx1_Webserver_tcp(unsigned int listenport, unsigned int listenport_secure, const char *socket_ip, unsigned int socket_port);
```

```
// ------------------------------------------------------------
CLOUDX1_DECL uint64_t cloudx1_Webserver_tcp2(unsigned int listenport, unsigned int listenport_secure, const char *socket_ip, unsigned int socket_port, const struct cloudx1_CParameters *parameters);

CLOUDX1_DECL uint64_t cloudx1_Webserver(unsigned int listenport, unsigned int listenport_secure, struct cloudx1_CInstance *instance);

CLOUDX1_DECL int cloudx1_Webserver_Stop(uint64_t id, int timeout_ms);

CLOUDX1_DECL int cloudx1_Webserver_Status(uint64_t id);

CLOUDX1_DECL void cloudx1_Webserver_SetAppHealth(struct cloudx1_CInstance *instance, int httpcode, const char *contenttype, const char *content);

CLOUDX1_DECL void cloudx1_Webserver_GetAppHealth(struct cloudx1_CInstance *instance, int* httpcode, char** contenttype, char** content);

CLOUDX1_DECL void cloudx1_Webserver_FreeString(char *str);

#define SOUND4_INVALID_WEBSERVER_ID            ((uint64_t)-1)

#define SOUND4_WEBSERVER_HTTP_OK               (1«0)
#define SOUND4_WEBSERVER_HTTPS_OK              (1«1)

#endif // CLOUDX1_HAS_WEBSERVER

#ifdef __cplusplus
} // extern "C"
#endif // __cplusplus
```

11.11 sound4.x1.cloud.hpp File Reference

C++ wrapper for library.

```
#include <string>
#include <exception>
#include <thread>
#include <functional>
#include <memory>
#include <array>
#include <assert.h>
#include <stdexcept>
#include <filesystem>
#include <string.h>
#include "sound4.x1.cloud.h"
#include <stringapiset.h>
#include <wchar.h>
```

Classes

- struct sound4::cloudx1::helper::SampleFormat< T >

  Helper for Sample format types.
- struct sound4::cloudx1::helper::SampleFormat< int16_t >
- struct sound4::cloudx1::helper::SampleFormat< int32_t >
- struct sound4::cloudx1::helper::SampleFormat< float >
- class sound4::cloudx1::CPresetLoader
- class sound4::cloudx1::CInstance
- class sound4::cloudx1::CInstance::CClient

Namespaces

- namespace sound4
- namespace sound4::cloudx1
- namespace sound4::cloudx1::helper

Macros

- #define fs_strdup wcsdup

  helper for OS dependant file name copy

Typedefs

- using sound4::cloudx1::SampleFormat = cloudx1_SampleFormat
- using sound4::cloudx1::LogSeverity = cloudx1_LogSeverity
- using sound4::cloudx1::log_cb_t = std::function< void(LogSeverity, const std::string &)>
- using sound4::cloudx1::PresetChange_Kind = cloudx1_PresetChange_Kind

Variables

- const size_t sound4::cloudx1::ChunkFrames = 64
- const size_t sound4::cloudx1::InputChannels = 2 ∗ 1
- const size_t sound4::cloudx1::OutputChannels = 2 ∗ 1
- const size_t sound4::cloudx1::InputSampleSize =ChunkFrames∗InputChannels
- const size_t sound4::cloudx1::OutputSampleSize =ChunkFrames∗OutputChannels
- const size_t sound4::cloudx1::SampleRate = 48000

11.11.1 Macro Definition Documentation

11.11.1.1 fs_strdup

```
#define fs_strdup wcsdup
```

Definition at line 25 of file sound4.x1.cloud.hpp.

11.12 sound4.x1.cloud.hpp

Go to the documentation of this file.

```
#pragma once

#include <string>
#include <exception>
#include <thread>
#include <functional>
#include <memory>
#include <array>
#include <assert.h>
#include <stdexcept>
#include <filesystem>
#include <string.h>

#include "sound4.x1.cloud.h"


// Filesystem path char type
#ifdef _WIN32
    #include <stringapiset.h>
    #include <wchar.h>
    #define fs_strdup wcsdup
#else // !_WIN32
    #define fs_strdup strdup
#endif // !_WIN32

// bridge C callbacks to CPresetLoader
extern "C" {
    static char *cloudx1_custom_reader(const fs_char *filename, void* userdata);
    static void cloudx1_custom_reader_free(char *content, void* userdata);
    static int cloudx1_custom_writer(const fs_char *filename, const char *content, void* userdata);
    static int cloudx1_custom_exists(const fs_char *filename, void* userdata);
    static fs_char** cloudx1_custom_getall(void* userdata);
    static void cloudx1_custom_getall_free(fs_char** all, void* userdata);
    static int cloudx1_custom_remove(const fs_char *filename, void* userdata);
    static int cloudx1_custom_rename(const fs_char *from, const fs_char *to, void* userdata);
};

namespace sound4 {
namespace cloudx1 {
    static constexpr const char *process_name = "SOUND4 x1.CLOUD";
    static constexpr const char *process_shortname = "x1";
    using SampleFormat = cloudx1_SampleFormat;
    const size_t ChunkFrames=CLOUDX1_AUDIOFRAME_COUNT;
    const size_t InputChannels=CLOUDX1_CHANNEL_COUNT*CLOUDX1_AUDIO_INPUT_COUNT;
    const size_t OutputChannels=CLOUDX1_CHANNEL_COUNT*CLOUDX1_AUDIO_OUTPUT_COUNT;
    const size_t InputSampleSize=ChunkFrames*InputChannels;
    const size_t OutputSampleSize=ChunkFrames*OutputChannels;
    const size_t SampleRate=CLOUDX1_SAMPLE_RATE;

    namespace helper {
        #ifdef _WIN32
        static inline std::string WStringToUTF8(const std::wstring& wstr) {
            if (wstr.empty()) return {};
            int size = WideCharToMultiByte(CP_UTF8, 0, &wstr[0], (int)wstr.size(), NULL, 0, NULL, NULL);
            std::string str(size, 0);
            WideCharToMultiByte(CP_UTF8, 0, &wstr[0], (int)wstr.size(), &str[0], size, NULL, NULL);
            return str;
        }
        static inline std::wstring UTF8ToWString(const std::string& str) {
            if (str.empty()) return std::wstring();
            int size = MultiByteToWideChar(CP_UTF8, 0, &str[0], (int)str.size(), NULL, 0);
            std::wstring wstr(size, 0);
            MultiByteToWideChar(CP_UTF8, 0, &str[0], (int)str.size(), &wstr[0], size);
            return wstr;
        }
        #endif // _WIN32

            template<typename T>
        struct SampleFormat {
        };
            template<>
        struct SampleFormat<int16_t> {
            const cloudx1_SampleFormat format = S16_NATIVE;
        };
            template<>
        struct SampleFormat<int32_t> {
            const cloudx1_SampleFormat format = S32_NATIVE;
        };
            template<>
        struct SampleFormat<float> {
```

```
            const cloudx1_SampleFormat format = F32_NATIVE;
        };


        static inline void AudioConvertFrom(const uint8_t *payload, float *output, size_t nSpl, cloudx1_SampleFormat fmt) {
            cloudx1_AudioConvertFrom(payload, output, nSpl, fmt);
        }
        static inline void AudioConvertTo(const float *input, uint8_t *payload, size_t nSpl, cloudx1_SampleFormat fmt) {
            cloudx1_AudioConvertTo(input, payload, nSpl, fmt);
        }
        static inline void StereoToMono(const float *input, float *output, size_t nSpl) {
            cloudx1_StereoToMono(input, output, nSpl);
        }
        static inline void MonoToStereo(const float *input, float *output, size_t nSpl) {
            cloudx1_MonoToStereo(input, output, nSpl);
        }
        static inline void StereoToMono_Planar(const float *inputL, const float *inputR, float *output, size_t nSpl) {
            cloudx1_StereoToMono_Planar(inputL, inputR, output, nSpl);
        }
        static inline void MonoToStereo_Planar(const float *input, float *outputL, float *outputR, size_t nSpl) {
            cloudx1_MonoToStereo_Planar(input, outputL, outputR, nSpl);
        }
        static inline void AudioMonoFromLiveStereo(const uint8_t *payload, float *output) {
            cloudx1_AudioMonoFromLiveStereo(payload, output);
        }
        static inline void AudioMonoToLiveStereo(const float *input, uint8_t *payload) {
            cloudx1_AudioMonoToLiveStereo(input, payload);
        }

    }; // namespace helper

    static inline std::string GetVersion()
        {
            return std::string(cloudx1_GetVersion());
        }

    static inline unsigned int GetChunkSizeInFrames()
        {
            return cloudx1_GetChunkSizeInFrames();
        }

    static inline std::vector<unsigned int> GetPossibleChunkSizeInFrames()
        {
            std::vector<unsigned int> list;
            for (unsigned int* src=cloudx1_GetPossibleChunkSizeInFrames();*src;src++) {
                list.push_back(*src);
            }
            return list;
        }

    static inline unsigned int GetChannelCount()
        {
            return cloudx1_GetChannelCount();
        }

    static inline unsigned int GetAudioInputCount()
        {
            return cloudx1_GetAudioInputCount();
        }

    static inline unsigned int GetAudioOutputCount()
        {
            return cloudx1_GetAudioOutputCount();
        }

    static inline unsigned int GetSampleRate()
        {
            return cloudx1_GetSampleRate();
        }

    static inline void SanityCheck(bool a_bCheckFrames = true)
    {
        // Do some sanity checks
        if (cloudx1_GetSampleRate()!=CLOUDX1_SAMPLE_RATE) {
            throw std::runtime_error("Bad library sampling rate");
        }
        if (a_bCheckFrames && cloudx1_GetChunkSizeInFrames()!=ChunkFrames) {
            throw std::runtime_error("Bad library frame size");
        }
        if (cloudx1_GetChannelCount()!=CLOUDX1_CHANNEL_COUNT) {
            throw std::runtime_error("Bad library channel count");
        }
        if (cloudx1_GetAudioInputCount()!=CLOUDX1_AUDIO_INPUT_COUNT) {
```

```
            throw std::runtime_error("Bad library input count");
        }
        if (cloudx1_GetAudioOutputCount()!=CLOUDX1_AUDIO_OUTPUT_COUNT) {
            throw std::runtime_error("Bad library output count");
        }
    }

    static inline std::string GetFormatName(const SampleFormat fmt)
        {
            return std::string(cloudx1_GetFormatName(fmt));
        }

    static inline SampleFormat GetFormatFromName(const std::string& name)
        {
            return cloudx1_GetFormatFromName(name.c_str());
        }

    static inline unsigned int GetBytesFromFormat(const SampleFormat fmt)
        {
            return cloudx1_GetBytesFromFormat(fmt);
        }

    using LogSeverity = cloudx1_LogSeverity;
    using log_cb_t = std::function<void(LogSeverity,const std::string&)>;

    static log_cb_t _log_cb;
    extern "C" {
        static inline void _log_cb_c(cloudx1_LogSeverity severity, const char *c_msg) {
            _log_cb(severity, std::string(c_msg));
        }
    }
    static inline void SetLogSeverity(LogSeverity severity)
        {
            cloudx1_SetLogSeverity(severity);
        }
    static inline void SetLoggerCallback(log_cb_t cb)
        {
            _log_cb=cb;
            cloudx1_SetLoggerCallback(&_log_cb_c);
        }

#if CLOUDX1_HAS_CLOUDBUS
    class CBus {
        public:
            CBus()
                : m_bus(cloudx1_NewBus()) {}
            ~CBus()
                {
                    cloudx1_FreeBus(m_bus);
                    m_bus = nullptr;
                }
            cloudx1_CBus *Get() const { return m_bus; }
        private:
            cloudx1_CBus *m_bus;
    };
#endif // CLOUDX1_HAS_CLOUDBUS

    class CPresetLoader {
    public:
        CPresetLoader() = default;
        virtual ~CPresetLoader() = default;

        virtual bool IsReadOnly() = 0;
        virtual bool Exists(const std::filesystem::path &name) = 0;
        virtual bool Remove(const std::filesystem::path &name) = 0;
        virtual bool Rename(const std::filesystem::path &from, const std::filesystem::path &to) = 0;
        virtual std::vector<std::filesystem::path> GetAll() = 0;
        virtual std::string Read(const std::filesystem::path &filename) = 0;
        virtual bool Write(const std::filesystem::path &filename, const std::string &content) =0;
    };
    using PresetChange_Kind = cloudx1_PresetChange_Kind;

    class CInstance {
    public:
        CInstance()
            {
                params = cloudx1_NewParameters();
                if (!params) throw std::bad_alloc();
            }
        // non-copyable
        CInstance( const CInstance& ) = delete;
        CInstance& operator=( const CInstance& ) = delete;
        virtual ~CInstance()
            {
                Stop();
                if (params) cloudx1_FreeParameters(params);
            }
```

```
        bool IsOk() const { return instance!=nullptr; }
        void SetParam(const std::string& name, const std::string& value)
            {
                assert(params);
                cloudx1_SetParameter(params, name.c_str(), value.c_str());
            }
        std::string GetParam(const std::string& name)
            {
                assert(params);
                auto c_value=cloudx1_GetParameter(params, name.c_str());
                std::string ret(c_value);
                cloudx1_FreeParameterValue(c_value);
                return ret;
            }

        void SetPresetManager(CPresetLoader *preset_manager)
            {
                if (!preset_manager) return;
                assert(params);
                cloudx1_SetPresetManager(params,
                    cloudx1_custom_reader,
                    cloudx1_custom_reader_free,
                    cloudx1_custom_writer,
                    cloudx1_custom_exists,
                    cloudx1_custom_getall,
                    cloudx1_custom_getall_free,
                    cloudx1_custom_remove,
                    cloudx1_custom_rename,
                    preset_manager->IsReadOnly(),
                    preset_manager
                );
            }

#if CLOUDX1_HAS_CLOUDBUS
            void SetBus(const CBus& bus) {
                assert(params);
                cloudx1_SetInstanceBus(params,bus.Get());
            }
#endif // CLOUDX1_HAS_CLOUDBUS

        bool Create(const std::string& LoginKey, const std::string& RadioName, const std::string& AWS_Access_ID, const std::string& AWS_Access_Secret, const std::filesystem::path& save_path, int json_port = 0, unsigned int frames_per_chunk=64)
            {
                assert(!instance);
                std::string l_save_path;
                if (!save_path.empty()) {
                    l_save_path = save_path.u8string();
                }
                instance = cloudx1_InitProcess3(LoginKey.c_str(), RadioName.c_str(), AWS_Access_ID.c_str(), AWS_Access_Secret.c_str(), l_save_path.c_str(), params, frames_per_chunk);
                if (!instance) return false;
                if (!init_metadata.empty()) {
                    for (auto&& [key,value]: init_metadata) {
                        cloudx1_SetMetadata(instance, key.c_str(), value.c_str());
                    }
                    init_metadata.clear();
                }
                update_thread = std::thread([this, json_port](){
                    OnUpdateThreadStart();
                    cloudx1_StartUpdateThread(instance, json_port);
                    OnUpdateThreadStop();
                });
                int timeout=5000;
                #ifdef DEBUG
                    timeout=60*1000; // For debugger pauses
                #endif
                if (cloudx1_WaitUpdateThreadReady(instance, timeout)<0) {
                    return false;
                }
                return true;
            }

        unsigned int GetChunkFrames() {
            if (instance) {
                return cloudx1_GetProcessChunkFrames(instance);
            }
            return 0;
        }

        void PresetManager_InformChange(const std::filesystem::path& relative_path, PresetChange_Kind change_kind)
            {
                cloudx1_PresetManager_InformChange(instance, relative_path.c_str(), (cloudx1_PresetChange_Kind) change_kind);
            }

```

```
        void SetMetadata(const std::string& key, const char* value)
            {
                if (instance) {
                    cloudx1_SetMetadata(instance, key.c_str(), value);
                } else {
                    init_metadata.push_back( {key, value} );
                }
            }

        void SetMetadataMulti(const std::unordered_map<std::string, const char*>& list)
            {
                if (instance) {
                    typedef const char* pchar;
                    pchar* keyvalue=new pchar[2*list.size()+1];
                    size_t n=0;
                    for (auto&& [key,value]: list) {
                        keyvalue[2*n+0]=key.c_str();
                        keyvalue[2*n+1]=value;
                        n++;
                    }
                    keyvalue[2*n+0]=nullptr;

                    cloudx1_SetMetadataMulti(instance, keyvalue);

                    delete[] keyvalue;
                } else {
                    for (auto&& [key,value]: list) {
                        if (value) {
                            init_metadata.push_back( {key, value} );
                        }
                    }
                }
            }

        std::vector< std::tuple<std::string,std::string> > GetMetadataInfos()
            {
                std::vector< std::tuple<std::string,std::string> > values;
                const char** c_values = cloudx1_GetMetadataInfos(instance);
                if (c_values) {
                    for (const char** c_value=c_values; *c_value; ) {
                        std::string key(*c_value);
                        c_value++;
                        if (*c_value) {
                            std::string descr(*c_value);
                            c_value++;
                            values.push_back( {key,descr} );
                        }
                    }
                    cloudx1_FreeMetadataInfos(instance, c_values);
                }
                return values;
            }

        // Can be overloaded, called at start of UpdateThread in the thread
        virtual void OnUpdateThreadStart() {}
        // Can be overloaded to call at end of UpdateThread in the thread
        virtual void OnUpdateThreadStop() {}

#if CLOUDX1_HAS_WEBSERVER
        bool StartWebServer(int http_port, int https_port=0)
            {
                assert(instance);
                assert(webserver==SOUND4_INVALID_WEBSERVER_ID);
                webserver = cloudx1_Webserver(http_port,https_port,instance);
                if (webserver==SOUND4_INVALID_WEBSERVER_ID) {
                    return false;
                }
                int web_status=cloudx1_Webserver_Status(webserver);
                if (http_port && (web_status & SOUND4_WEBSERVER_HTTP_OK) == 0) {
                    return false;
                }
                if (https_port && (web_status & SOUND4_WEBSERVER_HTTPS_OK) == 0) {
                    return false;
                }
                return true;
            }
        void StopWebServer()
            {
                if (webserver != SOUND4_INVALID_WEBSERVER_ID) {
                    cloudx1_Webserver_Stop(webserver, 1000);
                    webserver = SOUND4_INVALID_WEBSERVER_ID;
                }
            }

        void SetWebServerAppHealth(int httpcode, const std::string& contenttype, const std::string&
    content)
            {
```

```
                assert(instance);
                cloudx1_Webserver_SetAppHealth(instance, httpcode, contenttype.c_str(), content.c_str());
            }
        void GetWebServerAppHealth(int &httpcode, std::string& contenttype, std::string& content)
            {
                assert(instance);
                char* c_contenttype=nullptr;
                char* c_content=nullptr;
                cloudx1_Webserver_GetAppHealth(instance, &httpcode, &c_contenttype, &c_content);
                contenttype=c_contenttype;
                content=c_content;
                cloudx1_Webserver_FreeString(c_contenttype);
                cloudx1_Webserver_FreeString(c_content);
        }
#endif // CLOUDX1_HAS_WEBSERVER

        int Terminate()
            {
                if (!instance) return 0;
                return cloudx1_TerminateProcess(instance);
            }

        void Stop()
            {
                if (!instance) return;
#if CLOUDX1_HAS_WEBSERVER
                StopWebServer();
#endif // CLOUDX1_HAS_WEBSERVER
                if (update_thread.joinable()) {
                    cloudx1_StopUpdateThread(instance); // this will exit the update thread
                    update_thread.join();
                }
                cloudx1_ExitProcess(instance);
                instance=nullptr;
            }

        unsigned int GetEstimatedDelay()
            {
                assert(instance);
                return cloudx1_GetEstimatedDelay(instance);
            }

        std::array<float,InputSampleSize>& GetBufferIn()
            {
                assert(instance);
                float *buf=cloudx1_GetBufferIn(instance);
                return reinterpret_cast< std::array<float,InputSampleSize>& >(*buf);

            }
        std::array<float,OutputSampleSize>& GetBufferOut()
            {
                assert(instance);
                float *buf= cloudx1_GetBufferOut(instance);
                return reinterpret_cast< std::array<float,OutputSampleSize>& >(*buf);
            }
        void ProcessAudio()
            {
                assert(instance);
                cloudx1_ProcessAudio(instance, cloudx1_GetBufferIn(instance), cloudx1_GetBufferOut(instance));
            }
        // void ProcessAudio_Planar(const std::array< const std::array<const float,ChunkFrames>, InputChannels>& input, std::array< std::array<float,ChunkFrames>, OutputChannels>& output)
        void ProcessAudio_Planar(float const * const *input, float * const *output)
            {
                assert(instance);
                cloudx1_ProcessAudio_Planar(instance, input, output);
            }

            template<typename T>
        std::vector<T> ProcessAnyAudio(const std::vector<T> input)
            {
                assert(instance);
                std::vector<T> output;
                unsigned int out_offset=0;
                unsigned int in_offset=0;
                unsigned int todo = input.size();
                while (todo>0) {
                    unsigned int left = AddAudio(&input[in_offset], todo);
                    unsigned int out_avail = cloudx1_GetOutputCount(instance);
                    output.resize(out_offset + out_avail);
                    GetAudio(&output[out_offset], out_avail);
                    out_offset+=out_avail;
                    in_offset += todo-left;
                    todo=left;
                }
```

```
                return output;
            }

        class CClient {
            public:
                CClient(cloudx1_CInstance* instance)
                    {
                        assert(instance);
                        client=cloudx1_NewClient(instance);
                        if (!client) throw std::bad_alloc();
                    }
                // non-copyable
                CClient( const CInstance& ) = delete;
                CClient& operator=( const CInstance& ) = delete;
                ~CClient()
                    {
                        if (client) {
                            cloudx1_DeleteClient(client);
                            client=nullptr;
                        }
                    }
                std::string ProcessJson(const std::string &request, bool *NeedSave = nullptr)
                    {
                        assert(client);
                        int need_save=0;
                        const char *canswer = cloudx1_ProcessJson(client, request.c_str(), &need_save);
                        if (!canswer) return {};
                        std::string answer(canswer);
                        cloudx1_FreeJsonAnswer (canswer);
                        if (NeedSave) {
                            *NeedSave=(need_save!=0);
                        }
                        return answer;
                    }
            private:
                cloudx1_CClientInstance *client = nullptr;
        };
        std::shared_ptr<CClient> NewClient()
            {
                assert(instance);
                return std::make_shared<CClient>(instance);
            }

    protected:
            template<typename T>
        unsigned int AddAudio(const T* payload, unsigned int nFrame)
            {
                assert(instance);
                return cloudx1_AddAudio(instance, reinterpret_cast<const T*>(payload), nFrame, helper::SampleFormat<T>::format);
            }
            template<typename T>
        unsigned int GetAudio(T* payload, unsigned int max_nFrame)
            {
                assert(instance);
                return cloudx1_GetAudio(instance, reinterpret_cast<T*>(payload), max_nFrame, helper::SampleFormat<T>::format);
            }

    private:
        cloudx1_CParameters* params = nullptr;
        cloudx1_CInstance* instance = nullptr;
        std::thread update_thread;
        std::vector< std::pair<std::string,std::string> > init_metadata;
#if CLOUDX1_HAS_WEBSERVER
        uint64_t webserver = SOUND4_INVALID_WEBSERVER_ID;
#endif // CLOUDX1_HAS_WEBSERVER
    };

}; // namespace cloudx1
}; // namespace sound4

// bridge C callbacks to CPresetLoader
extern "C" {
    static char *cloudx1_custom_reader(const fs_char *filename, void* userdata) {
        sound4::cloudx1::CPresetLoader *preset_loader=reinterpret_cast<sound4::cloudx1::CPresetLoader*>(userdata);
        std::string content=preset_loader->Read(filename);
        return strdup(content.c_str());
    }
    static void cloudx1_custom_reader_free(char *content, void* userdata) {
        if (!content) return;
        free(content);
    }
    static int cloudx1_custom_writer(const fs_char *filename, const char *content, void* userdata) {
        sound4::cloudx1::CPresetLoader
```

```
*preset_loader=reinterpret_cast<sound4::cloudx1::CPresetLoader*>(userdata);
        auto res=preset_loader->Write(filename,content);
        return res?0:-1;
    }
    static int cloudx1_custom_exists(const fs_char *filename, void* userdata) {
        sound4::cloudx1::CPresetLoader
*preset_loader=reinterpret_cast<sound4::cloudx1::CPresetLoader*>(userdata);
        auto res=preset_loader->Exists(filename);
        return res?0:-1;
    }
    static fs_char** cloudx1_custom_getall(void* userdata) {
        sound4::cloudx1::CPresetLoader
*preset_loader=reinterpret_cast<sound4::cloudx1::CPresetLoader*>(userdata);
        auto res=preset_loader->GetAll();
        fs_char**all=(fs_char**)malloc((res.size()+1)*sizeof(const fs_char*));
        for (size_t n=0;n<res.size();n++) {
            all[n]=fs_strdup(res[n].c_str());
        }
        all[res.size()]=nullptr;
        return all;
    }
    static void cloudx1_custom_getall_free(fs_char** all, void* userdata) {
        if (!all) return;
        for (fs_char** one=all;*one;one++) {
            free(*one);
        }
        free(all);
    }
    static int cloudx1_custom_remove(const fs_char *filename, void* userdata) {
        sound4::cloudx1::CPresetLoader
*preset_loader=reinterpret_cast<sound4::cloudx1::CPresetLoader*>(userdata);
        auto res=preset_loader->Remove(filename);
        return res?0:-1;
    }
    static int cloudx1_custom_rename(const fs_char *from, const fs_char *to, void* userdata) {
        sound4::cloudx1::CPresetLoader
*preset_loader=reinterpret_cast<sound4::cloudx1::CPresetLoader*>(userdata);
        auto res=preset_loader->Rename(from,to);
        return res?0:-1;
    }

};
```

11.13 sound4.x1.cloud_dyn.hpp File Reference

C++ wrapper for dynamic loading library.

```
#include <string>
#include <exception>
#include <thread>
#include <functional>
#include <memory>
#include <array>
#include <assert.h>
#include <stdexcept>
#include <filesystem>
#include <string.h>
#include <libloaderapi.h>
#include "sound4.x1.cloud.h"
#include <stringapiset.h>
#include <wchar.h>
```

Classes

- class sound4::cloudx1::dyn::helper::DynFuncHolder< T >

  Helper to wrap a function pointer.
- class sound4::cloudx1::dyn::helper::CDynLoader

Helper to load dynamic library.

- class sound4::cloudx1::dyn::CDynLib

  Dynamic library interface.
- struct sound4::cloudx1::dyn::helper::SampleFormat< T >

  Helper for Sample format types.
- struct sound4::cloudx1::dyn::helper::SampleFormat< int16_t >
- struct sound4::cloudx1::dyn::helper::SampleFormat< int32_t >
- struct sound4::cloudx1::dyn::helper::SampleFormat< float >
- class sound4::cloudx1::dyn::CPresetLoader
- class sound4::cloudx1::dyn::CInstance
- class sound4::cloudx1::dyn::CInstance::CClient

Namespaces

- namespace sound4
- namespace sound4::cloudx1
- namespace dyn
- namespace sound4::cloudx1::dyn
- namespace sound4::cloudx1::dyn::helper

Macros

- #define UNIXLIKE 0
- #define fs_strdup wcsdup

  helper for OS dependant file name copy

Typedefs

- using sound4::cloudx1::dyn::helper::DynLib_t = HMODULE
- using sound4::cloudx1::dyn::helper::DynFunc_t = FARPROC
- using sound4::cloudx1::dyn::SampleFormat = cloudx1_SampleFormat
- using sound4::cloudx1::dyn::LogSeverity = cloudx1_LogSeverity
- using sound4::cloudx1::dyn::log_cb_t = std::function< void(LogSeverity, const std::string &)>
- using sound4::cloudx1::dyn::PresetChange_Kind = cloudx1_PresetChange_Kind

Variables

- const size_t sound4::cloudx1::dyn::ChunkFrames = 64
- const size_t sound4::cloudx1::dyn::InputChannels = 2 ∗ 1
- const size_t sound4::cloudx1::dyn::OutputChannels = 2 ∗ 1
- const size_t sound4::cloudx1::dyn::InputSampleSize =ChunkFrames∗InputChannels
- const size_t sound4::cloudx1::dyn::OutputSampleSize =ChunkFrames∗OutputChannels
- const size_t sound4::cloudx1::dyn::SampleRate = 48000

11.13.1 Detailed Description

You need to load the dynamic library, and if it succeed you can use it.

Definition in file sound4.x1.cloud_dyn.hpp.

11.13.2 Macro Definition Documentation

11.13.2.1 fs_strdup

```
#define fs_strdup wcsdup
```

Definition at line 42 of file sound4.x1.cloud_dyn.hpp.

11.13.2.2 UNIXLIKE

```
#define UNIXLIKE 0
```

Definition at line 23 of file sound4.x1.cloud_dyn.hpp.

11.14 sound4.x1.cloud_dyn.hpp

Go to the documentation of this file.

```
00001
00007 #pragma once
00008
00009 #include <string>
00010 #include <exception>
00011 #include <thread>
00012 #include <functional>
00013 #include <memory>
00014 #include <array>
00015 #include <assert.h>
00016 #include <stdexcept>
00017 #include <filesystem>
00018 #include <string.h>
00019
00020 #if defined(__unix__) || defined(__APPLE__)
00021     #define UNIXLIKE 1
00022 #else
00023     #define UNIXLIKE 0
00024 #endif
00025
00026 #if UNIXLIKE
00027     #include <dlfcn.h>
00028 #elif defined(_WIN32)
00029     #include <libloaderapi.h>
00030 #else
00031     #error "Unsupported OS"
00032 #endif
00033
00034 // Needed to have function declarations
00035 #include "sound4.x1.cloud.h"
00036
00037
00038 #ifdef _WIN32
00039     #include <stringapiset.h>
00040     #include <wchar.h>
00042     #define fs_strdup wcsdup
00043 #else // !_WIN32
00045     #define fs_strdup strdup
00046 #endif // !_WIN32
00047
00048 // bridge C callbacks to CPresetLoader
00049 extern "C" {
00050     static char *cloudx1_custom_reader(const fs_char *filename, void* userdata);
00051     static void cloudx1_custom_reader_free(char *content, void* userdata);
00052     static int cloudx1_custom_writer(const fs_char *filename, const char *content, void* userdata);
00053     static int cloudx1_custom_exists(const fs_char *filename, void* userdata);
00054     static fs_char** cloudx1_custom_getall(void* userdata);
00055     static void cloudx1_custom_getall_free(fs_char** all, void* userdata);
00056     static int cloudx1_custom_remove(const fs_char *filename, void* userdata);
00057     static int cloudx1_custom_rename(const fs_char *from, const fs_char *to, void* userdata);
00058 };
00059
00063 namespace sound4 {
00067 namespace cloudx1 {
```

```
namespace dyn {

    namespace helper {
        // Storage definition, depending on OS
        #if UNIXLIKE
            using DynLib_t = void *;
            using DynFunc_t = void *;
        #else
            using DynLib_t = HMODULE;
            using DynFunc_t = FARPROC;
        #endif

            template <typename T>
        class DynFuncHolder {
        private:
            DynFunc_t m_ptr = NULL;
        public:
            DynFuncHolder() = default;
            DynFuncHolder(DynFunc_t a_ptr) : m_ptr(a_ptr) {}
            operator bool() const { return (m_ptr!=NULL); }
            bool IsOk() const { return m_ptr!=NULL; }
            operator T* () const { return reinterpret_cast<T*>(m_ptr); }
        };

        class CDynLoader {
            private:
                DynLib_t m_lib {};
            public:
                CDynLoader() = default;
                CDynLoader(CDynLoader&&) = default;
                // No copy allowed
                CDynLoader(const CDynLoader&) = delete;
                CDynLoader& operator=(CDynLoader const&) = delete;
                operator bool() const {
                    return (m_lib!=NULL);
                }
                bool IsOk() const {
                    return (m_lib!=NULL);
                }
                #if UNIXLIKE
                    void Close() {
                        if (IsOk()) {
                            #ifndef __SANITIZE_ADDRESS__ // avoid unloading to keep call stack
                            dlclose(m_lib);
                            #endif // __SANITIZE_ADDRESS__
                            m_lib=NULL;
                        }
                    }
                    bool Load(const std::filesystem::path& dynlib)
                    {
                        Close();
                        m_lib=dlopen(dynlib.c_str(), RTLD_NOW|RTLD_LOCAL);
                        return IsOk();
                    }
                        template <typename T>
                    DynFuncHolder<T> GetSymbol(const std::string& name) {
                        auto ptr=dlsym(m_lib, name.c_str());
                        if (!ptr) {
                            throw std::runtime_error("Missing function in library");
                        }
                        return DynFuncHolder<T>(ptr);
                    }
                        template <typename T>
                    DynFuncHolder<T> GetSymbol_safe(const std::string& name) {
                        auto ptr=dlsym(m_lib, name.c_str());
                        return DynFuncHolder<T>(ptr);
                    }
                    static std::filesystem::path GetThisLibraryPath(void) {
                        static Dl_info info;
                        if (! dladdr((void *) GetThisLibraryPath, & info)) return {};
                        auto rp=realpath(info.dli_fname, NULL);
                        std::filesystem::path p(rp);
                        free(rp);
                        return p;
                    }
                #else
                    bool Load(const std::filesystem::path& dynlib, uint32_t loadflags =
LOAD_LIBRARY_SEARCH_DLL_LOAD_DIR|LOAD_LIBRARY_SEARCH_APPLICATION_DIR|LOAD_LIBRARY_SEARCH_USER_DIRS|LOAD_LIBRARY_SEARCH_S
                    {
                        Close();
                        m_lib=LoadLibraryExW(dynlib.c_str(), NULL, loadflags);
                        return IsOk();
                    }
                    void Close() {
                        if (IsOk()) {
                            // NOTE: On Windows, FreeLibrary may create a lot of troubles, should use
FreeLibraryAndExitThread but...
```

```
                            // So define SOUND4_CALL_FREELIBRARY before including this file if you really want to unload the library dynamically
                            #if defined(SOUND4_CALL_FREELIBRARYANDEXITTHREAD)
                                FreeLibraryAndExitThread(m_lib, 0);
                            #elif defined(SOUND4_CALL_FREELIBRARY)
                                FreeLibrary(m_lib);
                            #endif // SOUND4_CALL_FREELIBRARY
                            m_lib=NULL;
                        }
                    }
                        template <typename T>
                    DynFuncHolder<T> GetSymbol(const std::string& name) {
                        auto ptr=GetProcAddress(m_lib, name.c_str());
                        if (!ptr) {
                            throw std::runtime_error("Missing function in library");
                        }
                        return DynFuncHolder<T>(ptr);
                    }
                        template <typename T>
                    DynFuncHolder<T> GetSymbol_safe(const std::string& name) {
                        auto ptr=GetProcAddress(m_lib, name.c_str());
                        return DynFuncHolder<T>(ptr);
                    }
                    static std::filesystem::path GetThisLibraryPath(void) {
                        static wchar_t path[MAX_PATH]={};
                        HMODULE hm = NULL;
                        if (GetModuleHandleExW(GET_MODULE_HANDLE_EX_FLAG_FROM_ADDRESS |
                                GET_MODULE_HANDLE_EX_FLAG_UNCHANGED_REFCOUNT,
                                (LPCWSTR) &GetThisLibraryPath, &hm))
                        {
                            if (GetModuleFileNameW(hm, path, MAX_PATH) > 0) {
                                return std::filesystem::path(path);
                            }
                        }
                        return {};
                    }
                #endif
                virtual ~CDynLoader() {
                    Close();
                }
        }; // class CDynLoader
    }; // namespace helper

    class CDynLib {
    private:
        helper::CDynLoader m_lib;
        bool m_bOK = false;
    public:
        CDynLib() = default;

        // All those wrapped functions have the same signature as there C cloudx1_XXX
        helper::DynFuncHolder< decltype(cloudx1_GetVersion              ) > GetVersion              ;
        helper::DynFuncHolder< decltype(cloudx1_GetChunkSizeInFrames    ) > GetChunkSizeInFrames    ;
        helper::DynFuncHolder< decltype(cloudx1_GetChannelCount         ) > GetChannelCount         ;
        helper::DynFuncHolder< decltype(cloudx1_GetAudioInputCount      ) > GetAudioInputCount      ;
        helper::DynFuncHolder< decltype(cloudx1_GetAudioOutputCount     ) > GetAudioOutputCount     ;
        helper::DynFuncHolder< decltype(cloudx1_GetSampleRate           ) > GetSampleRate           ;
        helper::DynFuncHolder< decltype(cloudx1_SetLoggerCallback       ) > SetLoggerCallback       ;
        helper::DynFuncHolder< decltype(cloudx1_SetLogSeverity          ) > SetLogSeverity          ;
        helper::DynFuncHolder< decltype(cloudx1_NewParameters           ) > NewParameters           ;
        helper::DynFuncHolder< decltype(cloudx1_FreeParameters          ) > FreeParameters          ;
        helper::DynFuncHolder< decltype(cloudx1_SetParameter            ) > SetParameter            ;
        helper::DynFuncHolder< decltype(cloudx1_GetParameter            ) > GetParameter            ;
        helper::DynFuncHolder< decltype(cloudx1_FreeParameterValue      ) > FreeParameterValue      ;
        helper::DynFuncHolder< decltype(cloudx1_InitProcess             ) > InitProcess             ;
        helper::DynFuncHolder< decltype(cloudx1_InitProcess2            ) > InitProcess2            ;
        helper::DynFuncHolder< decltype(cloudx1_TerminateProcess        ) > TerminateProcess        ;
        helper::DynFuncHolder< decltype(cloudx1_ExitProcess             ) > ExitProcess             ;
        helper::DynFuncHolder< decltype(cloudx1_StartUpdateThread       ) > StartUpdateThread       ;
        helper::DynFuncHolder< decltype(cloudx1_StopUpdateThread        ) > StopUpdateThread        ;
        helper::DynFuncHolder< decltype(cloudx1_WaitUpdateThreadReady   ) > WaitUpdateThreadReady   ;
        helper::DynFuncHolder< decltype(cloudx1_ProcessAudio            ) > ProcessAudio            ;
        helper::DynFuncHolder< decltype(cloudx1_ProcessAudio_Planar     ) > ProcessAudio_Planar     ;
        helper::DynFuncHolder< decltype(cloudx1_GetBufferIn             ) > GetBufferIn             ;
        helper::DynFuncHolder< decltype(cloudx1_GetBufferOut            ) > GetBufferOut            ;
        helper::DynFuncHolder< decltype(cloudx1_GetEstimatedDelay       ) > GetEstimatedDelay       ;
        helper::DynFuncHolder< decltype(cloudx1_GetFormatName           ) > GetFormatName           ;
        helper::DynFuncHolder< decltype(cloudx1_GetFormatFromName       ) > GetFormatFromName       ;
        helper::DynFuncHolder< decltype(cloudx1_GetBytesFromFormat      ) > GetBytesFromFormat      ;
        helper::DynFuncHolder< decltype(cloudx1_GetMaxPacketFrame       ) > GetMaxPacketFrame       ;
        helper::DynFuncHolder< decltype(cloudx1_AddAudio                ) > AddAudio                ;
        helper::DynFuncHolder< decltype(cloudx1_AddPadAudio             ) > AddPadAudio             ;
        helper::DynFuncHolder< decltype(cloudx1_GetOutputCount          ) > GetOutputCount          ;
        helper::DynFuncHolder< decltype(cloudx1_GetAudio                ) > GetAudio                ;
        helper::DynFuncHolder< decltype(cloudx1_AudioConvertFrom        ) > AudioConvertFrom        ;
        helper::DynFuncHolder< decltype(cloudx1_AudioConvertTo          ) > AudioConvertTo          ;
        helper::DynFuncHolder< decltype(cloudx1_StereoToMono            ) > StereoToMono            ;
```

```
        helper::DynFuncHolder< decltype(cloudx1_MonoToStereo           ) > MonoToStereo           ;
        helper::DynFuncHolder< decltype(cloudx1_AudioMonoFromLiveStereo) > AudioMonoFromLiveStereo;
        helper::DynFuncHolder< decltype(cloudx1_AudioMonoToLiveStereo  ) > AudioMonoToLiveStereo  ;
        helper::DynFuncHolder< decltype(cloudx1_NewClient              ) > NewClient              ;
        helper::DynFuncHolder< decltype(cloudx1_DeleteClient           ) > DeleteClient           ;
        helper::DynFuncHolder< decltype(cloudx1_ProcessJson            ) > ProcessJson            ;
        helper::DynFuncHolder< decltype(cloudx1_FreeJsonAnswer         ) > FreeJsonAnswer         ;
        helper::DynFuncHolder< decltype(cloudx1_SaveState              ) > SaveState              ;
#if CLOUDX1_HAS_WEBSERVER
        helper::DynFuncHolder< decltype(cloudx1_Webserver_tcp          ) > Webserver_tcp          ;
        helper::DynFuncHolder< decltype(cloudx1_Webserver_tcp2         ) > Webserver_tcp2         ;
        helper::DynFuncHolder< decltype(cloudx1_Webserver              ) > Webserver              ;
        helper::DynFuncHolder< decltype(cloudx1_Webserver_Stop         ) > Webserver_Stop         ;
        helper::DynFuncHolder< decltype(cloudx1_Webserver_Status       ) > Webserver_Status       ;
#endif // CLOUDX1_HAS_WEBSERVER

        // added 2023-03-22
        helper::DynFuncHolder< decltype(cloudx1_StereoToMono_Planar    ) > StereoToMono_Planar    ;
        helper::DynFuncHolder< decltype(cloudx1_MonoToStereo_Planar    ) > MonoToStereo_Planar    ;

        // added 2023-05-22
        helper::DynFuncHolder< decltype(cloudx1_SetMetadata            ) > SetMetadata            ;
        helper::DynFuncHolder< decltype(cloudx1_GetMetadataInfos       ) > GetMetadataInfos       ;
        helper::DynFuncHolder< decltype(cloudx1_FreeMetadataInfos      ) > FreeMetadataInfos      ;

        // added 2023-06-20
        helper::DynFuncHolder< decltype(cloudx1_SetPresetManager                ) > SetPresetManager
;
        helper::DynFuncHolder< decltype(cloudx1_PresetManager_InformChange      ) >
PresetManager_InformChange      ;

        // added 2023-09-21
        helper::DynFuncHolder< decltype(cloudx1_GetPossibleChunkSizeInFrames    ) >
GetPossibleChunkSizeInFrames   ;
        helper::DynFuncHolder< decltype(cloudx1_GetProcessChunkFrames           ) >
GetProcessChunkFrames   ;
        helper::DynFuncHolder< decltype(cloudx1_InitProcess3                    ) > InitProcess3
;

#if CLOUDX1_HAS_CLOUDBUS
        // added 2023-06-26
        helper::DynFuncHolder< decltype(cloudx1_NewBus                 ) > NewBus      ;
        helper::DynFuncHolder< decltype(cloudx1_FreeBus                ) > FreeBus      ;
        helper::DynFuncHolder< decltype(cloudx1_SetInstanceBus         ) > SetInstanceBus      ;
#endif // CLOUDX1_HAS_CLOUDBUS

        // added 2024-02-19
        helper::DynFuncHolder< decltype(cloudx1_SetMetadataMulti       ) > SetMetadataMulti         ;

#if CLOUDX1_HAS_WEBSERVER
        // added 2024-05-23
        helper::DynFuncHolder< decltype(cloudx1_Webserver_SetAppHealth    ) > Webserver_SetAppHealth
;
        helper::DynFuncHolder< decltype(cloudx1_Webserver_GetAppHealth    ) > Webserver_GetAppHealth
;
        helper::DynFuncHolder< decltype(cloudx1_Webserver_FreeString      ) > Webserver_FreeString
;
#endif // CLOUDX1_HAS_WEBSERVER

        bool Load(const std::filesystem::path& path = {}) {
            std::string filename;
            #if defined(__APPLE__)
                filename="libsound4.x1.cloud.dylib";
            #elif defined(__unix__)
                filename="libsound4.x1.cloud.so";
            #else
                filename="sound4.x1.cloud.dll";
            #endif
            m_lib.Close();
            // If a path is given, use it directly and do not try other path
            if (!path.empty() && !m_lib.Load(path / filename)) {
                return false;
            } else if (!m_lib.IsOk()) {
                auto thisdir=helper::CDynLoader::GetThisLibraryPath().parent_path();
                #ifndef _WIN32
                // Linux: if in a bin directory, try ../lib first
                if (!m_lib.IsOk() && thisdir.filename()=="bin") {
                    auto libdir = thisdir.parent_path() / "lib";
                    m_lib.Load(libdir / filename);
                }
                #endif // !_WIN32
                if (!m_lib.IsOk()) {
                    // Search in the same directory this code is in
                    m_lib.Load(thisdir / filename);
                }
                if (!m_lib.IsOk()) {
                    // Try current path
```

```
                    std::error_code ec;
                    auto p = std::filesystem::current_path(ec);
                    if (!ec) {
                        m_lib.Load(p / filename);
                    }
                }
                if (!m_lib.IsOk()) {
                    return false;
                }
            }
            // Load all C functions
            try {
                GetVersion              = m_lib.GetSymbol< decltype(cloudx1_GetVersion              )>("cloudx1_GetVersion"             );
                GetChunkSizeInFrames    = m_lib.GetSymbol< decltype(cloudx1_GetChunkSizeInFrames    )>("cloudx1_GetChunkSizeInFrames"   );
                GetChannelCount         = m_lib.GetSymbol< decltype(cloudx1_GetChannelCount         )>("cloudx1_GetChannelCount"        );
                GetAudioInputCount      = m_lib.GetSymbol< decltype(cloudx1_GetAudioInputCount      )>("cloudx1_GetAudioInputCount"     );
                GetAudioOutputCount     = m_lib.GetSymbol< decltype(cloudx1_GetAudioOutputCount     )>("cloudx1_GetAudioOutputCount"    );
                GetSampleRate           = m_lib.GetSymbol< decltype(cloudx1_GetSampleRate           )>("cloudx1_GetSampleRate"          );
                SetLoggerCallback       = m_lib.GetSymbol< decltype(cloudx1_SetLoggerCallback       )>("cloudx1_SetLoggerCallback"      );
                SetLogSeverity          = m_lib.GetSymbol< decltype(cloudx1_SetLogSeverity          )>("cloudx1_SetLogSeverity"         );
                NewParameters           = m_lib.GetSymbol< decltype(cloudx1_NewParameters           )>("cloudx1_NewParameters"          );
                FreeParameters          = m_lib.GetSymbol< decltype(cloudx1_FreeParameters          )>("cloudx1_FreeParameters"         );
                SetParameter            = m_lib.GetSymbol< decltype(cloudx1_SetParameter            )>("cloudx1_SetParameter"           );
                GetParameter            = m_lib.GetSymbol< decltype(cloudx1_GetParameter            )>("cloudx1_GetParameter"           );
                FreeParameterValue      = m_lib.GetSymbol< decltype(cloudx1_FreeParameterValue      )>("cloudx1_FreeParameterValue"     );
                InitProcess             = m_lib.GetSymbol< decltype(cloudx1_InitProcess             )>("cloudx1_InitProcess"            );
                InitProcess2            = m_lib.GetSymbol< decltype(cloudx1_InitProcess2            )>("cloudx1_InitProcess2"           );
                TerminateProcess        = m_lib.GetSymbol< decltype(cloudx1_TerminateProcess        )>("cloudx1_TerminateProcess"       );
                ExitProcess             = m_lib.GetSymbol< decltype(cloudx1_ExitProcess             )>("cloudx1_ExitProcess"            );
                StartUpdateThread       = m_lib.GetSymbol< decltype(cloudx1_StartUpdateThread       )>("cloudx1_StartUpdateThread"      );
                StopUpdateThread        = m_lib.GetSymbol< decltype(cloudx1_StopUpdateThread        )>("cloudx1_StopUpdateThread"       );
                WaitUpdateThreadReady   = m_lib.GetSymbol< decltype(cloudx1_WaitUpdateThreadReady   )>("cloudx1_WaitUpdateThreadReady"  );
                ProcessAudio            = m_lib.GetSymbol< decltype(cloudx1_ProcessAudio            )>("cloudx1_ProcessAudio"           );
                ProcessAudio_Planar     = m_lib.GetSymbol< decltype(cloudx1_ProcessAudio_Planar     )>("cloudx1_ProcessAudio_Planar"    );
                GetBufferIn             = m_lib.GetSymbol< decltype(cloudx1_GetBufferIn             )>("cloudx1_GetBufferIn"            );
                GetBufferOut            = m_lib.GetSymbol< decltype(cloudx1_GetBufferOut            )>("cloudx1_GetBufferOut"           );
                GetEstimatedDelay       = m_lib.GetSymbol< decltype(cloudx1_GetEstimatedDelay       )>("cloudx1_GetEstimatedDelay"      );
                GetFormatName           = m_lib.GetSymbol< decltype(cloudx1_GetFormatName           )>("cloudx1_GetFormatName"          );
                GetFormatFromName       = m_lib.GetSymbol< decltype(cloudx1_GetFormatFromName       )>("cloudx1_GetFormatFromName"      );
                GetBytesFromFormat      = m_lib.GetSymbol< decltype(cloudx1_GetBytesFromFormat      )>("cloudx1_GetBytesFromFormat"     );
                GetMaxPacketFrame       = m_lib.GetSymbol< decltype(cloudx1_GetMaxPacketFrame       )>("cloudx1_GetMaxPacketFrame"      );
                AddAudio                = m_lib.GetSymbol< decltype(cloudx1_AddAudio                )>("cloudx1_AddAudio"               );
                AddPadAudio             = m_lib.GetSymbol< decltype(cloudx1_AddPadAudio             )>("cloudx1_AddPadAudio"            );
                GetOutputCount          = m_lib.GetSymbol< decltype(cloudx1_GetOutputCount          )>("cloudx1_GetOutputCount"         );
                GetAudio                = m_lib.GetSymbol< decltype(cloudx1_GetAudio                )>("cloudx1_GetAudio"               );
                AudioConvertFrom        = m_lib.GetSymbol< decltype(cloudx1_AudioConvertFrom        )>("cloudx1_AudioConvertFrom"       );
                AudioConvertTo          = m_lib.GetSymbol< decltype(cloudx1_AudioConvertTo          )>("cloudx1_AudioConvertTo"         );
                StereoToMono            = m_lib.GetSymbol< decltype(cloudx1_StereoToMono            )>("cloudx1_StereoToMono"           );
                MonoToStereo            = m_lib.GetSymbol< decltype(cloudx1_MonoToStereo            )>("cloudx1_MonoToStereo"           );
                AudioMonoFromLiveStereo = m_lib.GetSymbol< decltype(cloudx1_AudioMonoFromLiveStereo)
```

```
>("cloudx1_AudioMonoFromLiveStereo");
                AudioMonoToLiveStereo   = m_lib.GetSymbol< decltype(cloudx1_AudioMonoToLiveStereo  ) >("cloudx1_AudioMonoToLiveStereo"  );
                NewClient               = m_lib.GetSymbol< decltype(cloudx1_NewClient              ) >("cloudx1_NewClient"             );
                DeleteClient            = m_lib.GetSymbol< decltype(cloudx1_DeleteClient           ) >("cloudx1_DeleteClient"          );
                ProcessJson             = m_lib.GetSymbol< decltype(cloudx1_ProcessJson            ) >("cloudx1_ProcessJson"           );
                FreeJsonAnswer          = m_lib.GetSymbol< decltype(cloudx1_FreeJsonAnswer         ) >("cloudx1_FreeJsonAnswer"        );
                SaveState               = m_lib.GetSymbol< decltype(cloudx1_SaveState              ) >("cloudx1_SaveState"             );
#if CLOUDX1_HAS_WEBSERVER
                Webserver_tcp           = m_lib.GetSymbol< decltype(cloudx1_Webserver_tcp          ) >("cloudx1_Webserver_tcp"         );
                Webserver_tcp2          = m_lib.GetSymbol< decltype(cloudx1_Webserver_tcp2         ) >("cloudx1_Webserver_tcp2"        );
                Webserver               = m_lib.GetSymbol< decltype(cloudx1_Webserver              ) >("cloudx1_Webserver"             );
                Webserver_Stop          = m_lib.GetSymbol< decltype(cloudx1_Webserver_Stop         ) >("cloudx1_Webserver_Stop"        );
                Webserver_Status        = m_lib.GetSymbol< decltype(cloudx1_Webserver_Status       ) >("cloudx1_Webserver_Status"      );
#endif // CLOUDX1_HAS_WEBSERVER

                // added 2023-03-22
                StereoToMono_Planar     = m_lib.GetSymbol< decltype(cloudx1_StereoToMono_Planar    ) >("cloudx1_StereoToMono_Planar"   );
                MonoToStereo_Planar     = m_lib.GetSymbol< decltype(cloudx1_MonoToStereo_Planar    ) >("cloudx1_MonoToStereo_Planar"   );

            } catch (std::runtime_error& ) {
                return false;
            }
            // C functions allowed to be missing
            try {
                // added 2023-05-22
                SetMetadata             = m_lib.GetSymbol< decltype(cloudx1_SetMetadata            ) >("cloudx1_SetMetadata"           );
                GetMetadataInfos        = m_lib.GetSymbol< decltype(cloudx1_GetMetadataInfos       ) >("cloudx1_GetMetadataInfos"      );
                FreeMetadataInfos       = m_lib.GetSymbol< decltype(cloudx1_FreeMetadataInfos      ) >("cloudx1_FreeMetadataInfos"     );
                // added 2023-06-20
                SetPresetManager            = m_lib.GetSymbol< decltype(cloudx1_SetPresetManager ) >("cloudx1_SetPresetManager"             );
                PresetManager_InformChange  = m_lib.GetSymbol< decltype(cloudx1_PresetManager_InformChange     ) >("cloudx1_PresetManager_InformChange"    );

                // added 2023-09-21
                GetPossibleChunkSizeInFrames = m_lib.GetSymbol< decltype(cloudx1_GetPossibleChunkSizeInFrames  ) >("cloudx1_GetPossibleChunkSizeInFrames"  );
                GetProcessChunkFrames        = m_lib.GetSymbol< decltype(cloudx1_GetProcessChunkFrames ) >("cloudx1_GetProcessChunkFrames"         );
                InitProcess3                 = m_lib.GetSymbol< decltype(cloudx1_InitProcess3 ) >("cloudx1_InitProcess3"                 );

#if CLOUDX1_HAS_CLOUDBUS
                // added 2023-06-26
                NewBus                  = m_lib.GetSymbol< decltype(cloudx1_NewBus                 ) >("cloudx1_NewBus"                );
                FreeBus                 = m_lib.GetSymbol< decltype(cloudx1_FreeBus                ) >("cloudx1_FreeBus"               );
                SetInstanceBus          = m_lib.GetSymbol< decltype(cloudx1_SetInstanceBus         ) >("cloudx1_SetInstanceBus"        );
#endif // CLOUDX1_HAS_CLOUDBUS

                // added 2024-02-19
                SetMetadataMulti        = m_lib.GetSymbol< decltype(cloudx1_SetMetadataMulti       ) >("cloudx1_SetMetadataMulti"      );

#if CLOUDX1_HAS_WEBSERVER
                // added 2024-05-23
                Webserver_SetAppHealth      = m_lib.GetSymbol< decltype(cloudx1_Webserver_SetAppHealth ) >("Webserver_SetAppHealth"     );
                Webserver_GetAppHealth      = m_lib.GetSymbol< decltype(cloudx1_Webserver_GetAppHealth ) >("Webserver_GetAppHealth"     );
                Webserver_FreeString        = m_lib.GetSymbol< decltype(cloudx1_Webserver_FreeString ) >("Webserver_FreeString"       );
#endif // CLOUDX1_HAS_WEBSERVER

            }  catch (std::runtime_error& ) {
                // Ignored, handler will take care
            }

            m_bOK=true;
```

```
            return true;
        }
        bool IsOk() const {
            return m_bOK;
        }

    };



    static constexpr const char *process_name = "SOUND4 x1.CLOUD";
    static constexpr const char *process_shortname = "x1";
    using SampleFormat = cloudx1_SampleFormat;
    const size_t ChunkFrames=CLOUDX1_AUDIOFRAME_COUNT;
    const size_t InputChannels=CLOUDX1_CHANNEL_COUNT*CLOUDX1_AUDIO_INPUT_COUNT;
    const size_t OutputChannels=CLOUDX1_CHANNEL_COUNT*CLOUDX1_AUDIO_OUTPUT_COUNT;
    const size_t InputSampleSize=ChunkFrames*InputChannels;
    const size_t OutputSampleSize=ChunkFrames*OutputChannels;
    const size_t SampleRate=CLOUDX1_SAMPLE_RATE;

    namespace helper {
        #ifdef _WIN32
        static inline std::string WStringToUTF8(const std::wstring& wstr) {
            if (wstr.empty()) return {};
            int size = WideCharToMultiByte(CP_UTF8, 0, &wstr[0], (int)wstr.size(), NULL, 0, NULL, NULL);
            std::string str(size, 0);
            WideCharToMultiByte(CP_UTF8, 0, &wstr[0], (int)wstr.size(), &str[0], size, NULL, NULL);
            return str;
        }
        static inline std::wstring UTF8ToWString(const std::string& str) {
            if (str.empty()) return std::wstring();
            int size = MultiByteToWideChar(CP_UTF8, 0, &str[0], (int)str.size(), NULL, 0);
            std::wstring wstr(size, 0);
            MultiByteToWideChar(CP_UTF8, 0, &str[0], (int)str.size(), &wstr[0], size);
            return wstr;
        }
        #endif // _WIN32

            template<typename T>
        struct SampleFormat {
        };
            template<>
        struct SampleFormat<int16_t> {
            const cloudx1_SampleFormat format = S16_NATIVE;
        };
            template<>
        struct SampleFormat<int32_t> {
            const cloudx1_SampleFormat format = S32_NATIVE;
        };
            template<>
        struct SampleFormat<float> {
            const cloudx1_SampleFormat format = F32_NATIVE;
        };


        static inline void AudioConvertFrom(CDynLib& dynlib, const uint8_t *payload, float *output, size_t nSpl, cloudx1_SampleFormat fmt) {
            dynlib.AudioConvertFrom(payload, output, nSpl, fmt);
        }
        static inline void AudioConvertTo(CDynLib& dynlib, const float *input, uint8_t *payload, size_t nSpl, cloudx1_SampleFormat fmt) {
            dynlib.AudioConvertTo(input, payload, nSpl, fmt);
        }
        static inline void StereoToMono(CDynLib& dynlib, const float *input, float *output, size_t nSpl) {
            dynlib.StereoToMono(input, output, nSpl);
        }
        static inline void MonoToStereo(CDynLib& dynlib, const float *input, float *output, size_t nSpl) {
            dynlib.MonoToStereo(input, output, nSpl);
        }
        static inline void StereoToMono_Planar(CDynLib& dynlib, const float *inputL, const float *inputR, float *output, size_t nSpl) {
            dynlib.StereoToMono_Planar(inputL, inputR, output, nSpl);
        }
        static inline void MonoToStereo_Planar(CDynLib& dynlib, const float *input, float *outputL, float *outputR, size_t nSpl) {
            dynlib.MonoToStereo_Planar(input, outputL, outputR, nSpl);
        }
        static inline void AudioMonoFromLiveStereo(CDynLib& dynlib, const uint8_t *payload, float *output) {
            dynlib.AudioMonoFromLiveStereo(payload, output);
        }
        static inline void AudioMonoToLiveStereo(CDynLib& dynlib, const float *input, uint8_t *payload) {
            dynlib.AudioMonoToLiveStereo(input, payload);
```

```
        }

    }; // namespace helper

    static inline std::string GetVersion(CDynLib& dynlib)
        {
            return std::string(dynlib.GetVersion());
        }

    static inline unsigned int GetChunkSizeInFrames(CDynLib& dynlib)
        {
            return dynlib.GetChunkSizeInFrames();
        }

    static inline std::vector<unsigned int> GetPossibleChunkSizeInFrames(CDynLib& dynlib)
        {
            std::vector<unsigned int> list;
            if (dynlib.GetPossibleChunkSizeInFrames) {
                for (unsigned int* src=dynlib.GetPossibleChunkSizeInFrames();*src;src++) {
                    list.push_back(*src);
                }
            } else {
                list.push_back(64);
            }
            return list;
        }

    static inline unsigned int GetChannelCount(CDynLib& dynlib)
        {
            return dynlib.GetChannelCount();
        }

    static inline unsigned int GetAudioInputCount(CDynLib& dynlib)
        {
            return dynlib.GetAudioInputCount();
        }

    static inline unsigned int GetAudioOutputCount(CDynLib& dynlib)
        {
            return dynlib.GetAudioOutputCount();
        }

    static inline unsigned int GetSampleRate(CDynLib& dynlib)
        {
            return dynlib.GetSampleRate();
        }

    static inline void SanityCheck(CDynLib& dynlib, bool a_bCheckFrames = true)
    {
        // Do some sanity checks
        if (dynlib.GetSampleRate()!=CLOUDX1_SAMPLE_RATE) {
            throw std::runtime_error("Bad library sampling rate");
        }
        if (a_bCheckFrames && dynlib.GetChunkSizeInFrames()!=ChunkFrames) {
            throw std::runtime_error("Bad library frame size");
        }
        if (dynlib.GetChannelCount()!=CLOUDX1_CHANNEL_COUNT) {
            throw std::runtime_error("Bad library channel count");
        }
        if (dynlib.GetAudioInputCount()!=CLOUDX1_AUDIO_INPUT_COUNT) {
            throw std::runtime_error("Bad library input count");
        }
        if (dynlib.GetAudioOutputCount()!=CLOUDX1_AUDIO_OUTPUT_COUNT) {
            throw std::runtime_error("Bad library output count");
        }
    }

    static inline std::string GetFormatName(CDynLib& dynlib, const SampleFormat fmt)
        {
            return std::string(dynlib.GetFormatName(fmt));
        }

    static inline SampleFormat GetFormatFromName(CDynLib& dynlib, const std::string& name)
        {
            return dynlib.GetFormatFromName(name.c_str());
        }

    static inline unsigned int GetBytesFromFormat(CDynLib& dynlib, const SampleFormat fmt)
        {
            return dynlib.GetBytesFromFormat(fmt);
        }

    using LogSeverity = cloudx1_LogSeverity;
    using log_cb_t = std::function<void(LogSeverity,const std::string&)>;

    static log_cb_t _log_cb;
    extern "C" {
```

```
        static inline void _log_cb_c(cloudx1_LogSeverity severity, const char *c_msg) {
            _log_cb(severity, std::string(c_msg));
        }
    }
    static inline void SetLogSeverity(CDynLib& dynlib, LogSeverity severity)
        {
            dynlib.SetLogSeverity(severity);
        }
    static inline void SetLoggerCallback(CDynLib& dynlib, log_cb_t cb)
        {
            _log_cb=cb;
            dynlib.SetLoggerCallback(&_log_cb_c);
        }

#if CLOUDX1_HAS_CLOUDBUS
    class CBus {
        public:
            CBus(CDynLib& dynlib)
                : m_dynlib(dynlib)
                {
                    if (m_dynlib.NewBus) {
                        m_bus=m_dynlib.NewBus();
                    }
                }
            ~CBus()
                {
                    if (m_bus && m_dynlib.FreeBus) {
                        m_dynlib.FreeBus(m_bus);
                    }
                    m_bus = nullptr;
                }
            cloudx1_CBus *Get() const { return m_bus; }
        private:
            CDynLib& m_dynlib;
            cloudx1_CBus *m_bus;
    };
#endif // CLOUDX1_HAS_CLOUDBUS

    class CPresetLoader {
    public:
        CPresetLoader() = default;
        virtual ~CPresetLoader() = default;

        virtual bool IsReadOnly() = 0;
        virtual bool Exists(const std::filesystem::path &name) = 0;
        virtual bool Remove(const std::filesystem::path &name) = 0;
        virtual bool Rename(const std::filesystem::path &from, const std::filesystem::path &to) = 0;
        virtual std::vector<std::filesystem::path> GetAll() = 0;
        virtual std::string Read(const std::filesystem::path &filename) = 0;
        virtual bool Write(const std::filesystem::path &filename, const std::string &content) =0;
    };
    using PresetChange_Kind = cloudx1_PresetChange_Kind;

    class CInstance {
    public:
        CInstance(CDynLib& dynlib)
        : m_dynlib(dynlib)
            {
                params = m_dynlib.NewParameters();
                if (!params) throw std::bad_alloc();
            }
        // non-copyable
        CInstance( const CInstance& ) = delete;
        CInstance& operator=( const CInstance& ) = delete;
        virtual ~CInstance()
            {
                Stop();
                if (params) m_dynlib.FreeParameters(params);
            }
       bool IsOk() const { return instance!=nullptr; }
        void SetParam(const std::string& name, const std::string& value)
            {
                assert(params);
                m_dynlib.SetParameter(params, name.c_str(), value.c_str());
            }
        std::string GetParam(const std::string& name)
            {
                assert(params);
                auto c_value=m_dynlib.GetParameter(params, name.c_str());
                std::string ret(c_value);
                m_dynlib.FreeParameterValue(c_value);
                return ret;
            }
#if CLOUDX1_HAS_CLOUDBUS
            void SetBus(const CBus& bus) {
                assert(params);
                if (m_dynlib.SetInstanceBus) {
```

```
                    m_dynlib.SetInstanceBus(params,bus.Get());
                }
            }
#endif // CLOUDX1_HAS_CLOUDBUS

        void SetPresetManager(CPresetLoader *preset_manager)
            {
                if (!preset_manager) return;
                if (!m_dynlib.SetPresetManager) return;
                assert(params);
                m_dynlib.SetPresetManager(params,
                    cloudx1_custom_reader,
                    cloudx1_custom_reader_free,
                    cloudx1_custom_writer,
                    cloudx1_custom_exists,
                    cloudx1_custom_getall,
                    cloudx1_custom_getall_free,
                    cloudx1_custom_remove,
                    cloudx1_custom_rename,
                    preset_manager->IsReadOnly(),
                    preset_manager
                );
            }

        bool Create(const std::string& LoginKey, const std::string& RadioName, const std::string& Access_Key_ID, const std::string& Access_Key_Secret, const std::filesystem::path& save_path, int json_port = 0, unsigned int frames_per_chunk=64)
            {
                assert(!instance);
                std::string l_save_path;
                if (!save_path.empty()) {
                    l_save_path = save_path.u8string();
                }
                if (m_dynlib.InitProcess3) {
                    instance = m_dynlib.InitProcess3(LoginKey.c_str(), RadioName.c_str(), Access_Key_ID.c_str(), Access_Key_Secret.c_str(), l_save_path.c_str(), params, frames_per_chunk);
                } else if (frames_per_chunk!=64) {
                    return false;
                } else {
                    instance = m_dynlib.InitProcess2(LoginKey.c_str(), RadioName.c_str(), Access_Key_ID.c_str(), Access_Key_Secret.c_str(), l_save_path.c_str(), params);
                }
                if (!instance) return false;
                if (!init_metadata.empty()) {
                    for (auto&& [key,value]: init_metadata) {
                        m_dynlib.SetMetadata(instance, key.c_str(), value.c_str());
                    }
                    init_metadata.clear();
                }
                update_thread = std::thread([this, json_port](){
                    OnUpdateThreadStart();
                    m_dynlib.StartUpdateThread(instance, json_port);
                    OnUpdateThreadStop();
                });
                int timeout=5000;
                #ifdef DEBUG
                    timeout=60*1000; // For debugger pauses
                #endif
                if (m_dynlib.WaitUpdateThreadReady(instance, timeout)<0) {
                    return false;
                }
                return true;
            }

        unsigned int GetChunkFrames() {
            if (instance && m_dynlib.GetProcessChunkFrames) {
                return m_dynlib.GetProcessChunkFrames(instance);
            }
            return 64;
        }

        void PresetManager_InformChange(const std::filesystem::path& relative_path, PresetChange_Kind change_kind)
            {
                if (m_dynlib.PresetManager_InformChange) {
                    m_dynlib.PresetManager_InformChange(instance, relative_path.c_str(), (cloudx1_PresetChange_Kind) change_kind);
                }
            }

        void SetMetadata(const std::string& key, const char* value)
            {
                if (m_dynlib.SetMetadata) {
                    if (instance) {
                        m_dynlib.SetMetadata(instance, key.c_str(), value);
                    } else {
                        init_metadata.push_back( {key, value} );
```

```
                    }
                }
            }


        void SetMetadataMulti(const std::unordered_map<std::string, const char*>& list)
            {
                if (instance) {
                    if (m_dynlib.SetMetadataMulti) {
                        typedef const char* pchar;
                        pchar* keyvalue=new pchar[2*list.size()+1];
                        size_t n=0;
                        for (auto&& [key,value]: list) {
                            keyvalue[2*n+0]=key.c_str();
                            keyvalue[2*n+1]=value;
                            n++;
                        }
                        keyvalue[2*n+0]=nullptr;

                        cloudx1_SetMetadataMulti(instance, keyvalue);

                        delete[] keyvalue;
                    } else {
                        for (auto&& [key,value]: list) {
                            SetMetadata(key, value);
                        }
                    }
                } else {
                    for (auto&& [key,value]: list) {
                        if (value) {
                            init_metadata.push_back( {key, value} );
                        }
                    }
                }
            }

        std::vector< std::tuple<std::string,std::string> > GetMetadataInfos()
            {
                std::vector< std::tuple<std::string,std::string> > values;
                if (m_dynlib.GetMetadataInfos) {
                    const char** c_values = m_dynlib.GetMetadataInfos(instance);
                    if (c_values) {
                        for (const char** c_value=c_values; *c_value; ) {
                            std::string key(*c_value);
                            c_value++;
                            if (*c_value) {
                                std::string descr(*c_value);
                                c_value++;
                                values.push_back( {key,descr} );
                            }
                        }
                        m_dynlib.FreeMetadataInfos(instance, c_values);
                    }
                }
                return values;
            }

        // Can be overloaded, called at start of UpdateThread in the thread
        virtual void OnUpdateThreadStart() {}
        // Can be overloaded to call at end of UpdateThread in the thread
        virtual void OnUpdateThreadStop() {}

#if CLOUDX1_HAS_WEBSERVER
        bool StartWebServer(int http_port, int https_port=0)
            {
                assert(instance);
                assert(webserver==SOUND4_INVALID_WEBSERVER_ID);
                webserver = m_dynlib.Webserver(http_port,https_port,instance);
                if (webserver==SOUND4_INVALID_WEBSERVER_ID) {
                    return false;
                }
                int web_status=m_dynlib.Webserver_Status(webserver);
                if (http_port && (web_status & SOUND4_WEBSERVER_HTTP_OK) == 0) {
                    return false;
                }
                if (https_port && (web_status & SOUND4_WEBSERVER_HTTPS_OK) == 0) {
                    return false;
                }
                return true;
            }
        void StopWebServer()
            {
                if (webserver != SOUND4_INVALID_WEBSERVER_ID) {
                    m_dynlib.Webserver_Stop(webserver, 1000);
                    webserver = SOUND4_INVALID_WEBSERVER_ID;
                }
            }
```

```
01114
01118         void SetWebServerAppHealth(int httpcode, const std::string& contenttype, const std::string&
      content)
01119             {
01120                 assert(instance);
01121                 if (!m_dynlib.Webserver_SetAppHealth) return;
01122                 m_dynlib.Webserver_SetAppHealth(instance, httpcode, contenttype.c_str(),
      content.c_str());
01123             }
01127         void GetWebServerAppHealth(int &httpcode, std::string& contenttype, std::string& content)
01128             {
01129                 assert(instance);
01130                 if (!m_dynlib.Webserver_GetAppHealth) return;
01131                 char* c_contenttype=nullptr;
01132                 char* c_content=nullptr;
01133                 m_dynlib.Webserver_GetAppHealth(instance, &httpcode, &c_contenttype, &c_content);
01134                 contenttype=c_contenttype;
01135                 content=c_content;
01136                 m_dynlib.Webserver_FreeString(c_contenttype);
01137                 m_dynlib.Webserver_FreeString(c_content);
01138             }
01139 #endif // CLOUDX1_HAS_WEBSERVER
01140
01147         int Terminate()
01148             {
01149                 if (!instance) return 0;
01150                 return m_dynlib.TerminateProcess(instance);
01151             }
01152
01158         void Stop()
01159             {
01160                 if (!instance) return;
01161 #if CLOUDX1_HAS_WEBSERVER
01162                 StopWebServer();
01163 #endif // CLOUDX1_HAS_WEBSERVER
01164                 if (update_thread.joinable()) {
01165                     m_dynlib.StopUpdateThread(instance); // this will exit the update thread
01166                     update_thread.join();
01167                 }
01168                 m_dynlib.ExitProcess(instance);
01169                 instance=nullptr;
01170             }
01171
01177         unsigned int GetEstimatedDelay()
01178             {
01179                 assert(instance);
01180                 return m_dynlib.GetEstimatedDelay(instance);
01181             }
01182
01193         std::array<float,InputSampleSize>& GetBufferIn()
01194             {
01195                 assert(instance);
01196                 float *buf=m_dynlib.GetBufferIn(instance);
01197                 return reinterpret_cast< std::array<float,InputSampleSize>& >(*buf);
01198
01199             }
01210         std::array<float,OutputSampleSize>& GetBufferOut()
01211             {
01212                 assert(instance);
01213                 float *buf= m_dynlib.GetBufferOut(instance);
01214                 return reinterpret_cast< std::array<float,OutputSampleSize>& >(*buf);
01215             }
01221         void ProcessAudio()
01222             {
01223                 assert(instance);
01224                 m_dynlib.ProcessAudio(instance, m_dynlib.GetBufferIn(instance),
      m_dynlib.GetBufferOut(instance));
01225             }
01239         // void ProcessAudio_Planar(const std::array< const std::array<const float,ChunkFrames>,
      InputChannels>& input, std::array< std::array<float,ChunkFrames>, OutputChannels>& output)
01240         void ProcessAudio_Planar(float const * const *input, float * const *output)
01241             {
01242                 assert(instance);
01243                 m_dynlib.ProcessAudio_Planar(instance, input, output);
01244             }
01245
01257             template<typename T>
01258         std::vector<T> ProcessAnyAudio(const std::vector<T> input)
01259             {
01260                 assert(instance);
01261                 std::vector<T> output;
01262                 unsigned int out_offset=0;
01263                 unsigned int in_offset=0;
01264                 unsigned int todo = input.size();
01265                 while (todo>0) {
01266                     unsigned int left = AddAudio(&input[in_offset], todo);
01267                     unsigned int out_avail = m_dynlib.GetOutputCount(instance);
```

```
                    output.resize(out_offset + out_avail);
                    GetAudio(&output[out_offset], out_avail);
                    out_offset+=out_avail;
                    in_offset += todo-left;
                    todo=left;
                }
                return output;
            }

        class CClient {
            public:
                CClient(cloudx1_CInstance* instance, CDynLib& dynlib)
                : m_dynlib(dynlib)
                    {
                        assert(instance);
                        client=m_dynlib.NewClient(instance);
                        if (!client) throw std::bad_alloc();
                    }
                // non-copyable
                CClient( const CInstance& ) = delete;
                CClient& operator=( const CInstance& ) = delete;
                ~CClient()
                    {
                        if (client) {
                            m_dynlib.DeleteClient(client);
                            client=nullptr;
                        }
                    }
                std::string ProcessJson(const std::string &request, bool *NeedSave = nullptr)
                    {
                        assert(client);
                        int need_save=0;
                        const char *canswer = m_dynlib.ProcessJson(client, request.c_str(), &need_save);
                        if (!canswer) return {};
                        std::string answer(canswer);
                        m_dynlib.FreeJsonAnswer (canswer);
                        if (NeedSave) {
                            *NeedSave=(need_save!=0);
                        }
                        return answer;
                    }
            private:
                CDynLib& m_dynlib;
                cloudx1_CClientInstance *client = nullptr;
        };
        std::shared_ptr<CClient> NewClient()
            {
                assert(instance);
                return std::make_shared<CClient>(instance, m_dynlib);
            }

    protected:
            template<typename T>
        unsigned int AddAudio(const T* payload, unsigned int nFrame)
            {
                assert(instance);
                return m_dynlib.AddAudio(instance, reinterpret_cast<const T*>(payload), nFrame, helper::SampleFormat<T>::format);
            }
            template<typename T>
        unsigned int GetAudio(T* payload, unsigned int max_nFrame)
            {
                assert(instance);
                return m_dynlib.GetAudio(instance, reinterpret_cast<T*>(payload), max_nFrame, helper::SampleFormat<T>::format);
            }

    private:
        CDynLib& m_dynlib;
        cloudx1_CParameters* params = nullptr;
        cloudx1_CInstance* instance = nullptr;
        std::thread update_thread;
        std::vector< std::pair<std::string,std::string> > init_metadata;
#if CLOUDX1_HAS_WEBSERVER
        uint64_t webserver = SOUND4_INVALID_WEBSERVER_ID;
#endif // CLOUDX1_HAS_WEBSERVER
    };

}; // namespace dyn
}; // namespace cloudx1
}; // namespace sound4


// bridge C callbacks to CPresetLoader
extern "C" {
    static char *cloudx1_custom_reader(const fs_char *filename, void* userdata) {
```

```
        sound4::cloudx1::dyn::CPresetLoader *preset_loader=reinterpret_cast<sound4::cloudx1::dyn::CPresetLoader*>(userdata);
        std::string content=preset_loader->Read(filename);
        return strdup(content.c_str());
    }
    static void cloudx1_custom_reader_free(char *content, void* userdata) {
        if (!content) return;
        free(content);
    }
    static int cloudx1_custom_writer(const fs_char *filename, const char *content, void* userdata) {
        sound4::cloudx1::dyn::CPresetLoader *preset_loader=reinterpret_cast<sound4::cloudx1::dyn::CPresetLoader*>(userdata);
        auto res=preset_loader->Write(filename,content);
        return res?0:-1;
    }
    static int cloudx1_custom_exists(const fs_char *filename, void* userdata) {
        sound4::cloudx1::dyn::CPresetLoader *preset_loader=reinterpret_cast<sound4::cloudx1::dyn::CPresetLoader*>(userdata);
        auto res=preset_loader->Exists(filename);
        return res?0:-1;
    }
    static fs_char** cloudx1_custom_getall(void* userdata) {
        sound4::cloudx1::dyn::CPresetLoader *preset_loader=reinterpret_cast<sound4::cloudx1::dyn::CPresetLoader*>(userdata);
        auto res=preset_loader->GetAll();
        fs_char**all=(fs_char**)malloc((res.size()+1)*sizeof(const fs_char*));
        for (size_t n=0;n<res.size();n++) {
            all[n]=fs_strdup(res[n].c_str());
        }
        all[res.size()]=nullptr;
        return all;
    }
    static void cloudx1_custom_getall_free(fs_char** all, void* userdata) {
        if (!all) return;
        for (fs_char** one=all;*one;one++) {
            free(*one);
        }
        free(all);
    }
    static int cloudx1_custom_remove(const fs_char *filename, void* userdata) {
        sound4::cloudx1::dyn::CPresetLoader *preset_loader=reinterpret_cast<sound4::cloudx1::dyn::CPresetLoader*>(userdata);
        auto res=preset_loader->Remove(filename);
        return res?0:-1;
    }
    static int cloudx1_custom_rename(const fs_char *from, const fs_char *to, void* userdata) {
        sound4::cloudx1::dyn::CPresetLoader *preset_loader=reinterpret_cast<sound4::cloudx1::dyn::CPresetLoader*>(userdata);
        auto res=preset_loader->Rename(from,to);
        return res?0:-1;
    }

};
```

11.15 sound4cl.hpp File Reference

C++ wrapper for dynamic loading library.

```
#include <string>
#include <exception>
#include <thread>
#include <functional>
#include <memory>
#include <array>
#include <assert.h>
#include <stdexcept>
#include <filesystem>
#include <string.h>
#include <libloaderapi.h>
#include "sound4cl_cdef.h"
```

Classes

- struct sound4::helper::SampleFormat< T >

  Helper for Sample format types.
- struct sound4::helper::SampleFormat< int16_t >
- struct sound4::helper::SampleFormat< int32_t >
- struct sound4::helper::SampleFormat< float >
- class sound4::helper::DynFuncHolder< T >

  Helper to wrap a function pointer.
- class sound4::helper::CDynLoader

  Helper to load dynamic library.
- class sound4::CProcessor

  Dynamic library interface.
- class sound4::CBus

  Shared Bus.
- class sound4::CPresetLoader

  Custom preset handler helper.
- class sound4::CInstance

  Instance handling class.
- class sound4::CInstance::CClient

Namespaces

- namespace sound4
- namespace sound4::helper

Macros

- #define UNIXLIKE 0

Typedefs

- using sound4::helper::DynLib_t = HMODULE
- using sound4::helper::DynFunc_t = FARPROC
- using sound4::LogSeverity = sound4cl_LogSeverity
- using sound4::log_cb_t = std::function< void(LogSeverity, const std::string &)>
- using sound4::PresetChange_Kind = sound4cl_PresetChange_Kind

Variables

- const LogSeverity sound4::none = (LogSeverity) sound4cl_none
- const LogSeverity sound4::fatal = (LogSeverity) sound4cl_fatal
- const LogSeverity sound4::error = (LogSeverity) sound4cl_error
- const LogSeverity sound4::warning = (LogSeverity) sound4cl_warning
- const LogSeverity sound4::info = (LogSeverity) sound4cl_info
- const LogSeverity sound4::verbose = (LogSeverity) sound4cl_verbose
- const LogSeverity sound4::verbose2 = (LogSeverity) sound4cl_verbose2
- const LogSeverity sound4::verbose3 = (LogSeverity) sound4cl_verbose3
- const LogSeverity sound4::verbose4 = (LogSeverity) sound4cl_verbose4
- const LogSeverity sound4::verbose5 = (LogSeverity) sound4cl_verbose5

11.15.1 Detailed Description

You need to load the dynamic library, and if it succeed you can use it.

Definition in file sound4cl.hpp.

11.15.2 Macro Definition Documentation

11.15.2.1 UNIXLIKE

```
#define UNIXLIKE 0
```

Definition at line 24 of file sound4cl.hpp.

11.16 sound4cl.hpp

Go to the documentation of this file.

```
00001
00008 #pragma once
00009
00010 #include <string>
00011 #include <exception>
00012 #include <thread>
00013 #include <functional>
00014 #include <memory>
00015 #include <array>
00016 #include <assert.h>
00017 #include <stdexcept>
00018 #include <filesystem>
00019 #include <string.h>
00020
00021 #if defined(__unix__) || defined(__APPLE__)
00022     #define UNIXLIKE 1
00023 #else
00024     #define UNIXLIKE 0
00025 #endif
00026
00027 #if UNIXLIKE
00028     #include <dlfcn.h>
00029 #elif defined(_WIN32)
00030     #include <libloaderapi.h>
00031 #else
00032     #error "Unsupported OS"
00033 #endif
00034
00035 #include "sound4cl_cdef.h"
00036
00037     // bridge C callbacks to CPresetLoader
00038     extern "C" {
00039         static char *sound4cl_custom_reader(const fs_char *filename, void* userdata);
00040         static void sound4cl_custom_reader_free(char *content, void* userdata);
00041         static int sound4cl_custom_writer(const fs_char *filename, const char *content, void*
      userdata);
00042         static int sound4cl_custom_exists(const fs_char *filename, void* userdata);
00043         static fs_char** sound4cl_custom_getall(void* userdata);
00044         static void sound4cl_custom_getall_free(fs_char** all, void* userdata);
00045         static int sound4cl_custom_remove(const fs_char *filename, void* userdata);
00046         static int sound4cl_custom_rename(const fs_char *from, const fs_char *to, void* userdata);
00047     };
00048
00052 namespace sound4 {
00053
00057     namespace helper {
00058         #ifdef _WIN32
00064         static inline std::string WStringToUTF8(const std::wstring& wstr) {
00065             if (wstr.empty()) return {};
00066             int size = WideCharToMultiByte(CP_UTF8, 0, &wstr[0], (int)wstr.size(), NULL, 0, NULL,
      NULL);
00067             std::string str(size, 0);
00068             WideCharToMultiByte(CP_UTF8, 0, &wstr[0], (int)wstr.size(), &str[0], size, NULL, NULL);
00069             return str;
```

```
}
static inline std::wstring UTF8ToWString(const std::string& str) {
    if (str.empty()) return std::wstring();
    int size = MultiByteToWideChar(CP_UTF8, 0, &str[0], (int)str.size(), NULL, 0);
    std::wstring wstr(size, 0);
    MultiByteToWideChar(CP_UTF8, 0, &str[0], (int)str.size(), &wstr[0], size);
    return wstr;
}
#endif // _WIN32

    template<typename T>
struct SampleFormat {
};
    template<>
struct SampleFormat<int16_t> {
    const sound4cl_SampleFormat format = S16_NATIVE;
};
    template<>
struct SampleFormat<int32_t> {
    const sound4cl_SampleFormat format = S32_NATIVE;
};
    template<>
struct SampleFormat<float> {
    const sound4cl_SampleFormat format = F32_NATIVE;
};

// Storage definition, depending on OS
#if UNIXLIKE
    using DynLib_t = void *;
    using DynFunc_t = void *;
#else
    using DynLib_t = HMODULE;
    using DynFunc_t = FARPROC;
#endif

    template <typename T>
class DynFuncHolder {
private:
    DynFunc_t m_ptr = NULL;
public:
    DynFuncHolder() = default;
    DynFuncHolder(DynFunc_t a_ptr) : m_ptr(a_ptr) {}
    operator bool() const { return (m_ptr!=NULL); }
    bool IsOk() const { return m_ptr!=NULL; }
    operator T* () const { return reinterpret_cast<T*>(m_ptr); }
};

class CDynLoader {
    private:
        DynLib_t m_lib {};
    public:
        CDynLoader() = default;
        CDynLoader(CDynLoader&&) = default;
        // No copy allowed
        CDynLoader(const CDynLoader&) = delete;
        CDynLoader& operator=(CDynLoader const&) = delete;
        operator bool() const {
            return (m_lib!=NULL);
        }
        bool IsOk() const {
            return (m_lib!=NULL);
        }
        #if UNIXLIKE
            void Close() {
                if (IsOk()) {
                    #ifndef __SANITIZE_ADDRESS__ // avoid unloading to keep call stack
                    dlclose(m_lib);
                    #endif // __SANITIZE_ADDRESS__
                    m_lib=NULL;
                }
            }
            bool Load(const std::filesystem::path& dynlib)
            {
                Close();
                m_lib=dlopen(dynlib.c_str(), RTLD_NOW|RTLD_LOCAL);
                return IsOk();
            }
                template <typename T>
            DynFuncHolder<T> GetSymbol(const std::string& name) {
                auto ptr=dlsym(m_lib, name.c_str());
                if (!ptr) {
                    throw std::runtime_error("Missing function in library");
                }
                return DynFuncHolder<T>(ptr);
            }
                template <typename T>
            DynFuncHolder<T> GetSymbol_safe(const std::string& name) {
```

```
                        auto ptr=dlsym(m_lib, name.c_str());
                        return DynFuncHolder<T>(ptr);
                    }
                    static std::filesystem::path GetThisLibraryPath(void) {
                        static Dl_info info;
                        if (! dladdr((void *) GetThisLibraryPath, & info)) return {};
                        auto rp=realpath(info.dli_fname, NULL);
                        std::filesystem::path p(rp);
                        free(rp);
                        return p;
                    }
                #else
                    bool Load(const std::filesystem::path& dynlib, uint32_t loadflags = LOAD_LIBRARY_SEARCH_DLL_LOAD_DIR|LOAD_LIBRARY_SEARCH_APPLICATION_DIR|LOAD_LIBRARY_SEARCH_USER_DIRS|LOAD_LIBRARY_SEARCH_S
                    {
                        Close();
                        m_lib=LoadLibraryExW(dynlib.c_str(), NULL, loadflags);
                        return IsOk();
                    }
                    void Close() {
                        if (IsOk()) {
                            // NOTE: On Windows, FreeLibrary may create a lot of troubles, should use FreeLibraryAndExitThread but...
                            // So define SOUND4_CALL_FREELIBRARY before including this file if you really want to unload the library dynamically
                            #if defined(SOUND4_CALL_FREELIBRARYANDEXITTHREAD)
                                FreeLibraryAndExitThread(m_lib, 0);
                            #elif defined(SOUND4_CALL_FREELIBRARY)
                                FreeLibrary(m_lib);
                            #endif // SOUND4_CALL_FREELIBRARY
                            m_lib=NULL;
                        }
                    }
                        template <typename T>
                    DynFuncHolder<T> GetSymbol(const std::string& name) {
                        auto ptr=GetProcAddress(m_lib, name.c_str());
                        if (!ptr) {
                            throw std::runtime_error("Missing function in library");
                        }
                        return DynFuncHolder<T>(ptr);
                    }
                        template <typename T>
                    DynFuncHolder<T> GetSymbol_safe(const std::string& name) {
                        auto ptr=GetProcAddress(m_lib, name.c_str());
                        return DynFuncHolder<T>(ptr);
                    }
                    static std::filesystem::path GetThisLibraryPath(void) {
                        static wchar_t path[MAX_PATH]={};
                        HMODULE hm = NULL;
                        if (GetModuleHandleExW(GET_MODULE_HANDLE_EX_FLAG_FROM_ADDRESS |
                                GET_MODULE_HANDLE_EX_FLAG_UNCHANGED_REFCOUNT,
                                (LPCWSTR) &GetThisLibraryPath, &hm))
                        {
                            if (GetModuleFileNameW(hm, path, MAX_PATH) > 0) {
                                return std::filesystem::path(path);
                            }
                        }
                        return {};
                    }
                #endif
                virtual ~CDynLoader() {
                    Close();
                }
        }; // class CDynLoader
    }; // namespace helper


    using LogSeverity = sound4cl_LogSeverity;
    const LogSeverity none     = (LogSeverity) sound4cl_none;
    const LogSeverity fatal    = (LogSeverity) sound4cl_fatal;
    const LogSeverity error    = (LogSeverity) sound4cl_error;
    const LogSeverity warning  = (LogSeverity) sound4cl_warning;
    const LogSeverity info     = (LogSeverity) sound4cl_info;
    const LogSeverity verbose  = (LogSeverity) sound4cl_verbose;
    const LogSeverity verbose2 = (LogSeverity) sound4cl_verbose2;
    const LogSeverity verbose3 = (LogSeverity) sound4cl_verbose3;
    const LogSeverity verbose4 = (LogSeverity) sound4cl_verbose4;
    const LogSeverity verbose5 = (LogSeverity) sound4cl_verbose5;

    using log_cb_t = std::function<void(LogSeverity,const std::string&)>;

    static log_cb_t _log_cb;
    extern "C" {
        static inline void _log_cb_c(LogSeverity severity, const char *c_msg) {
            _log_cb(severity, std::string(c_msg));
        }
    }
```

```
    class CProcessor {
    private:
        helper::CDynLoader m_lib;
        bool m_bOK = false;
        std::string m_prefix; // The prefix of functions, depends on the library (cloud_, impact_...)
    protected:
        friend class CBus;
        friend class CInstance;

        // All those wrapped functions have the same signature as there C sound4cl_XXX
        helper::DynFuncHolder< decltype(sound4cl_GetVersion              ) > fnGetVersion              ;
        helper::DynFuncHolder< decltype(sound4cl_GetChunkSizeInFrames    ) > fnGetChunkSizeInFrames    ;
        helper::DynFuncHolder< decltype(sound4cl_GetChannelCount         ) > fnGetChannelCount         ;
        helper::DynFuncHolder< decltype(sound4cl_GetAudioInputCount      ) > fnGetAudioInputCount      ;
        helper::DynFuncHolder< decltype(sound4cl_GetAudioOutputCount     ) > fnGetAudioOutputCount     ;
        helper::DynFuncHolder< decltype(sound4cl_GetSampleRate           ) > fnGetSampleRate           ;
        helper::DynFuncHolder< decltype(sound4cl_SetLoggerCallback       ) > fnSetLoggerCallback       ;
        helper::DynFuncHolder< decltype(sound4cl_SetLogSeverity          ) > fnSetLogSeverity          ;
        helper::DynFuncHolder< decltype(sound4cl_NewParameters           ) > fnNewParameters           ;
        helper::DynFuncHolder< decltype(sound4cl_FreeParameters          ) > fnFreeParameters          ;
        helper::DynFuncHolder< decltype(sound4cl_SetParameter            ) > fnSetParameter            ;
        helper::DynFuncHolder< decltype(sound4cl_GetParameter            ) > fnGetParameter            ;
        helper::DynFuncHolder< decltype(sound4cl_FreeParameterValue      ) > fnFreeParameterValue      ;
        helper::DynFuncHolder< decltype(sound4cl_InitProcess             ) > fnInitProcess             ;
        helper::DynFuncHolder< decltype(sound4cl_InitProcess2            ) > fnInitProcess2            ;
        helper::DynFuncHolder< decltype(sound4cl_TerminateProcess        ) > fnTerminateProcess        ;
        helper::DynFuncHolder< decltype(sound4cl_ExitProcess             ) > fnExitProcess             ;
        helper::DynFuncHolder< decltype(sound4cl_StartUpdateThread       ) > fnStartUpdateThread       ;
        helper::DynFuncHolder< decltype(sound4cl_StopUpdateThread        ) > fnStopUpdateThread        ;
        helper::DynFuncHolder< decltype(sound4cl_WaitUpdateThreadReady   ) > fnWaitUpdateThreadReady   ;
        helper::DynFuncHolder< decltype(sound4cl_ProcessAudio            ) > fnProcessAudio            ;
        helper::DynFuncHolder< decltype(sound4cl_ProcessAudio_Planar     ) > fnProcessAudio_Planar     ;
        helper::DynFuncHolder< decltype(sound4cl_GetBufferIn             ) > fnGetBufferIn             ;
        helper::DynFuncHolder< decltype(sound4cl_GetBufferOut            ) > fnGetBufferOut            ;
        helper::DynFuncHolder< decltype(sound4cl_GetEstimatedDelay       ) > fnGetEstimatedDelay       ;
        helper::DynFuncHolder< decltype(sound4cl_GetFormatName           ) > fnGetFormatName           ;
        helper::DynFuncHolder< decltype(sound4cl_GetFormatFromName       ) > fnGetFormatFromName       ;
        helper::DynFuncHolder< decltype(sound4cl_GetBytesFromFormat      ) > fnGetBytesFromFormat      ;
        helper::DynFuncHolder< decltype(sound4cl_GetMaxPacketFrame       ) > fnGetMaxPacketFrame       ;
        helper::DynFuncHolder< decltype(sound4cl_AddAudio                ) > fnAddAudio                ;
        helper::DynFuncHolder< decltype(sound4cl_AddPadAudio             ) > fnAddPadAudio             ;
        helper::DynFuncHolder< decltype(sound4cl_GetOutputCount          ) > fnGetOutputCount          ;
        helper::DynFuncHolder< decltype(sound4cl_GetAudio                ) > fnGetAudio                ;
        helper::DynFuncHolder< decltype(sound4cl_AudioConvertFrom        ) > fnAudioConvertFrom        ;
        helper::DynFuncHolder< decltype(sound4cl_AudioConvertTo          ) > fnAudioConvertTo          ;
        helper::DynFuncHolder< decltype(sound4cl_StereoToMono            ) > fnStereoToMono            ;
        helper::DynFuncHolder< decltype(sound4cl_MonoToStereo            ) > fnMonoToStereo            ;
        helper::DynFuncHolder< decltype(sound4cl_AudioMonoFromLiveStereo) > fnAudioMonoFromLiveStereo;
        helper::DynFuncHolder< decltype(sound4cl_AudioMonoToLiveStereo   ) > fnAudioMonoToLiveStereo   ;
        helper::DynFuncHolder< decltype(sound4cl_NewClient               ) > fnNewClient               ;
        helper::DynFuncHolder< decltype(sound4cl_DeleteClient            ) > fnDeleteClient            ;
        helper::DynFuncHolder< decltype(sound4cl_ProcessJson             ) > fnProcessJson             ;
        helper::DynFuncHolder< decltype(sound4cl_FreeJsonAnswer          ) > fnFreeJsonAnswer          ;
        helper::DynFuncHolder< decltype(sound4cl_SaveState               ) > fnSaveState               ;

        // only for processes supporting webserver
        helper::DynFuncHolder< decltype(sound4cl_Webserver_tcp           ) > fnWebserver_tcp           ;
        helper::DynFuncHolder< decltype(sound4cl_Webserver_tcp2          ) > fnWebserver_tcp2          ;
        helper::DynFuncHolder< decltype(sound4cl_Webserver               ) > fnWebserver               ;
        helper::DynFuncHolder< decltype(sound4cl_Webserver_Stop          ) > fnWebserver_Stop          ;
        helper::DynFuncHolder< decltype(sound4cl_Webserver_Status        ) > fnWebserver_Status        ;

        // added 2023-03-22
        helper::DynFuncHolder< decltype(sound4cl_StereoToMono_Planar     ) > fnStereoToMono_Planar     ;
        helper::DynFuncHolder< decltype(sound4cl_MonoToStereo_Planar     ) > fnMonoToStereo_Planar     ;

        // added 2023-05-22
        helper::DynFuncHolder< decltype(sound4cl_SetMetadata             ) > fnSetMetadata             ;
        helper::DynFuncHolder< decltype(sound4cl_GetMetadataInfos        ) > fnGetMetadataInfos        ;
        helper::DynFuncHolder< decltype(sound4cl_FreeMetadataInfos       ) > fnFreeMetadataInfos       ;

        // added 2023-06-20
        helper::DynFuncHolder< decltype(sound4cl_SetPresetManager                ) > fnSetPresetManager      ;
        helper::DynFuncHolder< decltype(sound4cl_PresetManager_InformChange      ) > fnPresetManager_InformChange      ;

        // added 2023-09-21
        helper::DynFuncHolder< decltype(sound4cl_GetPossibleChunkSizeInFrames    ) > fnGetPossibleChunkSizeInFrames   ;
        helper::DynFuncHolder< decltype(sound4cl_GetProcessChunkFrames           ) > fnGetProcessChunkFrames   ;
        helper::DynFuncHolder< decltype(sound4cl_InitProcess3                    ) > fnInitProcess3 ;

        // added 2023-06-26, only for processes supporting bus
```

```
        helper::DynFuncHolder< decltype(sound4cl_NewBus                 ) > fnNewBus      ;
        helper::DynFuncHolder< decltype(sound4cl_FreeBus                ) > fnFreeBus      ;
        helper::DynFuncHolder< decltype(sound4cl_SetInstanceBus         ) > fnSetInstanceBus      ;

        // added 2024-02-19
        helper::DynFuncHolder< decltype(sound4cl_SetMetadataMulti       ) > fnSetMetadataMulti ;

        // added 2024-05-23
        helper::DynFuncHolder< decltype(sound4cl_Webserver_SetAppHealth    ) > fnWebserver_SetAppHealth      ;
        helper::DynFuncHolder< decltype(sound4cl_Webserver_GetAppHealth    ) > fnWebserver_GetAppHealth      ;
        helper::DynFuncHolder< decltype(sound4cl_Webserver_FreeString      ) > fnWebserver_FreeString ;

            template <typename T>
        helper::DynFuncHolder<T> GetPrefixSymbol(const std::string& name) {
            std::string prefix_name = m_prefix+name;
            return m_lib.GetSymbol<T>(prefix_name);
        }

    public:
        CProcessor() = default;

        bool Load(const std::filesystem::path& filepath) {
            m_lib.Close();
            // If a path is given, use it directly and do not try other path
            if (filepath.has_parent_path() && !m_lib.Load(filepath)) {
                return false;
            } else if (!m_lib.IsOk()) {
                auto thisdir=helper::CDynLoader::GetThisLibraryPath().parent_path();
                auto filename = filepath.filename();
                #ifndef _WIN32
                // Linux: if in a bin directory, try ../lib first
                if (!m_lib.IsOk() && thisdir.filename()=="bin") {
                    auto libdir = thisdir.parent_path() / "lib";
                    m_lib.Load(libdir / filename);
                }
                #endif // !_WIN32
                if (!m_lib.IsOk()) {
                    // Search in the same directory this code is in
                    m_lib.Load(thisdir / filename);
                }
                if (!m_lib.IsOk()) {
                    // Try current path
                    std::error_code ec;
                    auto p = std::filesystem::current_path(ec);
                    if (!ec) {
                        m_lib.Load(p / filename);
                    }
                }
                if (!m_lib.IsOk()) {
                    return false;
                }
            }
            // Get information from the library itself
            try {
                auto GetInfo = m_lib.GetSymbol< decltype(sound4cl_SOUND4_GetProcessInfo              ) >("SOUND4_GetProcessInfo"   );
                auto info = GetInfo();
                m_prefix = info->prefix;
            } catch (std::runtime_error& ) {
                // Compatibility: search in known libraries without this function
                #ifdef _WIN32
                    std::string filename = helper::WStringToUTF8(filepath.stem());
                #else // !_WIN32
                    std::string filename = filepath.stem();
                    // remove lib prefix
                    filename=filename.substr(3);
                #endif // ! _WIN32
                if (filename=="sound4.x1.cloud") {
                    m_prefix="cloudx1_";
                } else if (filename=="sound4.impact.cl") {
                    m_prefix="impact_";
                } else if (filename=="sound4.bigvoice.cl") {
                    m_prefix="bigvoice_";
                } else {
                    return false;
                }
            }

            // Load all C functions
            try {
                fnGetVersion              = GetPrefixSymbol< decltype(sound4cl_GetVersion ) >("GetVersion"              );
                fnGetChunkSizeInFrames    = GetPrefixSymbol< decltype(sound4cl_GetChunkSizeInFrames
```

```
) >("GetChunkSizeInFrames"   );
                fnGetChannelCount         = GetPrefixSymbol< decltype(sound4cl_GetChannelCount
) >("GetChannelCount"        );
                fnGetAudioInputCount      = GetPrefixSymbol< decltype(sound4cl_GetAudioInputCount
) >("GetAudioInputCount"     );
                fnGetAudioOutputCount     = GetPrefixSymbol< decltype(sound4cl_GetAudioOutputCount
) >("GetAudioOutputCount"    );
                fnGetSampleRate           = GetPrefixSymbol< decltype(sound4cl_GetSampleRate
) >("GetSampleRate"          );
                fnSetLoggerCallback       = GetPrefixSymbol< decltype(sound4cl_SetLoggerCallback
) >("SetLoggerCallback"      );
                fnSetLogSeverity          = GetPrefixSymbol< decltype(sound4cl_SetLogSeverity
) >("SetLogSeverity"         );
                fnNewParameters           = GetPrefixSymbol< decltype(sound4cl_NewParameters
) >("NewParameters"          );
                fnFreeParameters          = GetPrefixSymbol< decltype(sound4cl_FreeParameters
) >("FreeParameters"         );
                fnSetParameter            = GetPrefixSymbol< decltype(sound4cl_SetParameter
) >("SetParameter"           );
                fnGetParameter            = GetPrefixSymbol< decltype(sound4cl_GetParameter
) >("GetParameter"           );
                fnFreeParameterValue      = GetPrefixSymbol< decltype(sound4cl_FreeParameterValue
) >("FreeParameterValue"     );
                fnInitProcess             = GetPrefixSymbol< decltype(sound4cl_InitProcess
) >("InitProcess"            );
                fnInitProcess2            = GetPrefixSymbol< decltype(sound4cl_InitProcess2
) >("InitProcess2"           );
                fnTerminateProcess        = GetPrefixSymbol< decltype(sound4cl_TerminateProcess
) >("TerminateProcess"       );
                fnExitProcess             = GetPrefixSymbol< decltype(sound4cl_ExitProcess
) >("ExitProcess"            );
                fnStartUpdateThread       = GetPrefixSymbol< decltype(sound4cl_StartUpdateThread
) >("StartUpdateThread"      );
                fnStopUpdateThread        = GetPrefixSymbol< decltype(sound4cl_StopUpdateThread
) >("StopUpdateThread"       );
                fnWaitUpdateThreadReady   = GetPrefixSymbol< decltype(sound4cl_WaitUpdateThreadReady
) >("WaitUpdateThreadReady"  );
                fnProcessAudio            = GetPrefixSymbol< decltype(sound4cl_ProcessAudio
) >("ProcessAudio"           );
                fnProcessAudio_Planar     = GetPrefixSymbol< decltype(sound4cl_ProcessAudio_Planar
) >("ProcessAudio_Planar"    );
                fnGetBufferIn             = GetPrefixSymbol< decltype(sound4cl_GetBufferIn
) >("GetBufferIn"            );
                fnGetBufferOut            = GetPrefixSymbol< decltype(sound4cl_GetBufferOut
) >("GetBufferOut"           );
                fnGetEstimatedDelay       = GetPrefixSymbol< decltype(sound4cl_GetEstimatedDelay
) >("GetEstimatedDelay"      );
                fnGetFormatName           = GetPrefixSymbol< decltype(sound4cl_GetFormatName
) >("GetFormatName"          );
                fnGetFormatFromName       = GetPrefixSymbol< decltype(sound4cl_GetFormatFromName
) >("GetFormatFromName"      );
                fnGetBytesFromFormat      = GetPrefixSymbol< decltype(sound4cl_GetBytesFromFormat
) >("GetBytesFromFormat"     );
                fnGetMaxPacketFrame       = GetPrefixSymbol< decltype(sound4cl_GetMaxPacketFrame
) >("GetMaxPacketFrame"      );
                fnAddAudio                = GetPrefixSymbol< decltype(sound4cl_AddAudio
) >("AddAudio"               );
                fnAddPadAudio             = GetPrefixSymbol< decltype(sound4cl_AddPadAudio
) >("AddPadAudio"            );
                fnGetOutputCount          = GetPrefixSymbol< decltype(sound4cl_GetOutputCount
) >("GetOutputCount"         );
                fnGetAudio                = GetPrefixSymbol< decltype(sound4cl_GetAudio
) >("GetAudio"               );
                fnAudioConvertFrom        = GetPrefixSymbol< decltype(sound4cl_AudioConvertFrom
) >("AudioConvertFrom"       );
                fnAudioConvertTo          = GetPrefixSymbol< decltype(sound4cl_AudioConvertTo
) >("AudioConvertTo"         );
                fnStereoToMono            = GetPrefixSymbol< decltype(sound4cl_StereoToMono
) >("StereoToMono"           );
                fnMonoToStereo            = GetPrefixSymbol< decltype(sound4cl_MonoToStereo
) >("MonoToStereo"           );
                fnAudioMonoFromLiveStereo = GetPrefixSymbol<
decltype(sound4cl_AudioMonoFromLiveStereo) >("AudioMonoFromLiveStereo");
                fnAudioMonoToLiveStereo   = GetPrefixSymbol< decltype(sound4cl_AudioMonoToLiveStereo
) >("AudioMonoToLiveStereo"  );
                fnNewClient               = GetPrefixSymbol< decltype(sound4cl_NewClient
) >("NewClient"              );
                fnDeleteClient            = GetPrefixSymbol< decltype(sound4cl_DeleteClient
) >("DeleteClient"           );
                fnProcessJson             = GetPrefixSymbol< decltype(sound4cl_ProcessJson
) >("ProcessJson"            );
                fnFreeJsonAnswer          = GetPrefixSymbol< decltype(sound4cl_FreeJsonAnswer
) >("FreeJsonAnswer"         );
                fnSaveState               = GetPrefixSymbol< decltype(sound4cl_SaveState
) >("SaveState"              );
            } catch (std::runtime_error& ) {
                return false;
```

```
            }
            // Webserver : not for all projects
            try {
                fnWebserver_tcp           = GetPrefixSymbol< decltype(sound4cl_Webserver_tcp ) >("Webserver_tcp"           );
                fnWebserver_tcp2          = GetPrefixSymbol< decltype(sound4cl_Webserver_tcp2 ) >("Webserver_tcp2"          );
                fnWebserver               = GetPrefixSymbol< decltype(sound4cl_Webserver ) >("Webserver"               );
                fnWebserver_Stop          = GetPrefixSymbol< decltype(sound4cl_Webserver_Stop ) >("Webserver_Stop"          );
                fnWebserver_Status        = GetPrefixSymbol< decltype(sound4cl_Webserver_Status ) >("Webserver_Status"        );
            } catch (std::runtime_error& ) {
                // Ignored, handler will take care
            }
            // Stereo/Mono conversion : must be present
            try {
                // added 2023-03-22
                fnStereoToMono_Planar     = GetPrefixSymbol< decltype(sound4cl_StereoToMono_Planar ) >("StereoToMono_Planar"    );
                fnMonoToStereo_Planar     = GetPrefixSymbol< decltype(sound4cl_MonoToStereo_Planar ) >("MonoToStereo_Planar"    );

            } catch (std::runtime_error& ) {
                return false;
            }
            // C functions allowed to be missing
            try {
                // added 2023-05-22
                fnSetMetadata             = GetPrefixSymbol< decltype(sound4cl_SetMetadata ) >("SetMetadata"             );
                fnGetMetadataInfos        = GetPrefixSymbol< decltype(sound4cl_GetMetadataInfos ) >("GetMetadataInfos"        );
                fnFreeMetadataInfos       = GetPrefixSymbol< decltype(sound4cl_FreeMetadataInfos ) >("FreeMetadataInfos"      );
                // added 2023-06-20
                fnSetPresetManager            = GetPrefixSymbol< decltype(sound4cl_SetPresetManager ) >("SetPresetManager"              );
                fnPresetManager_InformChange  = GetPrefixSymbol< decltype(sound4cl_PresetManager_InformChange     ) >("PresetManager_InformChange"    );

                // added 2023-09-21
                fnGetPossibleChunkSizeInFrames = GetPrefixSymbol< decltype(sound4cl_GetPossibleChunkSizeInFrames  ) >("GetPossibleChunkSizeInFrames"  );
                fnGetProcessChunkFrames        = GetPrefixSymbol< decltype(sound4cl_GetProcessChunkFrames         ) >("GetProcessChunkFrames"         );
                fnInitProcess3                 = GetPrefixSymbol< decltype(sound4cl_InitProcess3 ) >("InitProcess3"                 );
            }  catch (std::runtime_error& ) {
                // Ignored, handler will take care
            }

            // bus: not for all projects
            try {
                // added 2023-06-26
                fnNewBus                  = GetPrefixSymbol< decltype(sound4cl_NewBus ) >("NewBus"                 );
                fnFreeBus                 = GetPrefixSymbol< decltype(sound4cl_FreeBus ) >("FreeBus"                 );
                fnSetInstanceBus          = GetPrefixSymbol< decltype(sound4cl_SetInstanceBus ) >("SetInstanceBus"         );
            }  catch (std::runtime_error& ) {
                // Ignored, handler will take care
            }

            // Other optional
            try {
                // added 2024-02-19
                fnSetMetadataMulti        = GetPrefixSymbol< decltype(sound4cl_SetMetadataMulti ) >("SetMetadataMulti"       );

            }  catch (std::runtime_error& ) {
                // Ignored, handler will take care
            }

            // Other optional, web server only
            try {
                // added 2024-05-23
                fnWebserver_SetAppHealth    = GetPrefixSymbol< decltype(sound4cl_Webserver_SetAppHealth    ) >("Webserver_SetAppHealth"     );
                fnWebserver_GetAppHealth    = GetPrefixSymbol< decltype(sound4cl_Webserver_GetAppHealth    ) >("Webserver_GetAppHealth"     );
                fnWebserver_FreeString      = GetPrefixSymbol< decltype(sound4cl_Webserver_FreeString ) >("Webserver_FreeString"       );
            }  catch (std::runtime_error& ) {
                // Ignored, handler will take care
```

```
            }

            m_bOK=true;
            return true;
        }
        bool IsOk() const {
            return m_bOK;
        }

        void AudioConvertFrom(const uint8_t *payload, float *output, size_t nSpl, sound4cl_SampleFormat fmt)
            { fnAudioConvertFrom(payload, output, nSpl, fmt); }
        void AudioConvertTo(const float *input, uint8_t *payload, size_t nSpl, sound4cl_SampleFormat fmt)
            { fnAudioConvertTo(input, payload, nSpl, fmt); }
        void StereoToMono(const float *input, float *output, size_t nSpl)
            { fnStereoToMono(input, output, nSpl); }
        void MonoToStereo(const float *input, float *output, size_t nSpl)
            { fnMonoToStereo(input, output, nSpl); }
        void StereoToMono_Planar(const float *inputL, const float *inputR, float *output, size_t nSpl)
            { fnStereoToMono_Planar(inputL, inputR, output, nSpl); }
        void MonoToStereo_Planar(const float *input, float *outputL, float *outputR, size_t nSpl)
            { fnMonoToStereo_Planar(input, outputL, outputR, nSpl); }
        void AudioMonoFromLiveStereo(const uint8_t *payload, float *output)
            { fnAudioMonoFromLiveStereo(payload, output); }
        void AudioMonoToLiveStereo(const float *input, uint8_t *payload)
            { fnAudioMonoToLiveStereo(input, payload); }

        std::string GetVersion()
            { return std::string(fnGetVersion()); }

        unsigned int GetChunkSizeInFrames()
            { return fnGetChunkSizeInFrames(); }

        std::vector<unsigned int> GetPossibleChunkSizeInFrames()
            {
                std::vector<unsigned int> list;
                if (fnGetPossibleChunkSizeInFrames) {
                    for (unsigned int* src=fnGetPossibleChunkSizeInFrames();*src;src++) {
                        list.push_back(*src);
                    }
                } else {
                    list.push_back(fnGetChunkSizeInFrames());
                }
                return list;
            }

        unsigned int GetChannelCount()
            { return fnGetChannelCount(); }

        unsigned int GetAudioInputCount()
            { return fnGetAudioInputCount(); }

        unsigned int GetAudioOutputCount()
            { return fnGetAudioOutputCount(); }

        unsigned int GetSampleRate()
            { return fnGetSampleRate(); }

        std::string GetFormatName( const sound4cl_SampleFormat fmt)
            { return std::string(fnGetFormatName(fmt)); }

        sound4cl_SampleFormat GetFormatFromName( const std::string& name)
            { return fnGetFormatFromName(name.c_str()); }

        unsigned int GetBytesFromFormat( const sound4cl_SampleFormat fmt)
            { return fnGetBytesFromFormat(fmt); }

        void SetLogSeverity(LogSeverity severity)
            { fnSetLogSeverity(severity); }

        void SetLoggerCallback(log_cb_t cb)
            { _log_cb=cb; fnSetLoggerCallback(&_log_cb_c); }
    };

    class CBus {
        public:
            CBus(CProcessor& dynlib)
                : m_dynlib(dynlib)
                {
                    if (m_dynlib.fnNewBus) {
                        m_bus=m_dynlib.fnNewBus();
                    }
                }
            ~CBus()
                {
                    if (m_bus && m_dynlib.fnFreeBus) {
```

```
                        m_dynlib.fnFreeBus(m_bus);
                    }
                    m_bus = nullptr;
                }
            sound4cl_CBus *Get() const { return m_bus; }
        private:
            CProcessor& m_dynlib;
            sound4cl_CBus *m_bus;
    };

    class CPresetLoader {
    public:
        CPresetLoader() = default;
        virtual ~CPresetLoader() = default;

        virtual bool IsReadOnly() = 0;
        virtual bool Exists(const std::filesystem::path &name) = 0;
        virtual bool Remove(const std::filesystem::path &name) = 0;
        virtual bool Rename(const std::filesystem::path &from, const std::filesystem::path &to) = 0;
        virtual std::vector<std::filesystem::path> GetAll() = 0;
        virtual std::string Read(const std::filesystem::path &filename) = 0;
        virtual bool Write(const std::filesystem::path &filename, const std::string &content) =0;
    };
    using PresetChange_Kind = sound4cl_PresetChange_Kind;

    class CInstance {
    public:
        CInstance(CProcessor& dynlib)
        : m_dynlib(dynlib)
            {
                params = m_dynlib.fnNewParameters();
                if (!params) throw std::bad_alloc();
            }
        // non-copyable
        CInstance( const CInstance& ) = delete;
        CInstance& operator=( const CInstance& ) = delete;
        virtual ~CInstance()
            {
                Stop();
                if (params) m_dynlib.fnFreeParameters(params);
            }
       bool IsOk() const { return instance!=nullptr; }
        void SetParam(const std::string& name, const std::string& value)
            {
                assert(params);
                m_dynlib.fnSetParameter(params, name.c_str(), value.c_str());
            }
        std::string GetParam(const std::string& name)
            {
                assert(params);
                auto c_value=m_dynlib.fnGetParameter(params, name.c_str());
                std::string ret(c_value);
                m_dynlib.fnFreeParameterValue(c_value);
                return ret;
            }

        void SetBus(const CBus& bus) {
            assert(params);
            if (m_dynlib.fnSetInstanceBus) {
                m_dynlib.fnSetInstanceBus(params,bus.Get());
            }
        }

        void SetPresetManager(CPresetLoader *preset_manager)
            {
                if (!preset_manager) return;
                if (!m_dynlib.fnSetPresetManager) return;
                assert(params);
                m_dynlib.fnSetPresetManager(params,
                    sound4cl_custom_reader,
                    sound4cl_custom_reader_free,
                    sound4cl_custom_writer,
                    sound4cl_custom_exists,
                    sound4cl_custom_getall,
                    sound4cl_custom_getall_free,
                    sound4cl_custom_remove,
                    sound4cl_custom_rename,
                    preset_manager->IsReadOnly(),
                    preset_manager
                );
            }

        bool Create(const std::string& LoginKey, const std::string& RadioName, const std::string&
      Access_Key_ID, const std::string& Access_Key_Secret, const std::filesystem::path& save_path, int
      json_port = 0, unsigned int frames_per_chunk=0)
            {
                assert(!instance);
```

```
                std::string l_save_path;
                if (!save_path.empty()) {
                    l_save_path = save_path.u8string();
                }
                if (frames_per_chunk==0) {
                    frames_per_chunk=m_dynlib.GetChunkSizeInFrames();
                }
                if (m_dynlib.fnInitProcess3) {
                    instance = m_dynlib.fnInitProcess3(LoginKey.c_str(), RadioName.c_str(), Access_Key_ID.c_str(), Access_Key_Secret.c_str(), l_save_path.c_str(), params, frames_per_chunk);
                } else if (frames_per_chunk!=m_dynlib.GetChunkSizeInFrames()) {
                    return false;
                } else {
                    instance = m_dynlib.fnInitProcess2(LoginKey.c_str(), RadioName.c_str(), Access_Key_ID.c_str(), Access_Key_Secret.c_str(), l_save_path.c_str(), params);
                }
                if (!instance) return false;
                if (!init_metadata.empty()) {
                    for (auto&& [key,value]: init_metadata) {
                        m_dynlib.fnSetMetadata(instance, key.c_str(), value.c_str());
                    }
                    init_metadata.clear();
                }
                update_thread = std::thread([this, json_port](){
                    OnUpdateThreadStart();
                    m_dynlib.fnStartUpdateThread(instance, json_port);
                    OnUpdateThreadStop();
                });
                int timeout=5000;
                #ifdef DEBUG
                    timeout=60*1000; // For debugger pauses
                #endif
                if (m_dynlib.fnWaitUpdateThreadReady(instance, timeout)<0) {
                    return false;
                }
                return true;
            }

        unsigned int GetChunkFrames() {
            if (instance && m_dynlib.fnGetProcessChunkFrames) {
                return m_dynlib.fnGetProcessChunkFrames(instance);
            }
            return m_dynlib.fnGetChunkSizeInFrames();
        }

        void PresetManager_InformChange(const std::filesystem::path& relative_path, PresetChange_Kind change_kind)
            {
                if (m_dynlib.fnPresetManager_InformChange) {
                    m_dynlib.fnPresetManager_InformChange(instance, relative_path.c_str(), (sound4cl_PresetChange_Kind) change_kind);
                }
            }

        void SetMetadata(const std::string& key, const char* value)
            {
                if (m_dynlib.fnSetMetadata) {
                    if (instance) {
                        m_dynlib.fnSetMetadata(instance, key.c_str(), value);
                    } else {
                        init_metadata.push_back( {key, value} );
                    }
                }
            }


        void SetMetadataMulti(const std::unordered_map<std::string, const char*>& list)
            {
                if (instance) {
                    if (m_dynlib.fnSetMetadataMulti) {
                        typedef const char* pchar;
                        pchar* keyvalue=new pchar[2*list.size()+1];
                        size_t n=0;
                        for (auto&& [key,value]: list) {
                            keyvalue[2*n+0]=key.c_str();
                            keyvalue[2*n+1]=value;
                            n++;
                        }
                        keyvalue[2*n+0]=nullptr;

                        sound4cl_SetMetadataMulti(instance, keyvalue);

                        delete[] keyvalue;
                    } else {
                        for (auto&& [key,value]: list) {
                            SetMetadata(key, value);
                        }
```

```
                    }
                } else {
                    for (auto&& [key,value]: list) {
                        if (value) {
                            init_metadata.push_back( {key, value} );
                        }
                    }
                }
            }

        std::vector< std::tuple<std::string,std::string> > GetMetadataInfos()
            {
                std::vector< std::tuple<std::string,std::string> > values;
                if (m_dynlib.fnGetMetadataInfos) {
                    const char** c_values = m_dynlib.fnGetMetadataInfos(instance);
                    if (c_values) {
                        for (const char** c_value=c_values; *c_value; ) {
                            std::string key(*c_value);
                            c_value++;
                            if (*c_value) {
                                std::string descr(*c_value);
                                c_value++;
                                values.push_back( {key,descr} );
                            }
                        }
                        m_dynlib.fnFreeMetadataInfos(instance, c_values);
                    }
                }
                return values;
            }

        // Can be overloaded, called at start of UpdateThread in the thread
        virtual void OnUpdateThreadStart() {}
        // Can be overloaded to call at end of UpdateThread in the thread
        virtual void OnUpdateThreadStop() {}

        bool StartWebServer(int http_port, int https_port=0)
            {
                assert(instance);
                assert(webserver==SOUND4_INVALID_WEBSERVER_ID);
                if (!m_dynlib.fnWebserver) {
                    return false;
                }
                webserver = m_dynlib.fnWebserver(http_port,https_port,instance);
                if (webserver==SOUND4_INVALID_WEBSERVER_ID) {
                    return false;
                }
                int web_status=m_dynlib.fnWebserver_Status(webserver);
                if (http_port && (web_status & SOUND4_WEBSERVER_HTTP_OK) == 0) {
                    return false;
                }
                if (https_port && (web_status & SOUND4_WEBSERVER_HTTPS_OK) == 0) {
                    return false;
                }
                return true;
            }
        void StopWebServer()
            {
                if (!m_dynlib.fnWebserver_Stop) return;
                if (webserver != SOUND4_INVALID_WEBSERVER_ID) {
                    m_dynlib.fnWebserver_Stop(webserver, 1000);
                    webserver = SOUND4_INVALID_WEBSERVER_ID;
                }
            }

        void SetWebServerAppHealth(int httpcode, const std::string& contenttype, const std::string&
    content)
            {
                assert(instance);
                if (!m_dynlib.fnWebserver_SetAppHealth) return;
                m_dynlib.fnWebserver_SetAppHealth(instance, httpcode, contenttype.c_str(),
    content.c_str());
            }
        void GetWebServerAppHealth(int &httpcode, std::string& contenttype, std::string& content)
            {
                assert(instance);
                if (!m_dynlib.fnWebserver_GetAppHealth) return;
                char* c_contenttype=nullptr;
                char* c_content=nullptr;
                m_dynlib.fnWebserver_GetAppHealth(instance, &httpcode, &c_contenttype, &c_content);
                contenttype=c_contenttype;
                content=c_content;
                m_dynlib.fnWebserver_FreeString(c_contenttype);
                m_dynlib.fnWebserver_FreeString(c_content);
            }
        int Terminate()
            {
```

```
                if (!instance) return 0;
                return m_dynlib.fnTerminateProcess(instance);
            }

        void Stop()
            {
                if (!instance) return;
                StopWebServer();
                if (update_thread.joinable()) {
                    m_dynlib.fnStopUpdateThread(instance); // this will exit the update thread
                    update_thread.join();
                }
                m_dynlib.fnExitProcess(instance);
                instance=nullptr;
            }

        unsigned int GetEstimatedDelay()
            {
                assert(instance);
                return m_dynlib.fnGetEstimatedDelay(instance);
            }

        float* GetBufferIn()
            {
                assert(instance);
                return m_dynlib.fnGetBufferIn(instance);

            }
        float* GetBufferOut()
            {
                assert(instance);
                return m_dynlib.fnGetBufferOut(instance);
            }
        void ProcessAudio()
            {
                assert(instance);
                m_dynlib.fnProcessAudio(instance, m_dynlib.fnGetBufferIn(instance),
m_dynlib.fnGetBufferOut(instance));
            }
        // void ProcessAudio_Planar(const std::array< const std::array<const float,ChunkFrames>,
InputChannels>& input, std::array< std::array<float,ChunkFrames>, OutputChannels>& output)
        void ProcessAudio_Planar(float const * const *input, float * const *output)
            {
                assert(instance);
                m_dynlib.fnProcessAudio_Planar(instance, input, output);
            }

            template<typename T>
        std::vector<T> ProcessAnyAudio(const std::vector<T> input)
            {
                assert(instance);
                std::vector<T> output;
                unsigned int out_offset=0;
                unsigned int in_offset=0;
                unsigned int todo = input.size();
                while (todo>0) {
                    unsigned int left = AddAudio(&input[in_offset], todo);
                    unsigned int out_avail = m_dynlib.fnGetOutputCount(instance);
                    output.resize(out_offset + out_avail);
                    GetAudio(&output[out_offset], out_avail);
                    out_offset+=out_avail;
                    in_offset += todo-left;
                    todo=left;
                }
                return output;
            }

        class CClient {
            public:
                CClient(sound4cl_CInstance* instance, CProcessor& dynlib)
                : m_dynlib(dynlib)
                    {
                        assert(instance);
                        client=m_dynlib.fnNewClient(instance);
                        if (!client) throw std::bad_alloc();
                    }
                // non-copyable
                CClient( const CInstance& ) = delete;
                CClient& operator=( const CInstance& ) = delete;
                ~CClient()
                    {
                        if (client) {
                            m_dynlib.fnDeleteClient(client);
                            client=nullptr;
                        }
                    }
                std::string ProcessJson(const std::string &request, bool *NeedSave = nullptr)
```

```
                    {
                        assert(client);
                        int need_save=0;
                        const char *canswer = m_dynlib.fnProcessJson(client, request.c_str(), &need_save);
                        if (!canswer) return {};
                        std::string answer(canswer);
                        m_dynlib.fnFreeJsonAnswer (canswer);
                        if (NeedSave) {
                            *NeedSave=(need_save!=0);
                        }
                        return answer;
                    }
            private:
                CProcessor& m_dynlib;
                sound4cl_CClientInstance *client = nullptr;
        };
        std::shared_ptr<CClient> NewClient()
            {
                assert(instance);
                return std::make_shared<CClient>(instance, m_dynlib);
            }

    protected:
            template<typename T>
        unsigned int AddAudio(const T* payload, unsigned int nFrame)
            {
                assert(instance);
                return m_dynlib.fnAddAudio(instance, reinterpret_cast<const T*>(payload), nFrame, helper::SampleFormat<T>::format);
            }
            template<typename T>
        unsigned int GetAudio(T* payload, unsigned int max_nFrame)
            {
                assert(instance);
                return m_dynlib.fnGetAudio(instance, reinterpret_cast<T*>(payload), max_nFrame, helper::SampleFormat<T>::format);
            }

    private:
        CProcessor& m_dynlib;
        sound4cl_CParameters* params = nullptr;
        sound4cl_CInstance* instance = nullptr;
        std::thread update_thread;
        std::vector< std::pair<std::string,std::string> > init_metadata;
        uint64_t webserver = SOUND4_INVALID_WEBSERVER_ID;
    };

}; // namespace sound4


// bridge C callbacks to CPresetLoader
extern "C" {
    static char *sound4cl_custom_reader(const fs_char *filename, void* userdata) {
        sound4::CPresetLoader *preset_loader=reinterpret_cast<sound4::CPresetLoader*>(userdata);
        std::string content=preset_loader->Read(filename);
        return strdup(content.c_str());
    }
    static void sound4cl_custom_reader_free(char *content, void* userdata) {
        if (!content) return;
        free(content);
    }
    static int sound4cl_custom_writer(const fs_char *filename, const char *content, void* userdata) {
        sound4::CPresetLoader *preset_loader=reinterpret_cast<sound4::CPresetLoader*>(userdata);
        auto res=preset_loader->Write(filename,content);
        return res?0:-1;
    }
    static int sound4cl_custom_exists(const fs_char *filename, void* userdata) {
        sound4::CPresetLoader *preset_loader=reinterpret_cast<sound4::CPresetLoader*>(userdata);
        auto res=preset_loader->Exists(filename);
        return res?0:-1;
    }
    static fs_char** sound4cl_custom_getall(void* userdata) {
        sound4::CPresetLoader *preset_loader=reinterpret_cast<sound4::CPresetLoader*>(userdata);
        auto res=preset_loader->GetAll();
        fs_char**all=(fs_char**)malloc((res.size()+1)*sizeof(const fs_char*));
        for (size_t n=0;n<res.size();n++) {
            all[n]=fs_strdup(res[n].c_str());
        }
        all[res.size()]=nullptr;
        return all;
    }
    static void sound4cl_custom_getall_free(fs_char** all, void* userdata) {
        if (!all) return;
        for (fs_char** one=all;*one;one++) {
            free(*one);
        }
```

```
        free(all);
    }
    static int sound4cl_custom_remove(const fs_char *filename, void* userdata) {
        sound4::CPresetLoader *preset_loader=reinterpret_cast<sound4::CPresetLoader*>(userdata);
        auto res=preset_loader->Remove(filename);
        return res?0:-1;
    }
    static int sound4cl_custom_rename(const fs_char *from, const fs_char *to, void* userdata) {
        sound4::CPresetLoader *preset_loader=reinterpret_cast<sound4::CPresetLoader*>(userdata);
        auto res=preset_loader->Rename(from,to);
        return res?0:-1;
    }

};
```

11.17 sound4cl_cdef.h File Reference

C function signature definition for all sound4.cl libraries.

```
#include <stdint.h>
#include <stringapiset.h>
#include <wchar.h>
```

Classes

- struct sound4cl_SOUND4_ProcessInfo

Macros

- #define fs_strdup wcsdup

  helper for OS dependant file name copy
- #define SOUND4_INVALID_WEBSERVER_ID ((uint64_t)-1)
- #define SOUND4_WEBSERVER_HTTP_OK (1<<0)
- #define SOUND4_WEBSERVER_HTTPS_OK (1<<1)

Typedefs

- typedef wchar_t fs_char
- typedef void(∗ sound4cl_loggerfn) (enum sound4cl_LogSeverity, const char ∗)
- typedef char ∗(∗ sound4cl_storage_reader) (const fs_char ∗filename, void ∗userdata)
- typedef void(∗ sound4cl_storage_reader_free) (char ∗content, void ∗userdata)
- typedef int(∗ sound4cl_storage_writer) (const fs_char ∗filename, const char ∗content, void ∗userdata)
- typedef int(∗ sound4cl_storage_exists) (const fs_char ∗filename, void ∗userdata)
- typedef fs_char ∗∗(∗ sound4cl_storage_getall) (void ∗userdata)
- typedef void(∗ sound4cl_storage_getall_free) (fs_char ∗∗all, void ∗userdata)
- typedef int(∗ sound4cl_storage_remove) (const fs_char ∗filename, void ∗userdata)
- typedef int(∗ sound4cl_storage_rename) (const fs_char ∗from, const fs_char ∗to, void ∗userdata)

Enumerations

- enum sound4cl_LogSeverity {
  sound4cl_none = 0 , sound4cl_fatal = 1 , sound4cl_error = 2 , sound4cl_warning = 3 ,
  sound4cl_info = 4 , sound4cl_verbose = 5 , sound4cl_verbose2 = 6 , sound4cl_verbose3 = 7 ,
  sound4cl_verbose4 = 8 , sound4cl_verbose5 = 9 }
- enum sound4cl_PresetChange_Kind { change_kind_created = 1 , change_kind_modified , change_kind_deleted }
- enum sound4cl_SampleFormat {
  INVALID_FORMAT =0 , S16_LE , S16_BE , S24_LE ,
  S24_BE , S32_LE , S32_BE , F32_LE ,
  F32_BE , S16_NATIVE =S16_LE , S24_NATIVE =S24_LE , S32_NATIVE =S32_LE ,
  F32_NATIVE =F32_LE }

Functions

- const struct sound4cl_SOUND4_ProcessInfo ∗ sound4cl_SOUND4_GetProcessInfo ()
- const char ∗ sound4cl_GetVersion ()
- unsigned int sound4cl_GetChunkSizeInFrames ()
- unsigned int ∗ sound4cl_GetPossibleChunkSizeInFrames ()
- unsigned int sound4cl_GetChannelCount ()
- unsigned int sound4cl_GetAudioInputCount ()
- unsigned int sound4cl_GetAudioOutputCount ()
- unsigned int sound4cl_GetSampleRate ()
- void sound4cl_SetLoggerCallback (sound4cl_loggerfn logger)
- void sound4cl_SetLogSeverity (enum sound4cl_LogSeverity severity)
- struct sound4cl_CParameters ∗ sound4cl_NewParameters ()
- void sound4cl_FreeParameters (struct sound4cl_CParameters ∗params)
- void sound4cl_SetParameter (struct sound4cl_CParameters ∗params, const char ∗name, const char ∗value)
- const char ∗ sound4cl_GetParameter (struct sound4cl_CParameters ∗params, const char ∗name)
- void sound4cl_FreeParameterValue (const char ∗value)
- struct sound4cl_CInstance ∗ sound4cl_InitProcess (const char ∗LoginKey, const char ∗RadioName, const char ∗Access_Key_ID, const char ∗Access_Key_Secret, const char ∗save_path)
- struct sound4cl_CInstance ∗ sound4cl_InitProcess2 (const char ∗LoginKey, const char ∗RadioName, const char ∗Access_Key_ID, const char ∗Access_Key_Secret, const char ∗save_path, const struct sound4cl_↩CParameters ∗parameters)
- struct sound4cl_CInstance ∗ sound4cl_InitProcess3 (const char ∗LoginKey, const char ∗RadioName, const char ∗Access_Key_ID, const char ∗Access_Key_Secret, const char ∗save_path, const struct sound4cl_↩CParameters ∗parameters, unsigned int frames_per_chunk)
- unsigned int sound4cl_GetProcessChunkFrames (struct sound4cl_CInstance ∗instance)
- int sound4cl_TerminateProcess (struct sound4cl_CInstance ∗instance)
- void sound4cl_ExitProcess (struct sound4cl_CInstance ∗instance)
- struct sound4cl_CBus ∗ sound4cl_NewBus ()
- void sound4cl_FreeBus (struct sound4cl_CBus ∗bus)
- void sound4cl_SetInstanceBus (struct sound4cl_CParameters ∗params, struct sound4cl_CBus ∗bus)
- void sound4cl_SetPresetManager (struct sound4cl_CParameters ∗params, sound4cl_storage_reader reader, sound4cl_storage_reader_free, sound4cl_storage_writer writer, sound4cl_storage_exists exists, sound4cl_storage_getall getall, sound4cl_storage_getall_free getall_free, sound4cl_storage_remove remove, sound4cl_storage_rename rename, int IsReadOnly, void ∗userdata)
- void sound4cl_PresetManager_InformChange (struct sound4cl_CInstance ∗instance, const fs_char ∗relative_path, enum sound4cl_PresetChange_Kind change_kind)
- void sound4cl_SetMetadata (struct sound4cl_CInstance ∗instance, const char ∗key, const char ∗value)
- void sound4cl_SetMetadataMulti (struct sound4cl_CInstance ∗instance, const char ∗∗keyvalue)
- const char ∗∗ sound4cl_GetMetadataInfos (struct sound4cl_CInstance ∗instance)
- void sound4cl_FreeMetadataInfos (struct sound4cl_CInstance ∗instance, const char ∗∗infos)

- void sound4cl_StartUpdateThread (struct sound4cl_CInstance ∗instance, unsigned int port)
- void sound4cl_StopUpdateThread (struct sound4cl_CInstance ∗instance)
- int sound4cl_WaitUpdateThreadReady (struct sound4cl_CInstance ∗instance, int milliseconds)
- void sound4cl_ProcessAudio (struct sound4cl_CInstance ∗instance, const float ∗input, float ∗output)
- void sound4cl_ProcessAudio_Planar (struct sound4cl_CInstance ∗instance, float const ∗const ∗input, float ∗const ∗output)
- float ∗ sound4cl_GetBufferIn (struct sound4cl_CInstance ∗instance)
- float ∗ sound4cl_GetBufferOut (struct sound4cl_CInstance ∗instance)
- unsigned int sound4cl_GetEstimatedDelay (struct sound4cl_CInstance ∗instance)
- const char ∗ sound4cl_GetFormatName (const enum sound4cl_SampleFormat fmt)
- enum sound4cl_SampleFormat sound4cl_GetFormatFromName (const char ∗name)
- unsigned int sound4cl_GetBytesFromFormat (const enum sound4cl_SampleFormat fmt)
- unsigned int sound4cl_GetMaxPacketFrame (struct sound4cl_CInstance ∗instance)
- unsigned int sound4cl_AddAudio (struct sound4cl_CInstance ∗instance, const uint8_t ∗payload, unsigned int nFrame, enum sound4cl_SampleFormat fmt)
- unsigned int sound4cl_AddPadAudio (struct sound4cl_CInstance ∗instance)
- unsigned int sound4cl_GetOutputCount (struct sound4cl_CInstance ∗instance)
- unsigned int sound4cl_GetAudio (struct sound4cl_CInstance ∗instance, uint8_t ∗payload, unsigned int max↩_nFrame, enum sound4cl_SampleFormat fmt)
- void sound4cl_AudioConvertFrom (const uint8_t ∗payload, float ∗output, size_t nSpl, enum sound4cl_SampleFormat fmt)
- void sound4cl_AudioConvertTo (const float ∗input, uint8_t ∗payload, size_t nSpl, enum sound4cl_SampleFormat fmt)
- void sound4cl_StereoToMono (const float ∗input, float ∗output, size_t nFrame)
- void sound4cl_MonoToStereo (const float ∗input, float ∗output, size_t nFrame)
- void sound4cl_StereoToMono_Planar (const float ∗inputL, const float ∗inputR, float ∗output, size_t nFrame)
- void sound4cl_MonoToStereo_Planar (const float ∗input, float ∗outputL, float ∗outputR, size_t nFrame)
- void sound4cl_AudioMonoFromLiveStereo (const uint8_t ∗payload, float ∗output)
- void sound4cl_AudioMonoToLiveStereo (const float ∗input, uint8_t ∗payload)
- struct sound4cl_CClientInstance ∗ sound4cl_NewClient (struct sound4cl_CInstance ∗instance)
- void sound4cl_DeleteClient (struct sound4cl_CClientInstance ∗client)
- const char ∗ sound4cl_ProcessJson (struct sound4cl_CClientInstance ∗client, const char ∗json_str, int ∗need_save)
- void sound4cl_FreeJsonAnswer (const char ∗json_str)
- int sound4cl_SaveState (struct sound4cl_CInstance ∗instance)
- uint64_t sound4cl_Webserver_tcp (unsigned int listenport, unsigned int listenport_secure, const char ∗socket_ip, unsigned int socket_port)
- uint64_t sound4cl_Webserver_tcp2 (unsigned int listenport, unsigned int listenport_secure, const char ∗socket_ip, unsigned int socket_port, const struct sound4cl_CParameters ∗parameters)
- uint64_t sound4cl_Webserver (unsigned int listenport, unsigned int listenport_secure, struct sound4cl_↩CInstance ∗instance)
- int sound4cl_Webserver_Stop (uint64_t id, int timeout_ms)
- int sound4cl_Webserver_Status (uint64_t id)
- void sound4cl_Webserver_SetAppHealth (struct sound4cl_CInstance ∗instance, int httpcode, const char ∗contenttype, const char ∗content)
- void sound4cl_Webserver_GetAppHealth (struct sound4cl_CInstance ∗instance, int ∗httpcode, char ∗∗contenttype, char ∗∗content)
- void sound4cl_Webserver_FreeString (char ∗str)

11.17.1 Macro Definition Documentation

11.17.1.1 fs_strdup

```
#define fs_strdup wcsdup
```

Definition at line 17 of file sound4cl_cdef.h.

11.17.1.2 SOUND4_INVALID_WEBSERVER_ID

```
#define SOUND4_INVALID_WEBSERVER_ID ((uint64_t)-1)
```

Definition at line 62 of file sound4cl_cdef.h.

11.17.1.3 SOUND4_WEBSERVER_HTTP_OK

```
#define SOUND4_WEBSERVER_HTTP_OK (1<<0)
```

Definition at line 63 of file sound4cl_cdef.h.

11.17.1.4 SOUND4_WEBSERVER_HTTPS_OK

```
#define SOUND4_WEBSERVER_HTTPS_OK (1<<1)
```

Definition at line 64 of file sound4cl_cdef.h.

11.17.2 Typedef Documentation

11.17.2.1 fs_char

```
typedef wchar_t fs_char
```

Definition at line 18 of file sound4cl_cdef.h.

11.17.2.2 sound4cl_loggerfn

```
typedef void(* sound4cl_loggerfn) (enum sound4cl_LogSeverity, const char *)
```

Definition at line 102 of file sound4cl_cdef.h.

11.17.2.3 sound4cl_storage_exists

```
typedef int(* sound4cl_storage_exists) (const fs_char *filename, void *userdata)
```

Definition at line 143 of file sound4cl_cdef.h.

11.17.2.4 sound4cl_storage_getall

```
typedef fs_char **(* sound4cl_storage_getall) (void *userdata)
```

Definition at line 144 of file sound4cl_cdef.h.

11.17.2.5 sound4cl_storage_getall_free

```
typedef void(* sound4cl_storage_getall_free) (fs_char **all, void *userdata)
```

Definition at line 145 of file sound4cl_cdef.h.

11.17.2.6 sound4cl_storage_reader

```
typedef char *(* sound4cl_storage_reader) (const fs_char *filename, void *userdata)
```

Definition at line 140 of file sound4cl_cdef.h.

11.17.2.7 sound4cl_storage_reader_free

```
typedef void(* sound4cl_storage_reader_free) (char *content, void *userdata)
```

Definition at line 141 of file sound4cl_cdef.h.

11.17.2.8 sound4cl_storage_remove

```
typedef int(* sound4cl_storage_remove) (const fs_char *filename, void *userdata)
```

Definition at line 146 of file sound4cl_cdef.h.

11.17.2.9 sound4cl_storage_rename

```
typedef int(* sound4cl_storage_rename) (const fs_char *from, const fs_char *to, void *userdata)
```

Definition at line 147 of file sound4cl_cdef.h.

11.17.2.10 sound4cl_storage_writer

```
typedef int(* sound4cl_storage_writer) (const fs_char *filename, const char *content, void
*userdata)
```

Definition at line 142 of file sound4cl_cdef.h.

11.17.3 Enumeration Type Documentation

11.17.3.1 sound4cl_LogSeverity

```
enum sound4cl_LogSeverity
```

Enumerator

sound4cl_none	
sound4cl_fatal	
sound4cl_error	
sound4cl_warning	
sound4cl_info	
sound4cl_verbose	
sound4cl_verbose2	
sound4cl_verbose3	
sound4cl_verbose4	
sound4cl_verbose5	

Definition at line 41 of file sound4cl_cdef.h.

11.17.3.2 sound4cl_PresetChange_Kind

`enum sound4cl_PresetChange_Kind`

Enumerator

change_kind_created	Path has been created.
change_kind_modified	Path has been modified.
change_kind_deleted	Path has been deleted.

Definition at line 57 of file sound4cl_cdef.h.

11.17.3.3 sound4cl_SampleFormat

`enum sound4cl_SampleFormat`

Supported formats for audio I/O

Enumerator

INVALID_FORMAT	Invalid.
S16_LE	16-bit signed integer, little-endian
S16_BE	16-bit signed integer, big-endian
S24_LE	24-bit signed integer, little-endian
S24_BE	24-bit signed integer, big-endian
S32_LE	32-bit signed integer, little-endian
S32_BE	32-bit signed integer, big-endian
F32_LE	32-bit floating-point, little-endian
F32_BE	32-bit floating-point, big-endian
S16_NATIVE	16-bit signed integer, native
S24_NATIVE	24-bit signed integer, native
S32_NATIVE	32-bit signed integer, native
F32_NATIVE	32-bit floating-point, native

Definition at line 69 of file sound4cl_cdef.h.

11.17.4 Function Documentation

11.17.4.1 sound4cl_AddAudio()

```
unsigned int sound4cl_AddAudio (
            struct sound4cl_CInstance * instance,
            const uint8_t * payload,
            unsigned int nFrame,
            enum sound4cl_SampleFormat fmt )
```

11.17.4.2 sound4cl_AddPadAudio()

```
unsigned int sound4cl_AddPadAudio (
            struct sound4cl_CInstance * instance )
```

11.17.4.3 sound4cl_AudioConvertFrom()

```
void sound4cl_AudioConvertFrom (
            const uint8_t * payload,
            float * output,
            size_t nSpl,
            enum sound4cl_SampleFormat fmt )
```

11.17.4.4 sound4cl_AudioConvertTo()

```
void sound4cl_AudioConvertTo (
            const float * input,
            uint8_t * payload,
            size_t nSpl,
            enum sound4cl_SampleFormat fmt )
```

11.17.4.5 sound4cl_AudioMonoFromLiveStereo()

```
void sound4cl_AudioMonoFromLiveStereo (
            const uint8_t * payload,
            float * output )
```

11.17.4.6 sound4cl_AudioMonoToLiveStereo()

```
void sound4cl_AudioMonoToLiveStereo (
            const float * input,
            uint8_t * payload )
```

11.17.4.7 sound4cl_DeleteClient()

```
void sound4cl_DeleteClient (
            struct sound4cl_CClientInstance * client )
```

11.17.4.8 sound4cl_ExitProcess()

```
void sound4cl_ExitProcess (
            struct sound4cl_CInstance * instance )
```

11.17.4.9 sound4cl_FreeBus()

```
void sound4cl_FreeBus (
            struct sound4cl_CBus * bus )
```

11.17.4.10 sound4cl_FreeJsonAnswer()

```
void sound4cl_FreeJsonAnswer (
            const char * json_str )
```

11.17.4.11 sound4cl_FreeMetadataInfos()

```
void sound4cl_FreeMetadataInfos (
            struct sound4cl_CInstance * instance,
            const char ** infos )
```

11.17.4.12 sound4cl_FreeParameters()

```
void sound4cl_FreeParameters (
            struct sound4cl_CParameters * params )
```

11.17.4.13 sound4cl_FreeParameterValue()

```
void sound4cl_FreeParameterValue (
            const char * value )
```

11.17.4.14 sound4cl_GetAudio()

```
unsigned int sound4cl_GetAudio (
            struct sound4cl_CInstance * instance,
            uint8_t * payload,
            unsigned int max_nFrame,
            enum sound4cl_SampleFormat fmt )
```

11.17.4.15 sound4cl_GetAudioInputCount()

```
unsigned int sound4cl_GetAudioInputCount ( )
```

11.17.4.16 sound4cl_GetAudioOutputCount()

```
unsigned int sound4cl_GetAudioOutputCount ( )
```

11.17.4.17 sound4cl_GetBufferIn()

```
float * sound4cl_GetBufferIn (
            struct sound4cl_CInstance * instance )
```

11.17.4.18 sound4cl_GetBufferOut()

```
float * sound4cl_GetBufferOut (
            struct sound4cl_CInstance * instance )
```

11.17.4.19 sound4cl_GetBytesFromFormat()

```
unsigned int sound4cl_GetBytesFromFormat (
            const enum sound4cl_SampleFormat fmt )
```

11.17.4.20 sound4cl_GetChannelCount()

```
unsigned int sound4cl_GetChannelCount ( )
```

11.17.4.21 sound4cl_GetChunkSizeInFrames()

```
unsigned int sound4cl_GetChunkSizeInFrames ( )
```

11.17.4.22 sound4cl_GetEstimatedDelay()

```
unsigned int sound4cl_GetEstimatedDelay (
            struct sound4cl_CInstance * instance )
```

11.17.4.23 sound4cl_GetFormatFromName()

```
enum sound4cl_SampleFormat sound4cl_GetFormatFromName (
            const char * name )
```

11.17.4.24 sound4cl_GetFormatName()

```
const char * sound4cl_GetFormatName (
            const enum sound4cl_SampleFormat fmt )
```

11.17.4.25 sound4cl_GetMaxPacketFrame()

```
unsigned int sound4cl_GetMaxPacketFrame (
            struct sound4cl_CInstance * instance )
```

11.17.4.26 sound4cl_GetMetadataInfos()

```
const char ** sound4cl_GetMetadataInfos (
            struct sound4cl_CInstance * instance )
```

11.17.4.27 sound4cl_GetOutputCount()

```
unsigned int sound4cl_GetOutputCount (
            struct sound4cl_CInstance * instance )
```

11.17.4.28 sound4cl_GetParameter()

```
const char * sound4cl_GetParameter (
            struct sound4cl_CParameters * params,
            const char * name )
```

11.17.4.29 sound4cl_GetPossibleChunkSizeInFrames()

```
unsigned int * sound4cl_GetPossibleChunkSizeInFrames ( )
```

11.17.4.30 sound4cl_GetProcessChunkFrames()

```
unsigned int sound4cl_GetProcessChunkFrames (
            struct sound4cl_CInstance * instance )
```

11.17.4.31 sound4cl_GetSampleRate()

```
unsigned int sound4cl_GetSampleRate ( )
```

11.17.4.32 sound4cl_GetVersion()

```
const char * sound4cl_GetVersion ( )
```

11.17.4.33 sound4cl_InitProcess()

```
struct sound4cl_CInstance * sound4cl_InitProcess (
            const char * LoginKey,
            const char * RadioName,
            const char * Access_Key_ID,
            const char * Access_Key_Secret,
            const char * save_path )
```

11.17.4.34 sound4cl_InitProcess2()

```
struct sound4cl_CInstance * sound4cl_InitProcess2 (
            const char * LoginKey,
            const char * RadioName,
            const char * Access_Key_ID,
            const char * Access_Key_Secret,
            const char * save_path,
            const struct sound4cl_CParameters * parameters )
```

11.17.4.35 sound4cl_InitProcess3()

```
struct sound4cl_CInstance * sound4cl_InitProcess3 (
            const char * LoginKey,
            const char * RadioName,
            const char * Access_Key_ID,
            const char * Access_Key_Secret,
            const char * save_path,
            const struct sound4cl_CParameters * parameters,
            unsigned int frames_per_chunk )
```

11.17.4.36 sound4cl_MonoToStereo()

```
void sound4cl_MonoToStereo (
            const float * input,
            float * output,
            size_t nFrame )
```

11.17.4.37 sound4cl_MonoToStereo_Planar()

```
void sound4cl_MonoToStereo_Planar (
            const float * input,
            float * outputL,
            float * outputR,
            size_t nFrame )
```

11.17.4.38 sound4cl_NewBus()

```
struct sound4cl_CBus * sound4cl_NewBus ( )
```

11.17.4.39 sound4cl_NewClient()

```
struct sound4cl_CClientInstance * sound4cl_NewClient (
            struct sound4cl_CInstance * instance )
```

11.17.4.40 sound4cl_NewParameters()

```
struct sound4cl_CParameters * sound4cl_NewParameters ( )
```

11.17.4.41 sound4cl_PresetManager_InformChange()

```
void sound4cl_PresetManager_InformChange (
            struct sound4cl_CInstance * instance,
            const fs_char * relative_path,
            enum sound4cl_PresetChange_Kind change_kind )
```

11.17.4.42 sound4cl_ProcessAudio()

```
void sound4cl_ProcessAudio (
            struct sound4cl_CInstance * instance,
            const float * input,
            float * output )
```

11.17.4.43 sound4cl_ProcessAudio_Planar()

```
void sound4cl_ProcessAudio_Planar (
            struct sound4cl_CInstance * instance,
            float const *const * input,
            float *const * output )
```

11.17.4.44 sound4cl_ProcessJson()

```
const char * sound4cl_ProcessJson (
            struct sound4cl_CClientInstance * client,
            const char * json_str,
            int * need_save )
```

11.17.4.45 sound4cl_SaveState()

```
int sound4cl_SaveState (
            struct sound4cl_CInstance * instance )
```

11.17.4.46 sound4cl_SetInstanceBus()

```
void sound4cl_SetInstanceBus (
            struct sound4cl_CParameters * params,
            struct sound4cl_CBus * bus )
```

11.17.4.47 sound4cl_SetLoggerCallback()

```
void sound4cl_SetLoggerCallback (
            sound4cl_loggerfn logger )
```

11.17.4.48 sound4cl_SetLogSeverity()

```
void sound4cl_SetLogSeverity (
            enum sound4cl_LogSeverity severity )
```

11.17.4.49 sound4cl_SetMetadata()

```
void sound4cl_SetMetadata (
            struct sound4cl_CInstance * instance,
            const char * key,
            const char * value )
```

11.17.4.50 sound4cl_SetMetadataMulti()

```
void sound4cl_SetMetadataMulti (
            struct sound4cl_CInstance * instance,
            const char ** keyvalue )
```

11.17.4.51 sound4cl_SetParameter()

```
void sound4cl_SetParameter (
            struct sound4cl_CParameters * params,
            const char * name,
            const char * value )
```

11.17.4.52 sound4cl_SetPresetManager()

```
void sound4cl_SetPresetManager (
            struct sound4cl_CParameters * params,
            sound4cl_storage_reader reader,
            sound4cl_storage_reader_free ,
            sound4cl_storage_writer writer,
            sound4cl_storage_exists exists,
            sound4cl_storage_getall getall,
            sound4cl_storage_getall_free getall_free,
            sound4cl_storage_remove remove,
            sound4cl_storage_rename rename,
            int IsReadOnly,
            void * userdata )
```

11.17.4.53 sound4cl_SOUND4_GetProcessInfo()

```
const struct sound4cl_SOUND4_ProcessInfo * sound4cl_SOUND4_GetProcessInfo ( )
```

11.17.4.54 sound4cl_StartUpdateThread()

```
void sound4cl_StartUpdateThread (
            struct sound4cl_CInstance * instance,
            unsigned int port )
```

11.17.4.55 sound4cl_StereoToMono()

```
void sound4cl_StereoToMono (
            const float * input,
            float * output,
            size_t nFrame )
```

11.17.4.56 sound4cl_StereoToMono_Planar()

```
void sound4cl_StereoToMono_Planar (
            const float * inputL,
            const float * inputR,
            float * output,
            size_t nFrame )
```

11.17.4.57 sound4cl_StopUpdateThread()

```
void sound4cl_StopUpdateThread (
            struct sound4cl_CInstance * instance )
```

11.17.4.58 sound4cl_TerminateProcess()

```
int sound4cl_TerminateProcess (
            struct sound4cl_CInstance * instance )
```

11.17.4.59 sound4cl_WaitUpdateThreadReady()

```
int sound4cl_WaitUpdateThreadReady (
            struct sound4cl_CInstance * instance,
            int milliseconds )
```

11.17.4.60 sound4cl_Webserver()

```
uint64_t sound4cl_Webserver (
            unsigned int listenport,
            unsigned int listenport_secure,
            struct sound4cl_CInstance * instance )
```

11.17.4.61 sound4cl_Webserver_FreeString()

```
void sound4cl_Webserver_FreeString (
            char * str )
```

11.17.4.62 sound4cl_Webserver_GetAppHealth()

```
void sound4cl_Webserver_GetAppHealth (
            struct sound4cl_CInstance * instance,
            int * httpcode,
            char ** contenttype,
            char ** content )
```

11.17.4.63 sound4cl_Webserver_SetAppHealth()

```
void sound4cl_Webserver_SetAppHealth (
            struct sound4cl_CInstance * instance,
            int httpcode,
            const char * contenttype,
            const char * content )
```

11.17.4.64 sound4cl_Webserver_Status()

```
int sound4cl_Webserver_Status (
            uint64_t id )
```

11.17.4.65 sound4cl_Webserver_Stop()

```
int sound4cl_Webserver_Stop (
            uint64_t id,
            int timeout_ms )
```

11.17.4.66 sound4cl_Webserver_tcp()

```
uint64_t sound4cl_Webserver_tcp (
            unsigned int listenport,
            unsigned int listenport_secure,
            const char * socket_ip,
            unsigned int socket_port )
```

11.17.4.67 sound4cl_Webserver_tcp2()

```
uint64_t sound4cl_Webserver_tcp2 (
            unsigned int listenport,
            unsigned int listenport_secure,
            const char * socket_ip,
            unsigned int socket_port,
            const struct sound4cl_CParameters * parameters )
```

11.18 sound4cl_cdef.h

Go to the documentation of this file.

```
00001
00006 #pragma once
00007
00008 #include <stdint.h>
00009 #ifdef __unix__
00010     #include <sys/types.h>
00011 #endif
00012
00013 #ifdef _WIN32
00014     #include <stringapiset.h>
00015     #include <wchar.h>
00017     #define fs_strdup wcsdup
00018     typedef wchar_t fs_char;
00019     #ifdef _MSC_VER
00020         #define __BYTE_ORDER__  REG_DWORD
00021         #define __ORDER_LITTLE_ENDIAN__ REG_DWORD_LITTLE_ENDIAN
00022         #define __ORDER_BIG_ENDIAN__    REG_DWORD_BIG_ENDIAN
00023     #endif
00024 #else // !_WIN32
00026     #define fs_strdup strdup
00027     typedef char fs_char;
00028 #endif // !_WIN32
00029
00030 #ifdef __cplusplus
00031 extern "C" {
00032 #endif // __cplusplus
00033
00034 struct sound4cl_SOUND4_ProcessInfo {
00035     size_t struct_size;
00036     const char *name;
00037     const char *prefix;
00038     const char *shortname;
00039     const char *version;
00040 };
00041 enum sound4cl_LogSeverity {
00042     sound4cl_none = 0,
00043     sound4cl_fatal = 1,
00044     sound4cl_error = 2,
00045     sound4cl_warning = 3,
00046     sound4cl_info = 4,
00047     sound4cl_verbose = 5,
00048     sound4cl_verbose2 = 6,
00049     sound4cl_verbose3 = 7,
00050     sound4cl_verbose4 = 8,
00051     sound4cl_verbose5 = 9,
00052 };
00053 struct sound4cl_CInstance;
00054 struct sound4cl_CParameters;
00055 struct sound4cl_CBus;
00056 struct sound4cl_CClientInstance;
00057 enum sound4cl_PresetChange_Kind {
00058     change_kind_created = 1,
00059     change_kind_modified   ,
00060     change_kind_deleted    ,
00061 };
00062 #define SOUND4_INVALID_WEBSERVER_ID            ((uint64_t)-1)
00063 #define SOUND4_WEBSERVER_HTTP_OK               (1«0)
00064 #define SOUND4_WEBSERVER_HTTPS_OK              (1«1)
00065
00069 enum sound4cl_SampleFormat {
00070     INVALID_FORMAT=0,
00071     S16_LE,
00072     S16_BE,
00073     S24_LE,
00074     S24_BE,
00075     S32_LE,
00076     S32_BE,
00077     F32_LE,
00078     F32_BE,
00079
00080     // Native definitions, only links to the physical ones
00081     #if __BYTE_ORDER__ == __ORDER_LITTLE_ENDIAN__
00082         S16_NATIVE=S16_LE,
00083         S24_NATIVE=S24_LE,
00084         S32_NATIVE=S32_LE,
00085         F32_NATIVE=F32_LE,
00086     #else
00087         S16_NATIVE=S16_BE,
00088         S24_NATIVE=S24_BE,
00089         S32_NATIVE=S32_BE,
00090         F32_NATIVE=F32_BE,
00091     #endif
```

```
};

const struct sound4cl_SOUND4_ProcessInfo* sound4cl_SOUND4_GetProcessInfo();
const char *sound4cl_GetVersion();
unsigned int sound4cl_GetChunkSizeInFrames();
unsigned int* sound4cl_GetPossibleChunkSizeInFrames();
unsigned int sound4cl_GetChannelCount();
unsigned int sound4cl_GetAudioInputCount();
unsigned int sound4cl_GetAudioOutputCount();
unsigned int sound4cl_GetSampleRate();
typedef void (*sound4cl_loggerfn) (enum sound4cl_LogSeverity, const char *);
void sound4cl_SetLoggerCallback( sound4cl_loggerfn logger );
void sound4cl_SetLogSeverity( enum sound4cl_LogSeverity severity );
struct sound4cl_CParameters *sound4cl_NewParameters();
void sound4cl_FreeParameters(struct sound4cl_CParameters *params);
void sound4cl_SetParameter(struct sound4cl_CParameters *params, const char *name, const char *value);
const char *sound4cl_GetParameter(struct sound4cl_CParameters *params, const char *name);
void sound4cl_FreeParameterValue(const char *value);
struct sound4cl_CInstance *sound4cl_InitProcess(
        const char *LoginKey,
        const char *RadioName,
        const char *Access_Key_ID,
        const char *Access_Key_Secret,
        const char *save_path
    );
struct sound4cl_CInstance *sound4cl_InitProcess2(
        const char *LoginKey,
        const char *RadioName,
        const char *Access_Key_ID,
        const char *Access_Key_Secret,
        const char *save_path,
        const struct sound4cl_CParameters *parameters
    );
struct sound4cl_CInstance *sound4cl_InitProcess3(
        const char *LoginKey,
        const char *RadioName,
        const char *Access_Key_ID,
        const char *Access_Key_Secret,
        const char *save_path,
        const struct sound4cl_CParameters *parameters,
        unsigned int frames_per_chunk
    );
unsigned int sound4cl_GetProcessChunkFrames(struct sound4cl_CInstance *instance);
int sound4cl_TerminateProcess(struct sound4cl_CInstance *instance);
void sound4cl_ExitProcess(struct sound4cl_CInstance *instance);
struct sound4cl_CBus* sound4cl_NewBus();
void sound4cl_FreeBus(struct sound4cl_CBus *bus);
void sound4cl_SetInstanceBus(struct sound4cl_CParameters *params, struct sound4cl_CBus *bus);
typedef char * (*sound4cl_storage_reader) (const fs_char *filename, void* userdata);
typedef void (*sound4cl_storage_reader_free) (char *content, void* userdata);
typedef int (*sound4cl_storage_writer) (const fs_char *filename, const char *content, void* userdata);
typedef int (*sound4cl_storage_exists) (const fs_char *filename, void* userdata);
typedef fs_char** (*sound4cl_storage_getall) (void* userdata);
typedef void (*sound4cl_storage_getall_free) (fs_char**all, void* userdata);
typedef int (*sound4cl_storage_remove) (const fs_char *filename, void* userdata);
typedef int (*sound4cl_storage_rename) (const fs_char *from, const fs_char *to, void* userdata);
void sound4cl_SetPresetManager(struct sound4cl_CParameters *params
    , sound4cl_storage_reader reader, sound4cl_storage_reader_free
    , sound4cl_storage_writer writer
    , sound4cl_storage_exists exists
    , sound4cl_storage_getall getall, sound4cl_storage_getall_free getall_free
    , sound4cl_storage_remove remove
    , sound4cl_storage_rename rename
    , int IsReadOnly
    , void* userdata
    );
void sound4cl_PresetManager_InformChange(struct sound4cl_CInstance *instance, const fs_char
    *relative_path, enum sound4cl_PresetChange_Kind change_kind);
void sound4cl_SetMetadata(struct sound4cl_CInstance *instance, const char* key, const char* value);
void sound4cl_SetMetadataMulti(struct sound4cl_CInstance *instance, const char** keyvalue);
const char** sound4cl_GetMetadataInfos(struct sound4cl_CInstance *instance);
void sound4cl_FreeMetadataInfos(struct sound4cl_CInstance *instance, const char** infos);
void sound4cl_StartUpdateThread(struct sound4cl_CInstance *instance, unsigned int port);
void sound4cl_StopUpdateThread(struct sound4cl_CInstance *instance);
int sound4cl_WaitUpdateThreadReady(struct sound4cl_CInstance *instance, int milliseconds);
void sound4cl_ProcessAudio(struct sound4cl_CInstance *instance, const float *input, float *output );
void sound4cl_ProcessAudio_Planar(struct sound4cl_CInstance *instance
    , float const * const *input
    , float * const *output);
float *sound4cl_GetBufferIn(struct sound4cl_CInstance *instance);
float *sound4cl_GetBufferOut(struct sound4cl_CInstance *instance);
unsigned int sound4cl_GetEstimatedDelay(struct sound4cl_CInstance *instance);
const char *sound4cl_GetFormatName(const enum sound4cl_SampleFormat fmt);
enum sound4cl_SampleFormat sound4cl_GetFormatFromName(const char *name);
unsigned int sound4cl_GetBytesFromFormat(const enum sound4cl_SampleFormat fmt);
unsigned int sound4cl_GetMaxPacketFrame(struct sound4cl_CInstance *instance);
unsigned int sound4cl_AddAudio(struct sound4cl_CInstance *instance, const uint8_t *payload, unsigned
```

```
int nFrame, enum sound4cl_SampleFormat fmt );
unsigned int sound4cl_AddPadAudio(struct sound4cl_CInstance *instance);
unsigned int sound4cl_GetOutputCount(struct sound4cl_CInstance *instance);
unsigned int sound4cl_GetAudio(struct sound4cl_CInstance *instance, uint8_t *payload, unsigned int max_nFrame, enum sound4cl_SampleFormat fmt );
void sound4cl_AudioConvertFrom(const uint8_t *payload, float *output, size_t nSpl, enum sound4cl_SampleFormat fmt);
void sound4cl_AudioConvertTo(const float *input, uint8_t *payload, size_t nSpl, enum sound4cl_SampleFormat fmt);
void sound4cl_StereoToMono(const float *input, float *output, size_t nFrame);
void sound4cl_MonoToStereo(const float *input, float *output, size_t nFrame);
void sound4cl_StereoToMono_Planar(const float *inputL, const float *inputR, float *output, size_t nFrame);
void sound4cl_MonoToStereo_Planar(const float *input, float *outputL, float *outputR, size_t nFrame);
void sound4cl_AudioMonoFromLiveStereo(const uint8_t *payload, float *output);
void sound4cl_AudioMonoToLiveStereo(const float *input, uint8_t *payload);
struct sound4cl_CClientInstance *sound4cl_NewClient(struct sound4cl_CInstance *instance);
void sound4cl_DeleteClient(struct sound4cl_CClientInstance *client);
const char *sound4cl_ProcessJson(struct sound4cl_CClientInstance *client, const char *json_str, int *need_save);
void sound4cl_FreeJsonAnswer(const char *json_str);
int sound4cl_SaveState(struct sound4cl_CInstance *instance);
uint64_t sound4cl_Webserver_tcp(unsigned int listenport, unsigned int listenport_secure, const char *socket_ip, unsigned int socket_port);
uint64_t sound4cl_Webserver_tcp2(unsigned int listenport, unsigned int listenport_secure, const char *socket_ip, unsigned int socket_port, const struct sound4cl_CParameters *parameters);
uint64_t sound4cl_Webserver(unsigned int listenport, unsigned int listenport_secure, struct sound4cl_CInstance *instance);
int sound4cl_Webserver_Stop(uint64_t id, int timeout_ms);
int sound4cl_Webserver_Status(uint64_t id);
void sound4cl_Webserver_SetAppHealth(struct sound4cl_CInstance *instance, int httpcode, const char* contenttype, const char* content);
void sound4cl_Webserver_GetAppHealth(struct sound4cl_CInstance *instance, int* httpcode, char** contenttype, char** content);
void sound4cl_Webserver_FreeString(char* str);

#ifdef __cplusplus
} // extern "C"
#endif // __cplusplus
```

Index

~CBus
sound4::CBus, 81
~CClient
sound4::CInstance::CClient, 83
sound4::cloudx1::CInstance::CClient, 84
sound4::cloudx1::dyn::CInstance::CClient, 86
~CDynLoader
sound4::cloudx1::dyn::helper::CDynLoader, 99
sound4::helper::CDynLoader, 102
~CInstance
sound4::CInstance, 105
sound4::cloudx1::CInstance, 115
sound4::cloudx1::dyn::CInstance, 124
~CPresetLoader
sound4::cloudx1::CPresetLoader, 134
sound4::cloudx1::dyn::CPresetLoader, 136
sound4::CPresetLoader, 138
~MyPresetManager
MyPresetManager, 161

AddAudio
sound4::CInstance, 105
sound4::cloudx1::CInstance, 115
sound4::cloudx1::dyn::CDynLib, 89
sound4::cloudx1::dyn::CInstance, 124
AddPadAudio
sound4::cloudx1::dyn::CDynLib, 89
Audio convert helpers, 47
cloudx1_AudioConvertFrom, 48
cloudx1_AudioConvertTo, 48
cloudx1_AudioMonoFromLiveStereo, 48
cloudx1_AudioMonoToLiveStereo, 49
cloudx1_MonoToStereo, 49
cloudx1_MonoToStereo_Planar, 49
cloudx1_StereoToMono, 50
cloudx1_StereoToMono_Planar, 50
Audio managing (any audio), 43
cloudx1_AddAudio, 44
cloudx1_AddPadAudio, 45
cloudx1_GetAudio, 45
cloudx1_GetBytesFromFormat, 46
cloudx1_GetFormatFromName, 46
cloudx1_GetFormatName, 46
cloudx1_GetMaxPacketFrame, 47
cloudx1_GetOutputCount, 47
cloudx1_SampleFormat, 44
F32_BE, 44
F32_LE, 44
F32_NATIVE, 44
INVALID_FORMAT, 44
S16_BE, 44
S16_LE, 44
S16_NATIVE, 44
S24_BE, 44
S24_LE, 44
S24_NATIVE, 44
S32_BE, 44
S32_LE, 44
S32_NATIVE, 44
AudioConvertFrom
sound4::cloudx1::dyn::CDynLib, 89
sound4::CProcessor, 141
AudioConvertTo
sound4::cloudx1::dyn::CDynLib, 90
sound4::CProcessor, 141
AudioMonoFromLiveStereo
sound4::cloudx1::dyn::CDynLib, 90
sound4::CProcessor, 142
AudioMonoToLiveStereo
sound4::cloudx1::dyn::CDynLib, 90
sound4::CProcessor, 142

CBus
sound4::CBus, 81
sound4::CProcessor, 147
CClient
sound4::CInstance::CClient, 82
sound4::cloudx1::CInstance::CClient, 84
sound4::cloudx1::dyn::CInstance::CClient, 86
CDynLib
sound4::cloudx1::dyn::CDynLib, 88
CDynLoader
sound4::cloudx1::dyn::helper::CDynLoader, 99
sound4::helper::CDynLoader, 102
change_kind_created
Custom preset managagement, 36
sound4cl_cdef.h, 245
change_kind_deleted
Custom preset managagement, 36
sound4cl_cdef.h, 245
change_kind_modified
Custom preset managagement, 36
sound4cl_cdef.h, 245
CHANNEL_COUNT
sound4.x1.cloud-pipe.cpp, 184
CHUNK_SIZE
sound4.x1.cloud-pipe.cpp, 184
ChunkFrames
sound4::cloudx1, 75
sound4::cloudx1::dyn, 77

CInstance
sound4::CInstance, 105
sound4::cloudx1::CInstance, 115
sound4::cloudx1::dyn::CInstance, 124
sound4::CProcessor, 147
Client's JSon config interfacing, 51
cloudx1_DeleteClient, 51
cloudx1_FreeJsonAnswer, 51
cloudx1_NewClient, 52
cloudx1_ProcessJson, 52
cloudx1_SaveState, 53
Close
sound4::cloudx1::dyn::helper::CDynLoader, 100
sound4::helper::CDynLoader, 102
cloudx1_AddAudio
Audio managing (any audio), 44
cloudx1_AddPadAudio
Audio managing (any audio), 45
CLOUDX1_AUDIO_INPUT_COUNT
Global setup, 21
CLOUDX1_AUDIO_OUTPUT_COUNT
Global setup, 21
cloudx1_AudioConvertFrom
Audio convert helpers, 48
cloudx1_AudioConvertTo
Audio convert helpers, 48
CLOUDX1_AUDIOFRAME_COUNT
Global setup, 21
cloudx1_AudioMonoFromLiveStereo
Audio convert helpers, 48
cloudx1_AudioMonoToLiveStereo
Audio convert helpers, 49
cloudx1_CClientInstance, 132
CLOUDX1_CHANNEL_COUNT
Global setup, 22
cloudx1_CInstance, 133
cloudx1_CParameters, 133
CLOUDX1_DECL
sound4.x1.cloud.h, 196
cloudx1_DeleteClient
Client's JSon config interfacing, 51
cloudx1_ExitProcess
Process creation/destruction, 27
cloudx1_FreeJsonAnswer
Client's JSon config interfacing, 51
cloudx1_FreeMetadataInfos
Metadata Management, 38
cloudx1_FreeParameters
Process creation/destruction, 28
cloudx1_FreeParameterValue
Process creation/destruction, 28
cloudx1_GetAudio
Audio managing (any audio), 45
cloudx1_GetAudioInputCount
Global setup, 23
cloudx1_GetAudioOutputCount
Global setup, 23
cloudx1_GetBufferIn
Direct processing, 41
cloudx1_GetBufferOut
Direct processing, 41
cloudx1_GetBytesFromFormat
Audio managing (any audio), 46
cloudx1_GetChannelCount
Global setup, 23
cloudx1_GetChunkSizeInFrames
Global setup, 24
cloudx1_GetEstimatedDelay
Direct processing, 42
cloudx1_GetFormatFromName
Audio managing (any audio), 46
cloudx1_GetFormatName
Audio managing (any audio), 46
cloudx1_GetMaxPacketFrame
Audio managing (any audio), 47
cloudx1_GetMetadataInfos
Metadata Management, 38
cloudx1_GetOutputCount
Audio managing (any audio), 47
cloudx1_GetParameter
Process creation/destruction, 28
cloudx1_GetPossibleChunkSizeInFrames
Global setup, 24
cloudx1_GetProcessChunkFrames
Process creation/destruction, 28
cloudx1_GetSampleRate
Global setup, 24
cloudx1_GetVersion
Global setup, 25
CLOUDX1_HAS_CLOUDBUS
sound4.x1.cloud.h, 196
CLOUDX1_HAS_WEBSERVER
sound4.x1.cloud.h, 197
cloudx1_InitProcess
Process creation/destruction, 29
cloudx1_InitProcess2
Process creation/destruction, 29
cloudx1_InitProcess3
Process creation/destruction, 29
cloudx1_loggerfn
Global setup, 22
cloudx1_LogSeverity
Global setup, 22
cloudx1_MonoToStereo
Audio convert helpers, 49
cloudx1_MonoToStereo_Planar
Audio convert helpers, 49
cloudx1_NewClient
Client's JSon config interfacing, 52
cloudx1_NewParameters
Process creation/destruction, 31
cloudx1_PresetChange_Kind
Custom preset managagement, 36
cloudx1_PresetManager_InformChange
Custom preset managagement, 36
cloudx1_ProcessAudio

Direct processing, 42
cloudx1_ProcessAudio_Planar
Direct processing, 43
cloudx1_ProcessJson
Client's JSon config interfacing, 52
CLOUDX1_SAMPLE_RATE
Global setup, 22
cloudx1_SampleFormat
Audio managing (any audio), 44
cloudx1_SaveState
Client's JSon config interfacing, 53
cloudx1_SetLoggerCallback
Global setup, 25
cloudx1_SetLogSeverity
Global setup, 25
cloudx1_SetMetadata
Metadata Management, 38
cloudx1_SetMetadataMulti
Metadata Management, 39
cloudx1_SetParameter
Process creation/destruction, 31
cloudx1_SetPresetManager
Custom preset managagement, 37
cloudx1_StartUpdateThread
Update Management, 40
cloudx1_StereoToMono
Audio convert helpers, 50
cloudx1_StereoToMono_Planar
Audio convert helpers, 50
cloudx1_StopUpdateThread
Update Management, 40
cloudx1_storage_exists
Custom preset managagement, 33
cloudx1_storage_getall
Custom preset managagement, 33
cloudx1_storage_getall_free
Custom preset managagement, 34
cloudx1_storage_reader
Custom preset managagement, 34
cloudx1_storage_reader_free
Custom preset managagement, 34
cloudx1_storage_remove
Custom preset managagement, 35
cloudx1_storage_rename
Custom preset managagement, 35
cloudx1_storage_writer
Custom preset managagement, 35
cloudx1_TerminateProcess
Process creation/destruction, 31
cloudx1_WaitUpdateThreadReady
Update Management, 40
cloudx1_Webserver
Web server, 61
cloudx1_Webserver_FreeString
Web server, 61
cloudx1_Webserver_GetAppHealth
Web server, 62
cloudx1_Webserver_SetAppHealth
Web server, 62
cloudx1_Webserver_Status
Web server, 62
cloudx1_Webserver_Stop
Web server, 63
cloudx1_Webserver_tcp
Web server, 63
cloudx1_Webserver_tcp2
Web server, 64
CPresetLoader
sound4::cloudx1::CPresetLoader, 134
sound4::cloudx1::dyn::CPresetLoader, 136
sound4::CPresetLoader, 138
CProcessor
sound4::CProcessor, 141
Create
sound4::CInstance, 105
sound4::cloudx1::CInstance, 115
sound4::cloudx1::dyn::CInstance, 124
Custom preset managagement, 32
change_kind_created, 36
change_kind_deleted, 36
change_kind_modified, 36
cloudx1_PresetChange_Kind, 36
cloudx1_PresetManager_InformChange, 36
cloudx1_SetPresetManager, 37
cloudx1_storage_exists, 33
cloudx1_storage_getall, 33
cloudx1_storage_getall_free, 34
cloudx1_storage_reader, 34
cloudx1_storage_reader_free, 34
cloudx1_storage_remove, 35
cloudx1_storage_rename, 35
cloudx1_storage_writer, 35
fs_char, 36

DeleteClient
sound4::cloudx1::dyn::CDynLib, 90
Deprecated List, 3
Direct processing, 41
cloudx1_GetBufferIn, 41
cloudx1_GetBufferOut, 41
cloudx1_GetEstimatedDelay, 42
cloudx1_ProcessAudio, 42
cloudx1_ProcessAudio_Planar, 43
dyn, 71
DynFunc_t
sound4::cloudx1::dyn::helper, 79
sound4::helper, 80
DynFuncHolder
sound4::cloudx1::dyn::helper::DynFuncHolder< T >, 157
sound4::helper::DynFuncHolder< T >, 159
DynLib_t
sound4::cloudx1::dyn::helper, 79
sound4::helper, 80

Environment variables and parameters, 19
error

Global setup, 23
sound4, 72
Exists
MyPresetManager, 161
sound4::cloudx1::CPresetLoader, 134
sound4::cloudx1::dyn::CPresetLoader, 136
sound4::CPresetLoader, 138
ExitProcess
sound4::cloudx1::dyn::CDynLib, 90

F32_BE
Audio managing (any audio), 44
sound4cl_cdef.h, 245
F32_LE
Audio managing (any audio), 44
sound4cl_cdef.h, 245
F32_NATIVE
Audio managing (any audio), 44
sound4cl_cdef.h, 245
fatal
Global setup, 23
sound4, 72
fnAddAudio
sound4::CProcessor, 147
fnAddPadAudio
sound4::CProcessor, 147
fnAudioConvertFrom
sound4::CProcessor, 147
fnAudioConvertTo
sound4::CProcessor, 148
fnAudioMonoFromLiveStereo
sound4::CProcessor, 148
fnAudioMonoToLiveStereo
sound4::CProcessor, 148
fnDeleteClient
sound4::CProcessor, 148
fnExitProcess
sound4::CProcessor, 148
fnFreeBus
sound4::CProcessor, 148
fnFreeJsonAnswer
sound4::CProcessor, 148
fnFreeMetadataInfos
sound4::CProcessor, 149
fnFreeParameters
sound4::CProcessor, 149
fnFreeParameterValue
sound4::CProcessor, 149
fnGetAudio
sound4::CProcessor, 149
fnGetAudioInputCount
sound4::CProcessor, 149
fnGetAudioOutputCount
sound4::CProcessor, 149
fnGetBufferIn
sound4::CProcessor, 149
fnGetBufferOut
sound4::CProcessor, 150
fnGetBytesFromFormat
sound4::CProcessor, 150
fnGetChannelCount
sound4::CProcessor, 150
fnGetChunkSizeInFrames
sound4::CProcessor, 150
fnGetEstimatedDelay
sound4::CProcessor, 150
fnGetFormatFromName
sound4::CProcessor, 150
fnGetFormatName
sound4::CProcessor, 150
fnGetMaxPacketFrame
sound4::CProcessor, 151
fnGetMetadataInfos
sound4::CProcessor, 151
fnGetOutputCount
sound4::CProcessor, 151
fnGetParameter
sound4::CProcessor, 151
fnGetPossibleChunkSizeInFrames
sound4::CProcessor, 151
fnGetProcessChunkFrames
sound4::CProcessor, 151
fnGetSampleRate
sound4::CProcessor, 151
fnGetVersion
sound4::CProcessor, 152
fnInitProcess
sound4::CProcessor, 152
fnInitProcess2
sound4::CProcessor, 152
fnInitProcess3
sound4::CProcessor, 152
fnMonoToStereo
sound4::CProcessor, 152
fnMonoToStereo_Planar
sound4::CProcessor, 152
fnNewBus
sound4::CProcessor, 152
fnNewClient
sound4::CProcessor, 153
fnNewParameters
sound4::CProcessor, 153
fnPresetManager_InformChange
sound4::CProcessor, 153
fnProcessAudio
sound4::CProcessor, 153
fnProcessAudio_Planar
sound4::CProcessor, 153
fnProcessJson
sound4::CProcessor, 153
fnSaveState
sound4::CProcessor, 153
fnSetInstanceBus
sound4::CProcessor, 154
fnSetLoggerCallback
sound4::CProcessor, 154
fnSetLogSeverity

sound4::CProcessor, 154
fnSetMetadata
sound4::CProcessor, 154
fnSetMetadataMulti
sound4::CProcessor, 154
fnSetParameter
sound4::CProcessor, 154
fnSetPresetManager
sound4::CProcessor, 154
fnStartUpdateThread
sound4::CProcessor, 155
fnStereoToMono
sound4::CProcessor, 155
fnStereoToMono_Planar
sound4::CProcessor, 155
fnStopUpdateThread
sound4::CProcessor, 155
fnTerminateProcess
sound4::CProcessor, 155
fnWaitUpdateThreadReady
sound4::CProcessor, 155
fnWebserver
sound4::CProcessor, 155
fnWebserver_FreeString
sound4::CProcessor, 156
fnWebserver_GetAppHealth
sound4::CProcessor, 156
fnWebserver_SetAppHealth
sound4::CProcessor, 156
fnWebserver_Status
sound4::CProcessor, 156
fnWebserver_Stop
sound4::CProcessor, 156
fnWebserver_tcp
sound4::CProcessor, 156
fnWebserver_tcp2
sound4::CProcessor, 156
format
sound4::cloudx1::dyn::helper::SampleFormat< float >, 167
sound4::cloudx1::dyn::helper::SampleFormat< int16_t >, 168
sound4::cloudx1::dyn::helper::SampleFormat< int32_t >, 170
sound4::cloudx1::helper::SampleFormat< float >, 167
sound4::cloudx1::helper::SampleFormat< int16_t >, 169
sound4::cloudx1::helper::SampleFormat< int32_t >, 171
sound4::helper::SampleFormat< float >, 168
sound4::helper::SampleFormat< int16_t >, 169
sound4::helper::SampleFormat< int32_t >, 171
FreeJsonAnswer
sound4::cloudx1::dyn::CDynLib, 90
FreeMetadataInfos
sound4::cloudx1::dyn::CDynLib, 90
FreeParameters
sound4::cloudx1::dyn::CDynLib, 91
FreeParameterValue
sound4::cloudx1::dyn::CDynLib, 91
fs_char
Custom preset managagement, 36
sound4cl_cdef.h, 243
fs_strdup
sound4.x1.cloud.hpp, 202
sound4.x1.cloud_dyn.hpp, 212
sound4cl_cdef.h, 242

Get
sound4::CBus, 82
GetAll
MyPresetManager, 161
sound4::cloudx1::CPresetLoader, 134
sound4::cloudx1::dyn::CPresetLoader, 136
sound4::CPresetLoader, 138
GetAudio
sound4::CInstance, 106
sound4::cloudx1::CInstance, 116
sound4::cloudx1::dyn::CDynLib, 91
sound4::cloudx1::dyn::CInstance, 125
GetAudioInputCount
sound4::cloudx1::dyn::CDynLib, 91
sound4::CProcessor, 142
GetAudioOutputCount
sound4::cloudx1::dyn::CDynLib, 91
sound4::CProcessor, 142
GetBufferIn
sound4::CInstance, 106
sound4::cloudx1::CInstance, 116
sound4::cloudx1::dyn::CDynLib, 91
sound4::cloudx1::dyn::CInstance, 125
GetBufferOut
sound4::CInstance, 106
sound4::cloudx1::CInstance, 116
sound4::cloudx1::dyn::CDynLib, 91
sound4::cloudx1::dyn::CInstance, 125
GetBytesFromFormat
sound4::cloudx1::dyn::CDynLib, 92
sound4::CProcessor, 142
GetChannelCount
sound4::cloudx1::dyn::CDynLib, 92
sound4::CProcessor, 143
GetChunkFrames
sound4::CInstance, 106
sound4::cloudx1::CInstance, 116
sound4::cloudx1::dyn::CInstance, 126
GetChunkSizeInFrames
sound4::cloudx1::dyn::CDynLib, 92
sound4::CProcessor, 143
GetEnv
sound4.x1.cloud-pipe-cxx.cpp, 175
sound4.x1.cloud-pipe-dyn.cpp, 179
sound4cl-pipe.cpp, 189
GetEstimatedDelay
sound4::CInstance, 107
sound4::cloudx1::CInstance, 117

sound4::cloudx1::dyn::CDynLib, 92
sound4::cloudx1::dyn::CInstance, 126
GetFormatFromName
sound4::cloudx1::dyn::CDynLib, 92
sound4::CProcessor, 143
GetFormatName
sound4::cloudx1::dyn::CDynLib, 92
sound4::CProcessor, 144
GetMaxPacketFrame
sound4::cloudx1::dyn::CDynLib, 92
GetMetadataInfos
sound4::CInstance, 107
sound4::cloudx1::CInstance, 117
sound4::cloudx1::dyn::CDynLib, 93
sound4::cloudx1::dyn::CInstance, 126
GetOutputCount
sound4::cloudx1::dyn::CDynLib, 93
GetParam
sound4::CInstance, 107
sound4::cloudx1::CInstance, 117
sound4::cloudx1::dyn::CInstance, 126
GetParameter
sound4::cloudx1::dyn::CDynLib, 93
GetPossibleChunkSizeInFrames
sound4::cloudx1::dyn::CDynLib, 93
sound4::CProcessor, 144
GetPrefixSymbol
sound4::CProcessor, 144
GetProcessChunkFrames
sound4::cloudx1::dyn::CDynLib, 93
GetSampleRate
sound4::cloudx1::dyn::CDynLib, 93
sound4::CProcessor, 145
GetSymbol
sound4::cloudx1::dyn::helper::CDynLoader, 100
sound4::helper::CDynLoader, 102
GetSymbol_safe
sound4::cloudx1::dyn::helper::CDynLoader, 100
sound4::helper::CDynLoader, 102
GetThisLibraryPath
sound4::cloudx1::dyn::helper::CDynLoader, 100
sound4::helper::CDynLoader, 102
GetVersion
sound4::cloudx1::dyn::CDynLib, 93
sound4::CProcessor, 145
GetWebServerAppHealth
sound4::CInstance, 107
sound4::cloudx1::CInstance, 117
sound4::cloudx1::dyn::CInstance, 127
Global setup, 20
CLOUDX1_AUDIO_INPUT_COUNT, 21
CLOUDX1_AUDIO_OUTPUT_COUNT, 21
CLOUDX1_AUDIOFRAME_COUNT, 21
CLOUDX1_CHANNEL_COUNT, 22
cloudx1_GetAudioInputCount, 23
cloudx1_GetAudioOutputCount, 23
cloudx1_GetChannelCount, 23
cloudx1_GetChunkSizeInFrames, 24
cloudx1_GetPossibleChunkSizeInFrames, 24
cloudx1_GetSampleRate, 24
cloudx1_GetVersion, 25
cloudx1_loggerfn, 22
cloudx1_LogSeverity, 22
CLOUDX1_SAMPLE_RATE, 22
cloudx1_SetLoggerCallback, 25
cloudx1_SetLogSeverity, 25
error, 23
fatal, 23
info, 23
none, 23
SOUND4_GetProcessInfo, 27
verbose, 23
verbose2, 23
verbose3, 23
verbose4, 23
verbose5, 23
warning, 23

info
Global setup, 23
sound4, 73
InitProcess
sound4::cloudx1::dyn::CDynLib, 94
InitProcess2
sound4::cloudx1::dyn::CDynLib, 94
InitProcess3
sound4::cloudx1::dyn::CDynLib, 94
InputChannels
sound4::cloudx1, 75
sound4::cloudx1::dyn, 77
InputSampleSize
sound4::cloudx1, 75
sound4::cloudx1::dyn, 78
INVALID_FORMAT
Audio managing (any audio), 44
sound4cl_cdef.h, 245
IsOk
sound4::CInstance, 108
sound4::cloudx1::CInstance, 118
sound4::cloudx1::dyn::CDynLib, 89
sound4::cloudx1::dyn::CInstance, 127
sound4::cloudx1::dyn::helper::CDynLoader, 100
sound4::cloudx1::dyn::helper::DynFuncHolder< T >, 158
sound4::CProcessor, 145
sound4::helper::CDynLoader, 103
sound4::helper::DynFuncHolder< T >, 159
IsReadOnly
MyPresetManager, 162
sound4::cloudx1::CPresetLoader, 134
sound4::cloudx1::dyn::CPresetLoader, 136
sound4::CPresetLoader, 138

JSON syntax, 53
JSON syntax for internal setup, 56

Load

sound4::cloudx1::dyn::CDynLib, 89
sound4::cloudx1::dyn::helper::CDynLoader, 100
sound4::CProcessor, 145
sound4::helper::CDynLoader, 103
log_cb_t
sound4, 72
sound4::cloudx1, 74
sound4::cloudx1::dyn, 77
LogSeverity
sound4, 72
sound4::cloudx1, 74
sound4::cloudx1::dyn, 77

main
sound4.x1.cloud-pipe-cxx.cpp, 175
sound4.x1.cloud-pipe-dyn.cpp, 179
sound4.x1.cloud-pipe.cpp, 185
sound4cl-pipe.cpp, 189
Metadata Management, 37
cloudx1_FreeMetadataInfos, 38
cloudx1_GetMetadataInfos, 38
cloudx1_SetMetadata, 38
cloudx1_SetMetadataMulti, 39
MonoToStereo
sound4::cloudx1::dyn::CDynLib, 94
sound4::CProcessor, 146
MonoToStereo_Planar
sound4::cloudx1::dyn::CDynLib, 94
sound4::CProcessor, 146
MyLogger
sound4.x1.cloud-pipe-cxx.cpp, 176
sound4.x1.cloud-pipe-dyn.cpp, 180
sound4.x1.cloud-pipe.cpp, 185
MyPresetManager, 160
~MyPresetManager, 161
Exists, 161
GetAll, 161
IsReadOnly, 162
MyPresetManager, 161
Read, 162
Remove, 162
Rename, 163
SetupPath, 163
Write, 163

name
SOUND4_ProcessInfo, 172
sound4cl_SOUND4_ProcessInfo, 173
NewClient
sound4::CInstance, 108
sound4::cloudx1::CInstance, 118
sound4::cloudx1::dyn::CDynLib, 94
sound4::cloudx1::dyn::CInstance, 127
NewParameters
sound4::cloudx1::dyn::CDynLib, 94
none
Global setup, 23
sound4, 73

OnUpdateThreadStart
sound4::CInstance, 108
sound4::cloudx1::CInstance, 118
sound4::cloudx1::dyn::CInstance, 127
OnUpdateThreadStop
sound4::CInstance, 108
sound4::cloudx1::CInstance, 118
sound4::cloudx1::dyn::CInstance, 128
operator bool
sound4::cloudx1::dyn::helper::CDynLoader, 100
sound4::cloudx1::dyn::helper::DynFuncHolder< T >, 158
sound4::helper::CDynLoader, 103
sound4::helper::DynFuncHolder< T >, 159
operator T*
sound4::cloudx1::dyn::helper::DynFuncHolder< T >, 158
sound4::helper::DynFuncHolder< T >, 159
operator=
sound4::CInstance, 108
sound4::CInstance::CClient, 83
sound4::cloudx1::CInstance, 118
sound4::cloudx1::CInstance::CClient, 84
sound4::cloudx1::dyn::CInstance, 128
sound4::cloudx1::dyn::CInstance::CClient, 86
sound4::cloudx1::dyn::helper::CDynLoader, 101
sound4::helper::CDynLoader, 103
OutputChannels
sound4::cloudx1, 75
sound4::cloudx1::dyn, 78
OutputSampleSize
sound4::cloudx1, 76
sound4::cloudx1::dyn, 78

prefix
SOUND4_ProcessInfo, 172
sound4cl_SOUND4_ProcessInfo, 173
PresetChange_Kind
sound4, 72
sound4::cloudx1, 75
sound4::cloudx1::dyn, 77
PresetManager_InformChange
sound4::CInstance, 108
sound4::cloudx1::CInstance, 118
sound4::cloudx1::dyn::CDynLib, 95
sound4::cloudx1::dyn::CInstance, 128
Process creation/destruction, 27
cloudx1_ExitProcess, 27
cloudx1_FreeParameters, 28
cloudx1_FreeParameterValue, 28
cloudx1_GetParameter, 28
cloudx1_GetProcessChunkFrames, 28
cloudx1_InitProcess, 29
cloudx1_InitProcess2, 29
cloudx1_InitProcess3, 29
cloudx1_NewParameters, 31
cloudx1_SetParameter, 31
cloudx1_TerminateProcess, 31
ProcessAnyAudio

sound4::CInstance, 109
sound4::cloudx1::CInstance, 119
sound4::cloudx1::dyn::CInstance, 128
ProcessAudio
sound4::CInstance, 109
sound4::cloudx1::CInstance, 119
sound4::cloudx1::dyn::CDynLib, 95
sound4::cloudx1::dyn::CInstance, 129
ProcessAudio_Planar
sound4::CInstance, 109
sound4::cloudx1::CInstance, 119
sound4::cloudx1::dyn::CDynLib, 95
sound4::cloudx1::dyn::CInstance, 129
ProcessJson
sound4::CInstance::CClient, 83
sound4::cloudx1::CInstance::CClient, 84
sound4::cloudx1::dyn::CDynLib, 95
sound4::cloudx1::dyn::CInstance::CClient, 86
ProcessLoop
sound4.x1.cloud-pipe-cxx.cpp, 176
sound4.x1.cloud-pipe-dyn.cpp, 180
sound4.x1.cloud-pipe.cpp, 185
sound4cl-pipe.cpp, 190

Read
MyPresetManager, 162
sound4::cloudx1::CPresetLoader, 134
sound4::cloudx1::dyn::CPresetLoader, 136
sound4::CPresetLoader, 138
Remove
MyPresetManager, 162
sound4::cloudx1::CPresetLoader, 134
sound4::cloudx1::dyn::CPresetLoader, 136
sound4::CPresetLoader, 138
Rename
MyPresetManager, 163
sound4::cloudx1::CPresetLoader, 134
sound4::cloudx1::dyn::CPresetLoader, 136
sound4::CPresetLoader, 138

S16_BE
Audio managing (any audio), 44
sound4cl_cdef.h, 245
S16_LE
Audio managing (any audio), 44
sound4cl_cdef.h, 245
S16_NATIVE
Audio managing (any audio), 44
sound4cl_cdef.h, 245
S24_BE
Audio managing (any audio), 44
sound4cl_cdef.h, 245
S24_LE
Audio managing (any audio), 44
sound4cl_cdef.h, 245
S24_NATIVE
Audio managing (any audio), 44
sound4cl_cdef.h, 245
S32_BE
Audio managing (any audio), 44
sound4cl_cdef.h, 245
S32_LE
Audio managing (any audio), 44
sound4cl_cdef.h, 245
S32_NATIVE
Audio managing (any audio), 44
sound4cl_cdef.h, 245
Sample using C interface, 17
Sample using C++ interface wrapper, 65
Sample using C++ interface wrapper with dynamic library loading, 66
Sample using Generic C++ interface (multi-process compatible), 68
SAMPLE_RATE
sound4.x1.cloud-pipe.cpp, 185
SampleFormat
sound4::cloudx1, 75
sound4::cloudx1::dyn, 77
SampleRate
sound4::cloudx1, 76
sound4::cloudx1::dyn, 78
SaveState
sound4::cloudx1::dyn::CDynLib, 95
SetBus
sound4::CInstance, 110
SetLoggerCallback
sound4::cloudx1::dyn::CDynLib, 95
sound4::CProcessor, 146
SetLogSeverity
sound4::cloudx1::dyn::CDynLib, 95
sound4::CProcessor, 146
SetMetadata
sound4::CInstance, 110
sound4::cloudx1::CInstance, 120
sound4::cloudx1::dyn::CDynLib, 96
sound4::cloudx1::dyn::CInstance, 130
SetMetadataMulti
sound4::CInstance, 111
sound4::cloudx1::CInstance, 120
sound4::cloudx1::dyn::CDynLib, 96
sound4::cloudx1::dyn::CInstance, 130
SetParam
sound4::CInstance, 111
sound4::cloudx1::CInstance, 121
sound4::cloudx1::dyn::CInstance, 130
SetParameter
sound4::cloudx1::dyn::CDynLib, 96
SetPresetManager
sound4::CInstance, 111
sound4::cloudx1::CInstance, 121
sound4::cloudx1::dyn::CDynLib, 96
sound4::cloudx1::dyn::CInstance, 131
SetupPath
MyPresetManager, 163
SetWebServerAppHealth
sound4::CInstance, 112
sound4::cloudx1::CInstance, 121

sound4::cloudx1::dyn::CInstance, 131
shortname
SOUND4_ProcessInfo, 172
sound4cl_SOUND4_ProcessInfo, 173
sound4, 71
error, 72
fatal, 72
info, 73
log_cb_t, 72
LogSeverity, 72
none, 73
PresetChange_Kind, 72
verbose, 73
verbose2, 73
verbose3, 73
verbose4, 73
verbose5, 73
warning, 73
SOUND4 x1.CLOUD Library, 1
sound4.x1.cloud-pipe-cxx.cpp, 175, 177
GetEnv, 175
main, 175
MyLogger, 176
ProcessLoop, 176
Usage, 176
sound4.x1.cloud-pipe-dyn.cpp, 179, 181
GetEnv, 179
main, 179
MyLogger, 180
ProcessLoop, 180
Usage, 180
sound4.x1.cloud-pipe.cpp, 184, 186
CHANNEL_COUNT, 184
CHUNK_SIZE, 184
main, 185
MyLogger, 185
ProcessLoop, 185
SAMPLE_RATE, 185
Usage, 185
sound4.x1.cloud.h, 194, 197
CLOUDX1_DECL, 196
CLOUDX1_HAS_CLOUDBUS, 196
CLOUDX1_HAS_WEBSERVER, 197
sound4.x1.cloud.hpp, 201, 203
fs_strdup, 202
sound4.x1.cloud_dyn.hpp, 210, 212
fs_strdup, 212
UNIXLIKE, 212
sound4::CBus, 81
~CBus, 81
CBus, 81
Get, 82
sound4::CInstance, 103
~CInstance, 105
AddAudio, 105
CInstance, 105
Create, 105
GetAudio, 106
GetBufferIn, 106
GetBufferOut, 106
GetChunkFrames, 106
GetEstimatedDelay, 107
GetMetadataInfos, 107
GetParam, 107
GetWebServerAppHealth, 107
IsOk, 108
NewClient, 108
OnUpdateThreadStart, 108
OnUpdateThreadStop, 108
operator=, 108
PresetManager_InformChange, 108
ProcessAnyAudio, 109
ProcessAudio, 109
ProcessAudio_Planar, 109
SetBus, 110
SetMetadata, 110
SetMetadataMulti, 111
SetParam, 111
SetPresetManager, 111
SetWebServerAppHealth, 112
StartWebServer, 112
Stop, 112
StopWebServer, 112
Terminate, 113
sound4::CInstance::CClient, 82
~CClient, 83
CClient, 82
operator=, 83
ProcessJson, 83
sound4::cloudx1, 74
ChunkFrames, 75
InputChannels, 75
InputSampleSize, 75
log_cb_t, 74
LogSeverity, 74
OutputChannels, 75
OutputSampleSize, 76
PresetChange_Kind, 75
SampleFormat, 75
SampleRate, 76
sound4::cloudx1::CInstance, 113
~CInstance, 115
AddAudio, 115
CInstance, 115
Create, 115
GetAudio, 116
GetBufferIn, 116
GetBufferOut, 116
GetChunkFrames, 116
GetEstimatedDelay, 117
GetMetadataInfos, 117
GetParam, 117
GetWebServerAppHealth, 117
IsOk, 118
NewClient, 118
OnUpdateThreadStart, 118

OnUpdateThreadStop, 118
operator=, 118
PresetManager_InformChange, 118
ProcessAnyAudio, 119
ProcessAudio, 119
ProcessAudio_Planar, 119
SetMetadata, 120
SetMetadataMulti, 120
SetParam, 121
SetPresetManager, 121
SetWebServerAppHealth, 121
StartWebServer, 122
Stop, 122
StopWebServer, 122
Terminate, 122
sound4::cloudx1::CInstance::CClient, 84
~CClient, 84
CClient, 84
operator=, 84
ProcessJson, 84
sound4::cloudx1::CPresetLoader, 133
~CPresetLoader, 134
CPresetLoader, 134
Exists, 134
GetAll, 134
IsReadOnly, 134
Read, 134
Remove, 134
Rename, 134
Write, 135
sound4::cloudx1::dyn, 76
ChunkFrames, 77
InputChannels, 77
InputSampleSize, 78
log_cb_t, 77
LogSeverity, 77
OutputChannels, 78
OutputSampleSize, 78
PresetChange_Kind, 77
SampleFormat, 77
SampleRate, 78
sound4::cloudx1::dyn::CDynLib, 87
AddAudio, 89
AddPadAudio, 89
AudioConvertFrom, 89
AudioConvertTo, 90
AudioMonoFromLiveStereo, 90
AudioMonoToLiveStereo, 90
CDynLib, 88
DeleteClient, 90
ExitProcess, 90
FreeJsonAnswer, 90
FreeMetadataInfos, 90
FreeParameters, 91
FreeParameterValue, 91
GetAudio, 91
GetAudioInputCount, 91
GetAudioOutputCount, 91
GetBufferIn, 91
GetBufferOut, 91
GetBytesFromFormat, 92
GetChannelCount, 92
GetChunkSizeInFrames, 92
GetEstimatedDelay, 92
GetFormatFromName, 92
GetFormatName, 92
GetMaxPacketFrame, 92
GetMetadataInfos, 93
GetOutputCount, 93
GetParameter, 93
GetPossibleChunkSizeInFrames, 93
GetProcessChunkFrames, 93
GetSampleRate, 93
GetVersion, 93
InitProcess, 94
InitProcess2, 94
InitProcess3, 94
IsOk, 89
Load, 89
MonoToStereo, 94
MonoToStereo_Planar, 94
NewClient, 94
NewParameters, 94
PresetManager_InformChange, 95
ProcessAudio, 95
ProcessAudio_Planar, 95
ProcessJson, 95
SaveState, 95
SetLoggerCallback, 95
SetLogSeverity, 95
SetMetadata, 96
SetMetadataMulti, 96
SetParameter, 96
SetPresetManager, 96
StartUpdateThread, 96
StereoToMono, 96
StereoToMono_Planar, 96
StopUpdateThread, 97
TerminateProcess, 97
WaitUpdateThreadReady, 97
Webserver, 97
Webserver_FreeString, 97
Webserver_GetAppHealth, 97
Webserver_SetAppHealth, 97
Webserver_Status, 98
Webserver_Stop, 98
Webserver_tcp, 98
Webserver_tcp2, 98
sound4::cloudx1::dyn::CInstance, 123
~CInstance, 124
AddAudio, 124
CInstance, 124
Create, 124
GetAudio, 125
GetBufferIn, 125
GetBufferOut, 125

GetChunkFrames, 126
GetEstimatedDelay, 126
GetMetadataInfos, 126
GetParam, 126
GetWebServerAppHealth, 127
IsOk, 127
NewClient, 127
OnUpdateThreadStart, 127
OnUpdateThreadStop, 128
operator=, 128
PresetManager_InformChange, 128
ProcessAnyAudio, 128
ProcessAudio, 129
ProcessAudio_Planar, 129
SetMetadata, 130
SetMetadataMulti, 130
SetParam, 130
SetPresetManager, 131
SetWebServerAppHealth, 131
StartWebServer, 131
Stop, 131
StopWebServer, 132
Terminate, 132
sound4::cloudx1::dyn::CInstance::CClient, 85
~CClient, 86
CClient, 86
operator=, 86
ProcessJson, 86
sound4::cloudx1::dyn::CPresetLoader, 135
~CPresetLoader, 136
CPresetLoader, 136
Exists, 136
GetAll, 136
IsReadOnly, 136
Read, 136
Remove, 136
Rename, 136
Write, 137
sound4::cloudx1::dyn::helper, 78
DynFunc_t, 79
DynLib_t, 79
sound4::cloudx1::dyn::helper::CDynLoader, 98
~CDynLoader, 99
CDynLoader, 99
Close, 100
GetSymbol, 100
GetSymbol_safe, 100
GetThisLibraryPath, 100
IsOk, 100
Load, 100
operator bool, 100
operator=, 101
sound4::cloudx1::dyn::helper::DynFuncHolder< T >, 157
DynFuncHolder, 157
IsOk, 158
operator bool, 158
operator T*, 158
sound4::cloudx1::dyn::helper::SampleFormat< float >, 166
format, 167
sound4::cloudx1::dyn::helper::SampleFormat< int16_t >, 168
format, 168
sound4::cloudx1::dyn::helper::SampleFormat< int32_t >, 170
format, 170
sound4::cloudx1::dyn::helper::SampleFormat< T >, 164
sound4::cloudx1::helper, 79
sound4::cloudx1::helper::SampleFormat< float >, 167
format, 167
sound4::cloudx1::helper::SampleFormat< int16_t >, 169
format, 169
sound4::cloudx1::helper::SampleFormat< int32_t >, 170
format, 171
sound4::cloudx1::helper::SampleFormat< T >, 164
sound4::CPresetLoader, 137
~CPresetLoader, 138
CPresetLoader, 138
Exists, 138
GetAll, 138
IsReadOnly, 138
Read, 138
Remove, 138
Rename, 138
Write, 139
sound4::CProcessor, 139
AudioConvertFrom, 141
AudioConvertTo, 141
AudioMonoFromLiveStereo, 142
AudioMonoToLiveStereo, 142
CBus, 147
CInstance, 147
CProcessor, 141
fnAddAudio, 147
fnAddPadAudio, 147
fnAudioConvertFrom, 147
fnAudioConvertTo, 148
fnAudioMonoFromLiveStereo, 148
fnAudioMonoToLiveStereo, 148
fnDeleteClient, 148
fnExitProcess, 148
fnFreeBus, 148
fnFreeJsonAnswer, 148
fnFreeMetadataInfos, 149
fnFreeParameters, 149
fnFreeParameterValue, 149
fnGetAudio, 149
fnGetAudioInputCount, 149
fnGetAudioOutputCount, 149
fnGetBufferIn, 149
fnGetBufferOut, 150
fnGetBytesFromFormat, 150

fnGetChannelCount, 150
fnGetChunkSizeInFrames, 150
fnGetEstimatedDelay, 150
fnGetFormatFromName, 150
fnGetFormatName, 150
fnGetMaxPacketFrame, 151
fnGetMetadataInfos, 151
fnGetOutputCount, 151
fnGetParameter, 151
fnGetPossibleChunkSizeInFrames, 151
fnGetProcessChunkFrames, 151
fnGetSampleRate, 151
fnGetVersion, 152
fnInitProcess, 152
fnInitProcess2, 152
fnInitProcess3, 152
fnMonoToStereo, 152
fnMonoToStereo_Planar, 152
fnNewBus, 152
fnNewClient, 153
fnNewParameters, 153
fnPresetManager_InformChange, 153
fnProcessAudio, 153
fnProcessAudio_Planar, 153
fnProcessJson, 153
fnSaveState, 153
fnSetInstanceBus, 154
fnSetLoggerCallback, 154
fnSetLogSeverity, 154
fnSetMetadata, 154
fnSetMetadataMulti, 154
fnSetParameter, 154
fnSetPresetManager, 154
fnStartUpdateThread, 155
fnStereoToMono, 155
fnStereoToMono_Planar, 155
fnStopUpdateThread, 155
fnTerminateProcess, 155
fnWaitUpdateThreadReady, 155
fnWebserver, 155
fnWebserver_FreeString, 156
fnWebserver_GetAppHealth, 156
fnWebserver_SetAppHealth, 156
fnWebserver_Status, 156
fnWebserver_Stop, 156
fnWebserver_tcp, 156
fnWebserver_tcp2, 156
GetAudioInputCount, 142
GetAudioOutputCount, 142
GetBytesFromFormat, 142
GetChannelCount, 143
GetChunkSizeInFrames, 143
GetFormatFromName, 143
GetFormatName, 144
GetPossibleChunkSizeInFrames, 144
GetPrefixSymbol, 144
GetSampleRate, 145
GetVersion, 145
IsOk, 145
Load, 145
MonoToStereo, 146
MonoToStereo_Planar, 146
SetLoggerCallback, 146
SetLogSeverity, 146
StereoToMono, 146
StereoToMono_Planar, 147
sound4::helper, 79
DynFunc_t, 80
DynLib_t, 80
sound4::helper::CDynLoader, 101
~CDynLoader, 102
CDynLoader, 102
Close, 102
GetSymbol, 102
GetSymbol_safe, 102
GetThisLibraryPath, 102
IsOk, 103
Load, 103
operator bool, 103
operator=, 103
sound4::helper::DynFuncHolder< T >, 158
DynFuncHolder, 159
IsOk, 159
operator bool, 159
operator T*, 159
sound4::helper::SampleFormat< float >, 167
format, 168
sound4::helper::SampleFormat< int16_t >, 169
format, 169
sound4::helper::SampleFormat< int32_t >, 171
format, 171
sound4::helper::SampleFormat< T >, 166
SOUND4_GetProcessInfo
Global setup, 27
SOUND4_INVALID_WEBSERVER_ID
sound4cl_cdef.h, 242
Web server, 60
SOUND4_ProcessInfo, 171
name, 172
prefix, 172
shortname, 172
struct_size, 172
version, 172
SOUND4_WEBSERVER_HTTP_OK
sound4cl_cdef.h, 243
Web server, 60
SOUND4_WEBSERVER_HTTPS_OK
sound4cl_cdef.h, 243
Web server, 61
sound4cl-pipe.cpp, 189, 191
GetEnv, 189
main, 189
ProcessLoop, 190
sound4cl.hpp, 225, 227
UNIXLIKE, 227
sound4cl_AddAudio

sound4cl_cdef.h, 246
sound4cl_AddPadAudio
sound4cl_cdef.h, 246
sound4cl_AudioConvertFrom
sound4cl_cdef.h, 246
sound4cl_AudioConvertTo
sound4cl_cdef.h, 246
sound4cl_AudioMonoFromLiveStereo
sound4cl_cdef.h, 246
sound4cl_AudioMonoToLiveStereo
sound4cl_cdef.h, 246
sound4cl_cdef.h, 240, 255
change_kind_created, 245
change_kind_deleted, 245
change_kind_modified, 245
F32_BE, 245
F32_LE, 245
F32_NATIVE, 245
fs_char, 243
fs_strdup, 242
INVALID_FORMAT, 245
S16_BE, 245
S16_LE, 245
S16_NATIVE, 245
S24_BE, 245
S24_LE, 245
S24_NATIVE, 245
S32_BE, 245
S32_LE, 245
S32_NATIVE, 245
SOUND4_INVALID_WEBSERVER_ID, 242
SOUND4_WEBSERVER_HTTP_OK, 243
SOUND4_WEBSERVER_HTTPS_OK, 243
sound4cl_AddAudio, 246
sound4cl_AddPadAudio, 246
sound4cl_AudioConvertFrom, 246
sound4cl_AudioConvertTo, 246
sound4cl_AudioMonoFromLiveStereo, 246
sound4cl_AudioMonoToLiveStereo, 246
sound4cl_DeleteClient, 246
sound4cl_error, 245
sound4cl_ExitProcess, 247
sound4cl_fatal, 245
sound4cl_FreeBus, 247
sound4cl_FreeJsonAnswer, 247
sound4cl_FreeMetadataInfos, 247
sound4cl_FreeParameters, 247
sound4cl_FreeParameterValue, 247
sound4cl_GetAudio, 247
sound4cl_GetAudioInputCount, 247
sound4cl_GetAudioOutputCount, 248
sound4cl_GetBufferIn, 248
sound4cl_GetBufferOut, 248
sound4cl_GetBytesFromFormat, 248
sound4cl_GetChannelCount, 248
sound4cl_GetChunkSizeInFrames, 248
sound4cl_GetEstimatedDelay, 248
sound4cl_GetFormatFromName, 248
sound4cl_GetFormatName, 248
sound4cl_GetMaxPacketFrame, 249
sound4cl_GetMetadataInfos, 249
sound4cl_GetOutputCount, 249
sound4cl_GetParameter, 249
sound4cl_GetPossibleChunkSizeInFrames, 249
sound4cl_GetProcessChunkFrames, 249
sound4cl_GetSampleRate, 249
sound4cl_GetVersion, 249
sound4cl_info, 245
sound4cl_InitProcess, 249
sound4cl_InitProcess2, 250
sound4cl_InitProcess3, 250
sound4cl_loggerfn, 243
sound4cl_LogSeverity, 244
sound4cl_MonoToStereo, 250
sound4cl_MonoToStereo_Planar, 250
sound4cl_NewBus, 250
sound4cl_NewClient, 250
sound4cl_NewParameters, 251
sound4cl_none, 245
sound4cl_PresetChange_Kind, 245
sound4cl_PresetManager_InformChange, 251
sound4cl_ProcessAudio, 251
sound4cl_ProcessAudio_Planar, 251
sound4cl_ProcessJson, 251
sound4cl_SampleFormat, 245
sound4cl_SaveState, 251
sound4cl_SetInstanceBus, 251
sound4cl_SetLoggerCallback, 251
sound4cl_SetLogSeverity, 252
sound4cl_SetMetadata, 252
sound4cl_SetMetadataMulti, 252
sound4cl_SetParameter, 252
sound4cl_SetPresetManager, 252
sound4cl_SOUND4_GetProcessInfo, 252
sound4cl_StartUpdateThread, 252
sound4cl_StereoToMono, 253
sound4cl_StereoToMono_Planar, 253
sound4cl_StopUpdateThread, 253
sound4cl_storage_exists, 243
sound4cl_storage_getall, 243
sound4cl_storage_getall_free, 243
sound4cl_storage_reader, 244
sound4cl_storage_reader_free, 244
sound4cl_storage_remove, 244
sound4cl_storage_rename, 244
sound4cl_storage_writer, 244
sound4cl_TerminateProcess, 253
sound4cl_verbose, 245
sound4cl_verbose2, 245
sound4cl_verbose3, 245
sound4cl_verbose4, 245
sound4cl_verbose5, 245
sound4cl_WaitUpdateThreadReady, 253
sound4cl_warning, 245
sound4cl_Webserver, 253
sound4cl_Webserver_FreeString, 253

sound4cl_Webserver_GetAppHealth, 254
sound4cl_Webserver_SetAppHealth, 254
sound4cl_Webserver_Status, 254
sound4cl_Webserver_Stop, 254
sound4cl_Webserver_tcp, 254
sound4cl_Webserver_tcp2, 254
sound4cl_DeleteClient
sound4cl_cdef.h, 246
sound4cl_error
sound4cl_cdef.h, 245
sound4cl_ExitProcess
sound4cl_cdef.h, 247
sound4cl_fatal
sound4cl_cdef.h, 245
sound4cl_FreeBus
sound4cl_cdef.h, 247
sound4cl_FreeJsonAnswer
sound4cl_cdef.h, 247
sound4cl_FreeMetadataInfos
sound4cl_cdef.h, 247
sound4cl_FreeParameters
sound4cl_cdef.h, 247
sound4cl_FreeParameterValue
sound4cl_cdef.h, 247
sound4cl_GetAudio
sound4cl_cdef.h, 247
sound4cl_GetAudioInputCount
sound4cl_cdef.h, 247
sound4cl_GetAudioOutputCount
sound4cl_cdef.h, 248
sound4cl_GetBufferIn
sound4cl_cdef.h, 248
sound4cl_GetBufferOut
sound4cl_cdef.h, 248
sound4cl_GetBytesFromFormat
sound4cl_cdef.h, 248
sound4cl_GetChannelCount
sound4cl_cdef.h, 248
sound4cl_GetChunkSizeInFrames
sound4cl_cdef.h, 248
sound4cl_GetEstimatedDelay
sound4cl_cdef.h, 248
sound4cl_GetFormatFromName
sound4cl_cdef.h, 248
sound4cl_GetFormatName
sound4cl_cdef.h, 248
sound4cl_GetMaxPacketFrame
sound4cl_cdef.h, 249
sound4cl_GetMetadataInfos
sound4cl_cdef.h, 249
sound4cl_GetOutputCount
sound4cl_cdef.h, 249
sound4cl_GetParameter
sound4cl_cdef.h, 249
sound4cl_GetPossibleChunkSizeInFrames
sound4cl_cdef.h, 249
sound4cl_GetProcessChunkFrames
sound4cl_cdef.h, 249
sound4cl_GetSampleRate
sound4cl_cdef.h, 249
sound4cl_GetVersion
sound4cl_cdef.h, 249
sound4cl_info
sound4cl_cdef.h, 245
sound4cl_InitProcess
sound4cl_cdef.h, 249
sound4cl_InitProcess2
sound4cl_cdef.h, 250
sound4cl_InitProcess3
sound4cl_cdef.h, 250
sound4cl_loggerfn
sound4cl_cdef.h, 243
sound4cl_LogSeverity
sound4cl_cdef.h, 244
sound4cl_MonoToStereo
sound4cl_cdef.h, 250
sound4cl_MonoToStereo_Planar
sound4cl_cdef.h, 250
sound4cl_NewBus
sound4cl_cdef.h, 250
sound4cl_NewClient
sound4cl_cdef.h, 250
sound4cl_NewParameters
sound4cl_cdef.h, 251
sound4cl_none
sound4cl_cdef.h, 245
sound4cl_PresetChange_Kind
sound4cl_cdef.h, 245
sound4cl_PresetManager_InformChange
sound4cl_cdef.h, 251
sound4cl_ProcessAudio
sound4cl_cdef.h, 251
sound4cl_ProcessAudio_Planar
sound4cl_cdef.h, 251
sound4cl_ProcessJson
sound4cl_cdef.h, 251
sound4cl_SampleFormat
sound4cl_cdef.h, 245
sound4cl_SaveState
sound4cl_cdef.h, 251
sound4cl_SetInstanceBus
sound4cl_cdef.h, 251
sound4cl_SetLoggerCallback
sound4cl_cdef.h, 251
sound4cl_SetLogSeverity
sound4cl_cdef.h, 252
sound4cl_SetMetadata
sound4cl_cdef.h, 252
sound4cl_SetMetadataMulti
sound4cl_cdef.h, 252
sound4cl_SetParameter
sound4cl_cdef.h, 252
sound4cl_SetPresetManager
sound4cl_cdef.h, 252
sound4cl_SOUND4_GetProcessInfo
sound4cl_cdef.h, 252

sound4cl_SOUND4_ProcessInfo, 173
name, 173
prefix, 173
shortname, 173
struct_size, 174
version, 174
sound4cl_StartUpdateThread
sound4cl_cdef.h, 252
sound4cl_StereoToMono
sound4cl_cdef.h, 253
sound4cl_StereoToMono_Planar
sound4cl_cdef.h, 253
sound4cl_StopUpdateThread
sound4cl_cdef.h, 253
sound4cl_storage_exists
sound4cl_cdef.h, 243
sound4cl_storage_getall
sound4cl_cdef.h, 243
sound4cl_storage_getall_free
sound4cl_cdef.h, 243
sound4cl_storage_reader
sound4cl_cdef.h, 244
sound4cl_storage_reader_free
sound4cl_cdef.h, 244
sound4cl_storage_remove
sound4cl_cdef.h, 244
sound4cl_storage_rename
sound4cl_cdef.h, 244
sound4cl_storage_writer
sound4cl_cdef.h, 244
sound4cl_TerminateProcess
sound4cl_cdef.h, 253
sound4cl_verbose
sound4cl_cdef.h, 245
sound4cl_verbose2
sound4cl_cdef.h, 245
sound4cl_verbose3
sound4cl_cdef.h, 245
sound4cl_verbose4
sound4cl_cdef.h, 245
sound4cl_verbose5
sound4cl_cdef.h, 245
sound4cl_WaitUpdateThreadReady
sound4cl_cdef.h, 253
sound4cl_warning
sound4cl_cdef.h, 245
sound4cl_Webserver
sound4cl_cdef.h, 253
sound4cl_Webserver_FreeString
sound4cl_cdef.h, 253
sound4cl_Webserver_GetAppHealth
sound4cl_cdef.h, 254
sound4cl_Webserver_SetAppHealth
sound4cl_cdef.h, 254
sound4cl_Webserver_Status
sound4cl_cdef.h, 254
sound4cl_Webserver_Stop
sound4cl_cdef.h, 254
sound4cl_Webserver_tcp
sound4cl_cdef.h, 254
sound4cl_Webserver_tcp2
sound4cl_cdef.h, 254
StartUpdateThread
sound4::cloudx1::dyn::CDynLib, 96
StartWebServer
sound4::CInstance, 112
sound4::cloudx1::CInstance, 122
sound4::cloudx1::dyn::CInstance, 131
std, 80
StereoToMono
sound4::cloudx1::dyn::CDynLib, 96
sound4::CProcessor, 146
StereoToMono_Planar
sound4::cloudx1::dyn::CDynLib, 96
sound4::CProcessor, 147
Stop
sound4::CInstance, 112
sound4::cloudx1::CInstance, 122
sound4::cloudx1::dyn::CInstance, 131
StopUpdateThread
sound4::cloudx1::dyn::CDynLib, 97
StopWebServer
sound4::CInstance, 112
sound4::cloudx1::CInstance, 122
sound4::cloudx1::dyn::CInstance, 132
struct_size
SOUND4_ProcessInfo, 172
sound4cl_SOUND4_ProcessInfo, 174

Terminate
sound4::CInstance, 113
sound4::cloudx1::CInstance, 122
sound4::cloudx1::dyn::CInstance, 132
TerminateProcess
sound4::cloudx1::dyn::CDynLib, 97

UNIXLIKE
sound4.x1.cloud_dyn.hpp, 212
sound4cl.hpp, 227
Update Management, 39
cloudx1_StartUpdateThread, 40
cloudx1_StopUpdateThread, 40
cloudx1_WaitUpdateThreadReady, 40
Usage
sound4.x1.cloud-pipe-cxx.cpp, 176
sound4.x1.cloud-pipe-dyn.cpp, 180
sound4.x1.cloud-pipe.cpp, 185

verbose
Global setup, 23
sound4, 73
verbose2
Global setup, 23
sound4, 73
verbose3
Global setup, 23
sound4, 73

verbose4
Global setup, 23
sound4, 73
verbose5
Global setup, 23
sound4, 73
version
SOUND4_ProcessInfo, 172
sound4cl_SOUND4_ProcessInfo, 174

WaitUpdateThreadReady
sound4::cloudx1::dyn::CDynLib, 97
warning
Global setup, 23
sound4, 73
Web server, 60
cloudx1_Webserver, 61
cloudx1_Webserver_FreeString, 61
cloudx1_Webserver_GetAppHealth, 62
cloudx1_Webserver_SetAppHealth, 62
cloudx1_Webserver_Status, 62
cloudx1_Webserver_Stop, 63
cloudx1_Webserver_tcp, 63
cloudx1_Webserver_tcp2, 64
SOUND4_INVALID_WEBSERVER_ID, 60
SOUND4_WEBSERVER_HTTP_OK, 60
SOUND4_WEBSERVER_HTTPS_OK, 61
Webserver
sound4::cloudx1::dyn::CDynLib, 97
Webserver_FreeString
sound4::cloudx1::dyn::CDynLib, 97
Webserver_GetAppHealth
sound4::cloudx1::dyn::CDynLib, 97
Webserver_SetAppHealth
sound4::cloudx1::dyn::CDynLib, 97
Webserver_Status
sound4::cloudx1::dyn::CDynLib, 98
Webserver_Stop
sound4::cloudx1::dyn::CDynLib, 98
Webserver_tcp
sound4::cloudx1::dyn::CDynLib, 98
Webserver_tcp2
sound4::cloudx1::dyn::CDynLib, 98
Write
MyPresetManager, 163
sound4::cloudx1::CPresetLoader, 135
sound4::cloudx1::dyn::CPresetLoader, 137
sound4::CPresetLoader, 139